

Raymarine®



MICRO-TALK WIRELESS GATEWAY

Installation instructions

English (en-US)

Date: 02-2022

Document number: 87265 (Rev 4)

© 2022 Raymarine UK Limited

Trademark and patents notice

Raymarine, Tacktick, Clear Pulse, Truzoom, SeaTalk, SeaTalk^{hs}, SeaTalkng, and **Micronet**, are registered or claimed trademarks of Raymarine Belgium.

FLIR, YachtSense, DockSense, LightHouse, RangeFusion, DownVision, SideVision, RealVision, HyperVision, Dragonfly, Element, Quantum, Axiom, InstaAlert, Infrared Everywhere, The World's Sixth Sense and **ClearCruise** are registered or claimed trademarks of FLIR Systems, Inc.

All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.

This product is protected by patents, design patents, patents pending, or design patents pending.

Fair Use Statement

You may print no more than three copies of this manual for your own use. You may not make any further copies or distribute or use the manual in any other way including without limitation exploiting the manual commercially or giving or selling copies to third parties.

Software updates



Check the Raymarine website for the latest software releases for your product.
www.raymarine.com/software

Product documentation



The latest versions of all English and translated documents are available to download in PDF format from the website: www.raymarine.com/manuals.
Please check the website to ensure you have the latest documentation.

WARNING — Export Controlled Information (ECI)

Important:

This document contains technology subject to the (US) Export Administration Regulations (EAR) (15. C.F.R. Sections 730-744).

Publication copyright

Copyright ©2022 Raymarine UK Ltd. All rights reserved. No parts of this material may be copied, translated, or transmitted (in any medium) without the prior written permission of Raymarine UK Ltd.

Contents

| | |
|---|-----------|
| Chapter 1 Important information | 9 |
| Water ingress | 9 |
| Disclaimer | 10 |
| Suppression ferrites | 10 |
| Connections to other equipment..... | 10 |
| Declaration of conformity..... | 10 |
| Product disposal | 10 |
| Warranty registration..... | 10 |
| IMO and SOLAS | 11 |
| Technical accuracy..... | 11 |
| Chapter 2 Document information | 13 |
| 2.1 Document information..... | 14 |
| 2.2 Applicable products..... | 14 |
| 2.3 Special bundle and promotional products..... | 14 |
| 2.4 Related system packs..... | 15 |
| 2.5 Product documentation..... | 16 |
| 2.6 Document illustrations..... | 16 |
| 2.7 Operation instructions | 16 |
| Chapter 3 Product and system overview..... | 17 |
| 3.1 Product overview | 18 |
| 3.2 Multiple data sources (MDS) | 19 |
| 3.3 SeaTalkng® | 19 |
| 3.4 Micronet..... | 19 |
| 3.5 Networking restrictions | 19 |
| 3.6 Software updates | 19 |
| 3.7 Installing software updates | 20 |
| Chapter 4 Parts supplied..... | 21 |
| 4.1 Parts supplied | 22 |
| Chapter 5 Product dimensions..... | 23 |
| 5.1 Product dimensions | 24 |
| Chapter 6 Location requirements | 25 |
| 6.1 Selecting a location..... | 26 |
| Micronet device location requirements | 26 |
| Wireless location requirements for optimum performance..... | 27 |
| Compass safe distance..... | 28 |
| EMC installation guidelines..... | 28 |
| Chapter 7 Installation..... | 29 |
| 7.1 Installation checklist..... | 30 |
| Schematic diagram | 30 |

| | |
|--|-----------|
| 7.2 Tools required for installation | 30 |
| 7.3 Warnings and cautions | 31 |
| 7.4 Surface mounting | 31 |
| 7.5 Pole or rail mounting..... | 32 |
| 7.6 Surface mounting using the Deck mounting kit | 33 |
| 7.7 Bracket mounting using the Deck mounting kit..... | 34 |
| 7.8 Surface mounting using the Riser | 36 |
| 7.9 Releasing the unit from the bracket..... | 39 |
| Chapter 8 Cables and connections..... | 41 |
| 8.1 General cabling guidance | 42 |
| Cable types and length..... | 42 |
| Cable routing | 42 |
| Strain relief..... | 42 |
| Cable shielding..... | 42 |
| 8.2 Connections overview..... | 43 |
| Connecting SeaTalkng® cables | 43 |
| SeaTalkng® product loading..... | 43 |
| 8.3 SeaTalkng® power supply..... | 43 |
| SeaTalkng® power connection point..... | 44 |
| In-line fuse and thermal breaker ratings..... | 44 |
| SeaTalkng® system loading..... | 45 |
| Power distribution — SeaTalkng®..... | 45 |
| Sharing a breaker | 48 |
| 8.4 Network examples | 50 |
| Chapter 9 System operation and setup | 53 |
| 9.1 Transducer calibration..... | 54 |
| 9.2 Autonetworking..... | 54 |
| Autonetworking — compatible Micronet displays | 54 |
| Performing Autonetworking..... | 55 |
| 9.3 Powering the unit on and off | 57 |
| 9.4 Data damping | 57 |
| Chapter 10 Troubleshooting | 59 |
| 10.1 Troubleshooting..... | 60 |
| 10.2 LED Diagnostics..... | 61 |
| Chapter 11 Maintenance | 63 |
| 11.1 Service and maintenance | 64 |
| 11.2 Routine equipment checks..... | 64 |
| 11.3 Product cleaning | 64 |
| Chapter 12 Technical support..... | 65 |
| 12.1 Raymarine product support and servicing..... | 66 |

| | |
|--|-----------|
| Viewing product information | 67 |
| 12.2 Learning resources..... | 67 |
| Chapter 13 Technical specification | 69 |
| 13.1 Technical specification..... | 70 |
| Chapter 14 Spares and accessories..... | 71 |
| 14.1 Accessories | 72 |
| 14.2 SeaTalkng [®] cabling components..... | 72 |
| 14.3 SeaTalkng [®] cables and accessories | 72 |
| Appendix A NMEA 2000 PGN support | 79 |

Chapter 1: Important information



Warning: Product installation and operation

- This product must be installed and operated in accordance with the instructions provided. Failure to do so could result in personal injury, damage to your vessel and/or poor product performance.
- Raymarine highly recommends certified installation by a Raymarine approved installer. A certified installation qualifies for enhanced product warranty benefits. Register your warranty on the Raymarine website: www.raymarine.com/warranty



Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).



Warning: Switch off power supply

Ensure the vessel's power supply is switched OFF before starting to install this product. Do NOT connect or disconnect equipment with the power switched on, unless instructed in this document.



Warning: Power supply voltage

Connecting this product to a voltage supply greater than the specified maximum rating may cause permanent damage to the unit. Refer to the product's information label for the correct voltage.

Caution: Power supply protection

When installing this product ensure the power source is adequately protected by means of a suitably-rated fuse or thermal circuit breaker.

Caution: Product cleaning

When cleaning products:

- Switch off power supply.
- Use a clean damp cloth to wipe clean.
- Do NOT use: abrasive, acidic, ammonia, solvent or other chemical based cleaning products.
- Do NOT use a jet wash.

Caution: Service and maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized Raymarine dealers. Unauthorized repair may affect your warranty.

Water ingress

Water ingress disclaimer

Although the waterproof rating capacity of this product meets the stated water ingress protection standard (refer to the product's *Technical Specification*), water intrusion and subsequent equipment failure may occur if the product is subjected to high-pressure washing. Raymarine will not warrant products subjected to high-pressure washing.

Disclaimer

Raymarine does not warrant that this product is error-free or that it is compatible with products manufactured by any person or entity other than Raymarine.

Raymarine is not responsible for damages or injuries caused by your use or inability to use the product, by the interaction of the product with products manufactured by others, or by errors in information utilized by the product supplied by third parties.

Suppression ferrites

- Raymarine cables may be pre-fitted or supplied with suppression ferrites. These are important for correct EMC performance. If ferrites are supplied separately to the cables (i.e. not pre-fitted), you must fit the supplied ferrites, using the supplied instructions.
- If a ferrite has to be removed for any purpose (e.g. installation or maintenance), it must be replaced in the original position before the product is used.
- Use only ferrites of the correct type, supplied by Raymarine or its authorized dealers.
- Where an installation requires multiple ferrites to be added to a cable, additional cable clips should be used to prevent stress on the connectors due to the extra weight of the cable.

Connections to other equipment

Requirement for ferrites on non-Raymarine cables

If your Raymarine equipment is to be connected to other equipment using a cable not supplied by Raymarine, a suppression ferrite **MUST** always be attached to the cable near the Raymarine unit.

Declaration of conformity


FLIR Belgium BVBA declares that this product is compliant with the essential requirements of EMC Directive 2014/30/EU.

The original Declaration of Conformity certificate may be viewed on the relevant product page at www.raymarine.com/manuals.

Product disposal

Dispose of this product in accordance with the WEEE Directive.

The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment which contains materials, components and substances that may be hazardous and present a risk to human health and the environment when WEEE is not handled correctly.

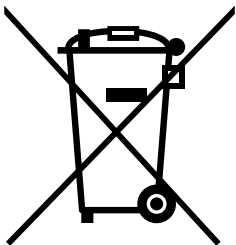

Equipment marked with the crossed-out wheeled bin symbol indicates that the equipment should not be disposed of in unsorted household waste.

Local authorities in many regions have established collection schemes under which residents can dispose of waste electrical and electronic equipment at a recycling center or other collection point.

For more information about suitable collection points for waste electrical and electronic equipment in your region, refer to the Raymarine website:

www.raymarine.eu/recycling.



Warranty registration

To register your Raymarine product ownership, please visit www.raymarine.com and register online.

It is important that you register your product to receive full warranty benefits. Your unit package includes a bar code label indicating the serial number of the unit. You will need this serial number when registering your product online. You should retain the label for future reference.

IMO and SOLAS

The equipment described within this document is intended for use on leisure marine boats and workboats NOT covered by International Maritime Organization (IMO) and Safety of Life at Sea (SOLAS) Carriage Regulations.

Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, Raymarine cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice. As a result, Raymarine cannot accept liability for any differences between the product and this document. Please check the Raymarine website (www.raymarine.com) to ensure you have the most up-to-date version(s) of the documentation for your product.

Chapter 2: Document information

Chapter contents

- [2.1 Document information on page 14](#)
- [2.2 Applicable products on page 14](#)
- [2.3 Special bundle and promotional products on page 14](#)
- [2.4 Related system packs on page 15](#)
- [2.5 Product documentation on page 16](#)
- [2.6 Document illustrations on page 16](#)
- [2.7 Operation instructions on page 16](#)

2.1 Document information

This document contains important information related to the installation of your Raymarine product.


The document includes information to help you:

- plan your installation and ensure you have all the necessary equipment;
- install and connect your product as part of a wider system of connected marine electronics;
- troubleshoot problems and obtain technical support if required.

This and other Raymarine product documents are available to download in PDF format from www.raymarine.com/manuals.

2.2 Applicable products

This document is applicable to the following products:
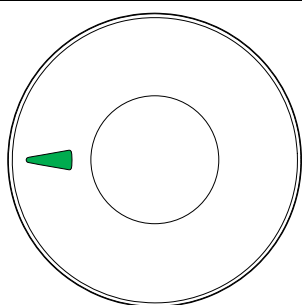
| | Part number | Name | Description |
|--|-------------|------------|---|
|  | E70361 | Micro-Talk | Micronet (Wireless) to SeaTalkng® gateway |

2.3 Special bundle and promotional products

From time to time, Raymarine may supply certain products as special “bundle”, “package”, or “promotional” variants.

These bundles typically include additional accessories such as cables, and usually have a Txxxxx part number. For these bundle variants, the provided parts supplied and part numbers may differ slightly from those stated in this document. However, the core supplied product and its features will remain the same as those described in this document. To ensure that you are using the correct documentation for your product, please:

- Refer to the product’s core model number, which can be found listed on the label on the rear or underside of your product, or accessed from any Raymarine multifunction display via the Diagnostics page. Ensure that the number matches one of those listed in the “Applicable products” section of your product documentation.
- Alternatively, contact the place of purchase and request the information. You may need to provide the product’s serial number, which can be found on the product packaging and also on the label on the rear or underside of the unit.

2.4 Related system packs

Your product is included in the following system bundles/packages:

| Part number | Products Included | Description |
|-----------------|---|----------------------------------|
| T70338 / T70345 | <ul style="list-style-type: none"> • Micro-Talk (E70361) • Wind vane (T120) • Wireless remote (T113–868 / T113–916) | Basic sailing starter kit |
| T70339 / T70346 | <ul style="list-style-type: none"> • Micro-Talk (E70361) • Wind vane (T120) • Wireless remote (T113–868 / T113–916) • i60 Wind display (E70061) • SeaTalkng[®] power cable (A06049) • SeaTalkng[®] backbone cable (A06036) • SeaTalkng[®] 5–way block (A06064) • SeaTalkng[®] terminator (A06031) • SeaTalkng[®] T-piece (A06028) | Premium i60 sailing starter kit |
| T70340 / T70347 | <ul style="list-style-type: none"> • Micro-Talk (E70361) • Wind vane (T120) • DST-800 triducer (A22111) • Wireless remote (T113–868 / T113–916) • i70s instrument display (E70327) • SeaTalkng[®] power cable (A06049) • SeaTalkng[®] backbone cable (A06036) • SeaTalkng[®] 5–way block (A06064) • SeaTalkng[®] terminator (A06031) • SeaTalkng[®] T-piece (A06028) | Premium i70s sailing starter kit |
| T70341 / T70348 | <ul style="list-style-type: none"> • Micro-Talk (E70361) • Wind vane (T120) • Evolution EV-1 sensor (E70096) • DST-800 triducer (A22111) • Wireless remote (T113–868 / T113–916) • i70s instrument display (E70327) • SeaTalkng[®] power cable (A06049) • SeaTalkng[®] backbone cable (A06036) • SeaTalkng[®] 5–way block (A06064) • SeaTalkng[®] terminator (A06031) • SeaTalkng[®] T-piece (A06028) | Advanced sailing kit |

| Part number | Products Included | Description |
|-----------------|--|-----------------------------------|
| T70342 / T70349 | <ul style="list-style-type: none"> • Micro-Talk (E70361) • Vertical wind vane (T222) • Evolution EV-1 sensor (E70096) • DST-800 triducer (A22111) • Wireless remote (T113–868 / T113–916) • i70s instrument display (E70327) • SeaTalkng[®] power cable (A06049) • SeaTalkng[®] backbone cable (A06036) • SeaTalkng[®] 5–way block (A06064) • SeaTalkng[®] terminator (A06031) • SeaTalkng[®] T-piece (A06028) | Pro sailing kit |
| T70344 / T70351 | <ul style="list-style-type: none"> • Micro-Talk (E70361) • Wind vane (T120) • Evolution EV-1 sensor (E70096) • Wireless remote (T113–868 / T113–916) • SeaTalkng[®] power cable (A06049) • SeaTalkng[®] backbone cable (A06036) • SeaTalkng[®] 5–way block (A06064) • SeaTalkng[®] terminator (A06031) • SeaTalkng[®] T-piece (A06028) | Legacy SeaTalkng [®] kit |

Always refer to the Raymarine website: www.raymarine.com for the latest special bundle/package and promotional deals:

2.5 Product documentation

The following documentation is applicable to your product:

| Description | Part number |
|---|-------------|
| Micro-Talk Installation instructions Installation of a Micro-Talk gateway and connection to a wider system of marine electronics. | 87265 |
| Micro-Talk mounting template Template for surface mounting the Micro-Talk gateway. | 87266 |

2.6 Document illustrations

Your product and if applicable, its user interface may differ slightly from that shown in the illustrations in this document, depending on product variant and date of manufacture.

All images are provided for illustration purposes only.

2.7 Operation instructions

For detailed operation instructions for your product, refer to the documentation that accompanies your display.

All product documentation is available to download from the Raymarine website: www.raymarine.com/manuals.

Chapter 3: Product and system overview

Chapter contents

- 3.1 Product overview on page 18
- 3.2 Multiple data sources (MDS) on page 19
- 3.3 SeaTalkng® on page 19
- 3.4 Micronet on page 19
- 3.5 Networking restrictions on page 19
- 3.6 Software updates on page 19
- 3.7 Installing software updates on page 20

3.1 Product overview

The Micro-Talk gateway bridges data between Micronet (wireless) and SeaTalkng[®] networks. When used in conjunction with a SeaTalk[®] to SeaTalkng[®] converter the data can also be bridged on to the SeaTalk[®] network or devices.



The Micro-Talk gateway has the following features:

- Bridges data from Micronet to SeaTalkng[®]
- Bridges data from SeaTalkng[®] to Micronet
- Pole, Rail or Surface or Bracket mountable using optional mounting kits
- NMEA 2000 compliant
- Low power consumption
- 12 V dc operation (24V protection)
- Waterproof to IPx6 and IPx7

The following data can be bridged by the Micro-Talk gateway:

| Data | Micro-Talk to SeaTalkng [®] | SeaTalkng [®] to Micro-Talk |
|-----------------|--------------------------------------|--------------------------------------|
| Wind | ✓ | ✓ |
| Mast rotation | ✓ | ✗ |
| Depth | (1) or (2) ✓ | ✓ |
| Speed | (1) or (2) ✓ | ✓ |
| Temperature | (1) or (2) ✓ | ✓ |
| Heading | (1) or (2) ✓ | ✓ |
| GPS | ✗ | ✓ |
| Time & Date | ✗ | ✓ |
| Navigation data | ✗ | ✓ |

Note:

- ⁽¹⁾ Requires T121 Wireless hull transmitter.
- ⁽²⁾ Requires T122 NMEA 0183 wireless interface.

3.2 Multiple data sources (MDS)

The Micro-Talk gateway is MDS compliant. If a data type is available on the Micronet network then the gateway will be selectable as a data source, for that data type, from SeaTalkng[®] displays.

In installations where multiple sources of the same data type exist on the Micronet network, the data source that is used by the gateway and transmitted on to SeaTalkng[®] will be the same data source that is displayed on Micronet displays.

In installations where the same data types exist on both networks then the MDS selected data source will be shown on displays on both networks.

If MDS is set to **Auto** then the gateway will be the preferred data source.

3.3 SeaTalkng[®]

SeaTalkng[®] (Next Generation) is an enhanced protocol for connection of compatible marine instruments and equipment. It replaces the older SeaTalk and SeaTalk2 protocols.

SeaTalkng[®] utilizes a single backbone which compatible equipment connects to using a spur. Data and power are carried within the backbone. Devices that have a low draw can be powered from the network, although high current equipment will need to have a separate power connection.

SeaTalkng[®] is a proprietary extension to NMEA 2000 and the proven CAN bus technology. Compatible NMEA 2000 and SeaTalk and SeaTalk2 devices can also be connected using the appropriate interfaces or adaptor cables as required.

3.4 Micronet

Micronet is a proprietary wireless Radio Frequency (RF) network protocol compatible with Raymarine's wireless range of instrument displays and transducers.

Micronet can be used to connect up to 32 compatible devices together to create a wireless marine electronics network. Micronet products can operate on 1 of 2 frequencies depending on geographic location:

- 869.8 MHz for products operating in the UK, Europe or Africa
- 915.9 MHz for products operating in the USA, Canada, South America and Australia

Micronet products comply with the relevant ISM regulations and are exempt from licensing in each of these territories.

3.5 Networking restrictions

To ensure reliable system operation, certain restrictions must be adhered to when using the Micro-Talk gateway.

Wireless interface (NMEA 0183)

When the Micro-Talk gateway is used in a Micronet network that has a Wireless interface (T122) present, to prevent data looping, you must ensure that the Wireless interface's NMEA 0183 input/output connections are NOT connected to an MFD or an NMEA 0183 to SeaTalkng[®] converter that is connected to the same network as the gateway.

Multiple Micro-Talk gateways

It is recommended that only 1 Micro-Talk gateway is used per SeaTalkng[®] network. After powering up if a gateway detects another gateway it will shut itself down. It is recommended that only 1 Micro-Talk gateway is used per MicroNet network. Bridging multiple SeaTalkng[®] networks using MicroNet is NOT recommended.

3.6 Software updates

The software running on the product can be updated.

- Raymarine periodically releases software updates to improve product performance and add new features.

- The software on many products can be updated using a connected and compatible multifunction display (MFD).
- Refer to www.raymarine.com/software/ for the latest software updates and the software update procedure for your specific product.

Important:

- To prevent potential software-related issues with your product, always follow the relevant update instructions carefully and in the sequence provided.
- If in doubt as to the correct procedure for updating your product software, refer to your dealer or Raymarine technical support.

3.7 Installing software updates

Short desc is not printed, but is used in searches

- The software update process is carried out at your own risk. Before initiating the update process ensure you have backed up any important files.
- Ensure that the unit has a reliable power supply and that the update process is not interrupted.
- Damage caused by an incomplete update is not covered by Raymarine warranty.
- By downloading the software update package, you agree to these terms.


Chapter 4: Parts supplied

Chapter contents

- [4.1 Parts supplied on page 22](#)

4.1 Parts supplied

The following parts are supplied with your product.

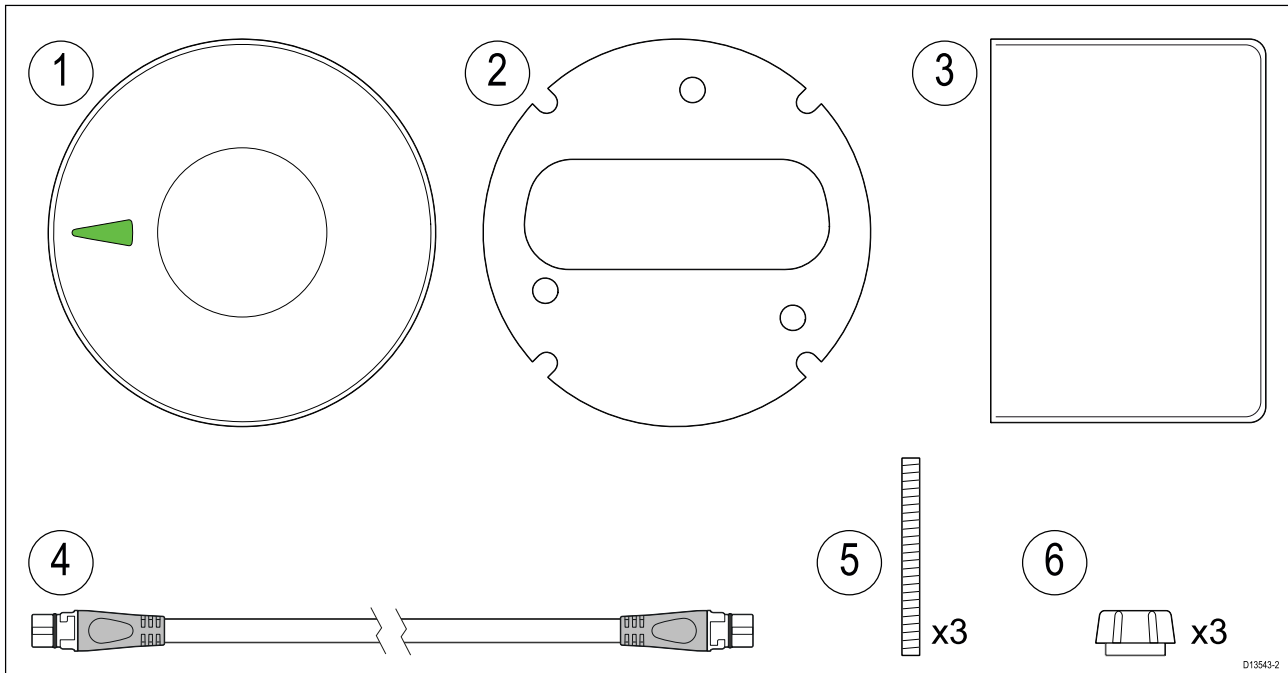

1. Unit
2. Mounting gasket
3. Documentation
4. 6 m (19.69 ft) SeaTalkng® (White) cable
5. M4 x 40mm Threaded studs x 3 (used for surface mounting)
6. Finger nuts x 3 (used for surface mounting)


Unpack your product carefully to prevent damage or loss of parts, check the box contents against the list above. Retain the packaging and documentation for future reference.

Chapter 5: Product dimensions

Chapter contents

- [5.1 Product dimensions on page 24](#)

5.1 Product dimensions

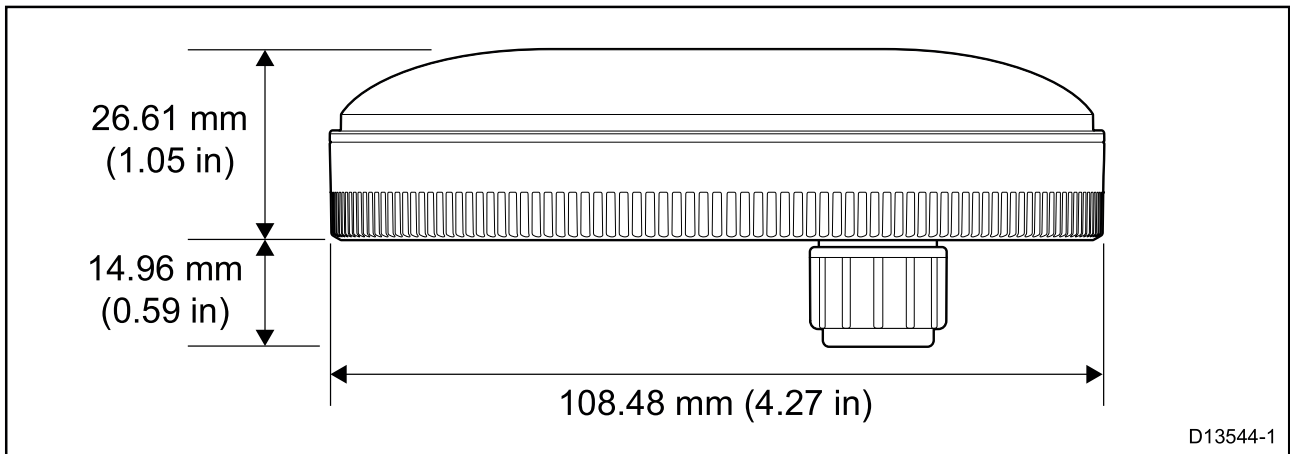

Chapter 6: Location requirements

Chapter contents

- [6.1 Selecting a location on page 26](#)

6.1 Selecting a location




Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).

Micronet device location requirements

Your unit includes a wireless transceiver that utilizes the Micronet networking protocol.

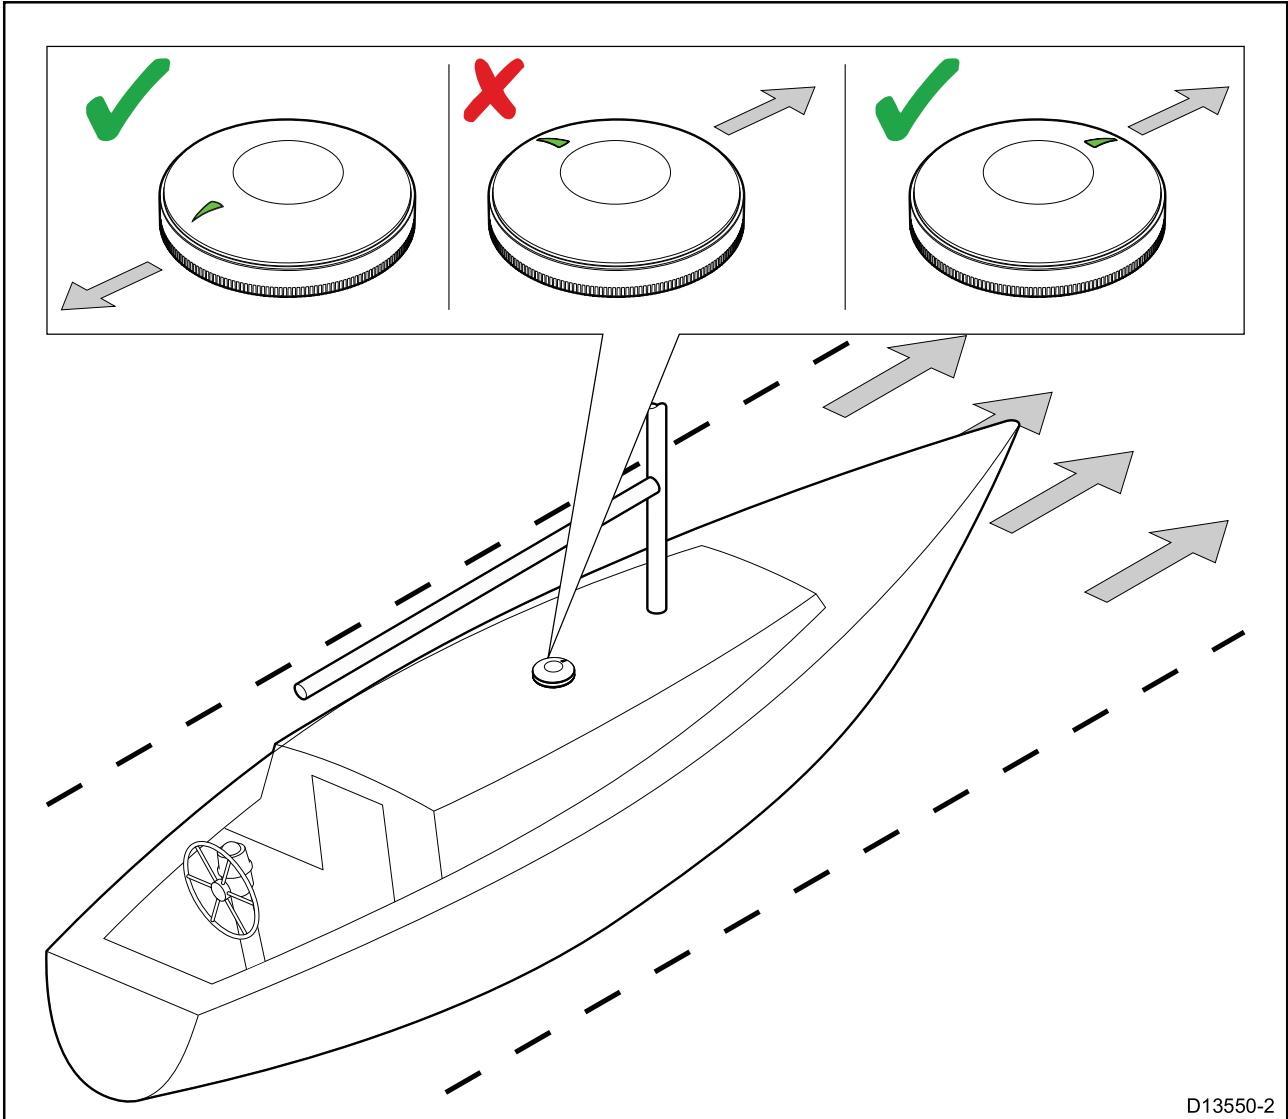

D13550-2

For optimum performance, the product should be installed above decks, on a horizontal surface with the LED 'arrow' pointing towards the bow or the stern of the vessel.

When planning the installation location, also consider the following:

- The unit should have a clear line of sight to the Micronet products it will connect to. The range for unobstructed line of sight is up to 150 m (492 ft), if the line of sight is obstructed by a bulkhead or other objects this range can be drastically reduced.
- The unit should be mounted at least 1 m (3 ft) away from devices that may cause interference, such as a compass, motors, generators, VHF radio, and any other transmitters or receivers.
- Choose a location where the unit will be safe from physical damage and excessive vibration.
- Choose a location where no load or force maybe put on the unit.
- Mount away from any source of heat or potential flammable hazards, such as fuel vapor.
- The unit should be mounted in a location where the diagnostics LED is viewable.

Wireless location requirements for optimum performance

All wireless devices in your system must be located in such a way that they can reliably receive and/or transmit wireless signals.

A number of factors can influence wireless performance. For example, physical obstacles and certain vessel structures and materials can all negatively impact wireless performance. Therefore, **it's important to check a product's wireless performance at the desired installation location before drilling any mounting holes.**

Vessel construction and materials

Wherever possible, mount products on surfaces constructed from GRP (e.g. fibreglass resin, or foam), or on dry wooden bulkheads.

Conductive materials in the signal path can have a significant impact on wireless signal performance. Reflective surfaces such as metal surfaces, some types of glass and even mirrors can drastically affect performance or even block the wireless signal. Installation locations that are in close proximity to these materials should be avoided. **Do NOT mount wireless products directly to conductive materials.** This includes any mounting surface or enclosure/pod.

Examples of conductive materials include, but are not limited to:

- carbon fibre, kevlar, or aramid (including sails made from these materials)
- aluminium
- steel

In installations with conductive materials, mount the wireless product using an accessory pole mount or deck mounting kit. A clearance of at least 10 cm (3.9 in) is required to minimize the ground effect from conductive materials. This applies to transmitters as well as displays. If moving the product fixes the problem, consider cutting an antenna clearance hole behind the unit (once the product position and mounting have been finalized).

Wireless performance can also be degraded in locations where the wireless signal passes through a bulkhead containing power cables.

Note:

Crew members (especially when wet) can also be obstructive to wireless signals, if their bodies pass through the signal area between wireless sensor and any associated displays.

Checking and optimizing signal strength

It may be necessary to experiment with the location of your wireless products to achieve optimal wireless performance and a clear signal path.

The distance between wireless products should always be kept to a minimum. Do not exceed the maximum stated range of your wireless product (maximum range will vary for each device).

Wireless performance degrades over distance, so products farther away will receive less network bandwidth. Products installed close to their maximum wireless range may experience slow connection speeds, signal dropouts, or not being able to connect at all.

For best results, the wireless product should have a clear, direct line-of-sight to the product it will be connected to. Any physical obstructions can degrade or even block the wireless signal.

Some wireless products feature a signal strength indicator to assist in the process of determining the location with the best wireless performance. Choose the location with the highest and most consistently strong direct signal reading, during a 5 minute monitoring period. Try alternative locations for the transmitter to maximise the signal strength to the displays; e.g. try locations below a hatch or skylight or near to a window. A small change in product position can result in a significant change in the signal strength.

Note:

Some wireless products (e.g. a Hull Transmitter) will not transmit data unless a transducer is connected. Also consider that an NMEA or SeaTalkng product (e.g. an interface) will not transmit data unless an appropriate data source is connected.

Interference and other equipment

Interference from other people's wireless devices can cause interference with your products. You can use a third-party wireless analyzer tool / smartphone app to assess the best wireless channel to use (e.g. a channel not in use or one used by the least number of devices).

Wireless products should be installed at least 1 m (3 ft) away from:

- Other wireless-enabled products
- Transmitting products that send wireless signals in the same frequency range
- Other electrical, electronic or electromagnetic equipment that may generate interference.

Software updates

It's also important to ensure all your wireless products are running the latest software versions, as improvements are made over time to wireless performance.

Compass safe distance

To prevent potential interference with the vessel's magnetic compasses, ensure an adequate distance is maintained from the product.

When choosing a suitable location for the product you should aim to maintain the maximum possible distance from any compasses. Typically this distance should be at least 1 m (3.3 ft) in all directions. However for some smaller vessels it may not be possible to locate the product this far away from a compass. In this situation, when choosing the installation location for your product, ensure that the compass is not affected by the product when it is in a powered state.

EMC installation guidelines

Raymarine equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) regulations, to minimize electromagnetic interference between equipment and minimize the effect such interference could have on the performance of your system

Correct installation is required to ensure that EMC performance is not compromised.

Note: In areas of extreme EMC interference, some slight interference may be noticed on the product. Where this occurs the product and the source of the interference should be separated by a greater distance.

For **optimum** EMC performance we recommend that wherever possible:

- Raymarine equipment and cables connected to it are:
 - At least 1 m (3.3 ft) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas. In the case of SSB radios, the distance should be increased to 2 m (6.6 ft).
 - More than 2 m (6.6 ft) from the path of a radar beam. A radar beam can normally be assumed to spread 20 degrees above and below the radiating element.
- The product is supplied from a separate battery from that used for engine start. This is important to prevent erratic behavior and data loss which can occur if the engine start does not have a separate battery.
- Raymarine specified cables are used.
- Cables are not cut or extended, unless doing so is detailed in the installation manual.

Note:

Where constraints on the installation prevent any of the above recommendations, always ensure the maximum possible separation between different items of electrical equipment, to provide the best conditions for EMC performance throughout the installation.

Chapter 7: Installation

Chapter contents

- 7.1 Installation checklist on page 30
- 7.2 Tools required for installation on page 30
- 7.3 Warnings and cautions on page 31
- 7.4 Surface mounting on page 31
- 7.5 Pole or rail mounting on page 32
- 7.6 Surface mounting using the Deck mounting kit on page 33
- 7.7 Bracket mounting using the Deck mounting kit on page 34
- 7.8 Surface mounting using the Riser on page 36
- 7.9 Releasing the unit from the bracket on page 39

7.1 Installation checklist

Installation includes the following activities:

Installation Task


1. Plan your system.
2. Obtain all required equipment and tools.
3. Site all equipment.
4. Route all cables.
5. Drill cable and mounting holes.
6. Make all connections into equipment.
7. Secure all equipment in place.
8. Power on and test the system.

Schematic diagram

A schematic diagram is an essential part of planning any installation. It is also useful for any future additions or maintenance of the system. The diagram should include:

- Location of all components.
- Connectors, cable types, routes and lengths.

7.2 Tools required for installation

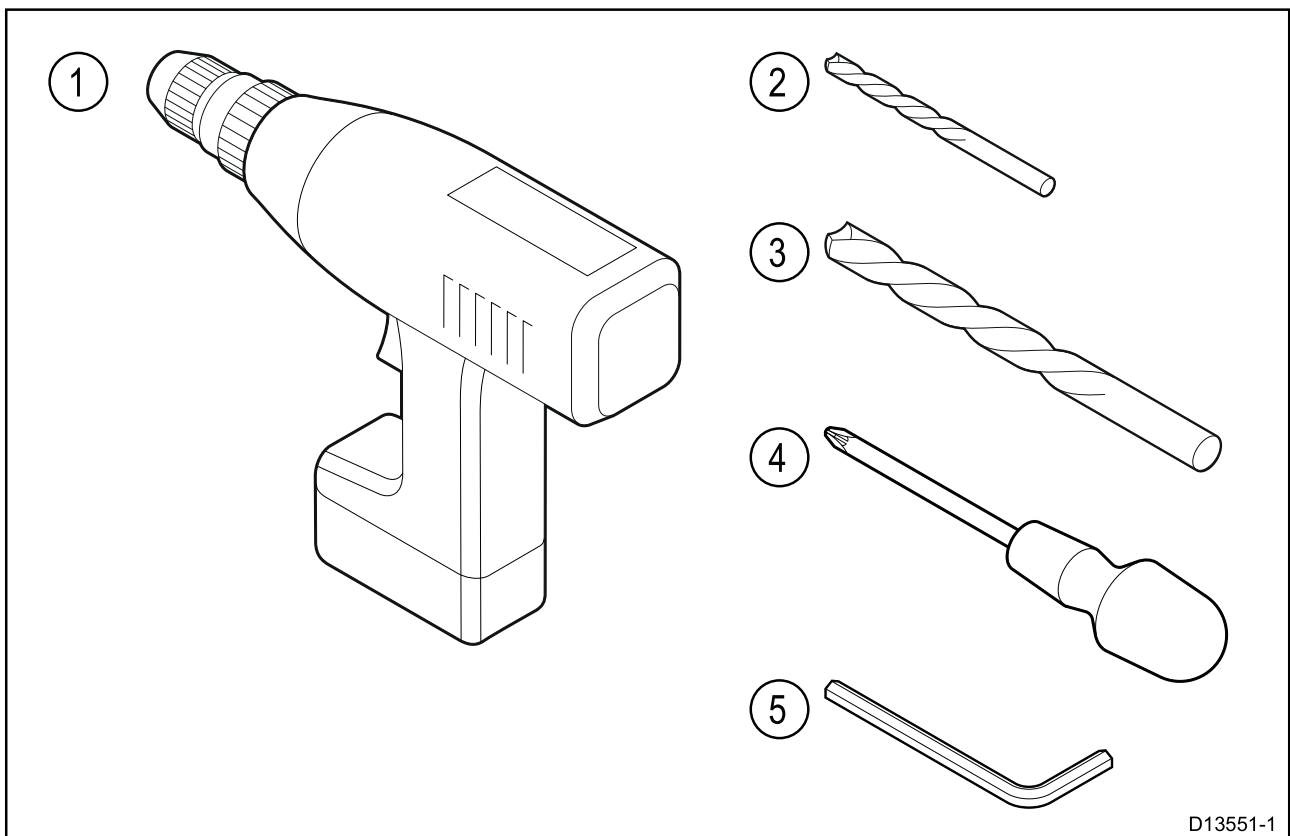

| | |
|---|--|
| 1 | Power drill |
| 2 | 4 mm (11/64) drill bit (for fixing studs) |
| 3 | 22 mm (for cable hole when surface mounting) |
| 4 | Pozi-drive screwdriver (only required for Pole mount installations) |
| 5 | Size 4 (2.5 mm) Hex Key (only required for Pole mount installations) |


7.3 Warnings and cautions

Important: Before proceeding, ensure that you have read and understood the warnings and cautions provided in the [Chapter 1 Important information](#) section of this document.

7.4 Surface mounting

The unit can be mounted on a surface that is up to approximately 28 mm (1.10 in) thick using the fixings supplied with the unit. To mount on a thicker surface longer studs will be required.

Ensure that the chosen location meets the product's location requirements, see [6.1 Selecting a location](#) for details.

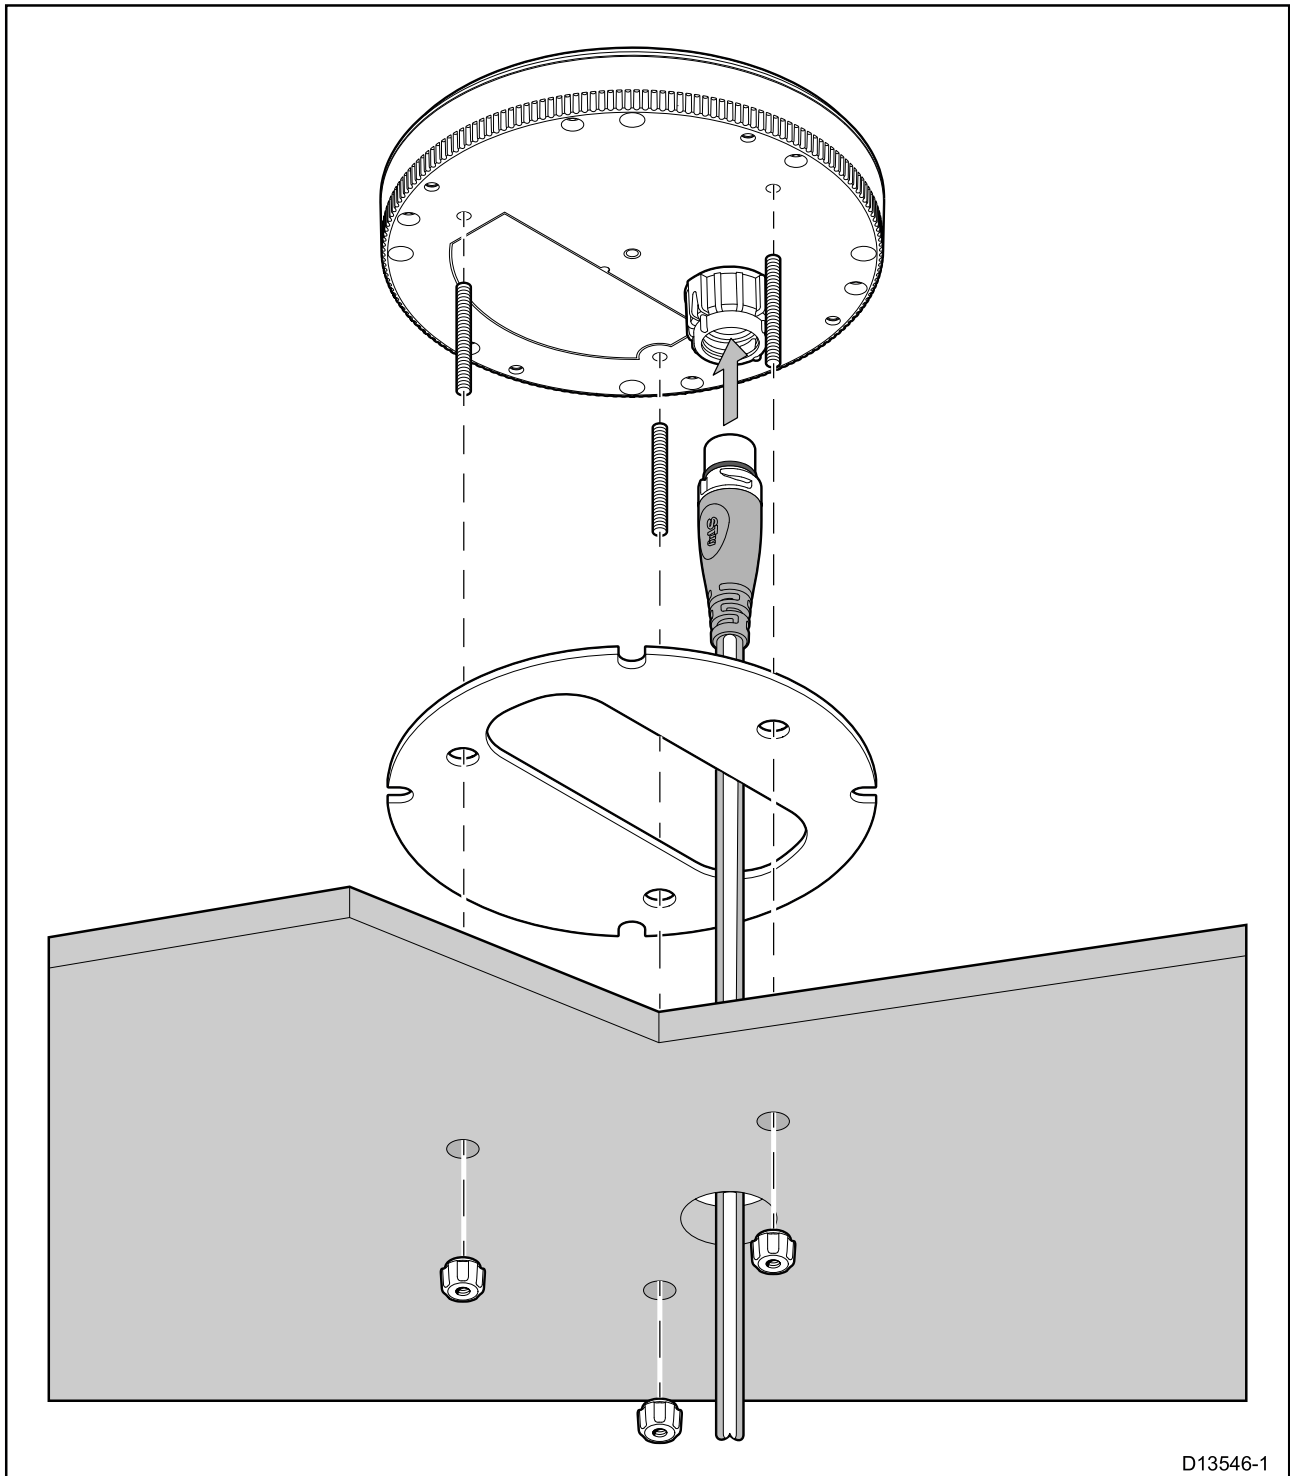


1. Affix the supplied mounting template to the mounting surface at the desired location.
2. Drill 3 x fixing holes and 1 x cable hole using drill bit sizes as indicated on the template.
3. Place the waterproof gasket into position on the underside of the unit.

4. Connect the cable to an available **SeaTalk^{ng}** spur connection then connect the other end to the connector on the underside of the unit and secure using the locking collar.
5. Screw the threaded studs into the underside of the unit (these should be hand-tight only).
6. Position the unit so that the mounting studs pass through the holes in the mounting surface.
7. Secure the unit to the mounting surface using the thumb nuts. (these should be hand-tight only).

7.5 Pole or rail mounting

The Pole mount kit (A80370) can be used to mount your product on a pole or rail.

A pole or rail mount with a 1 inch 14 TPI thread is required.

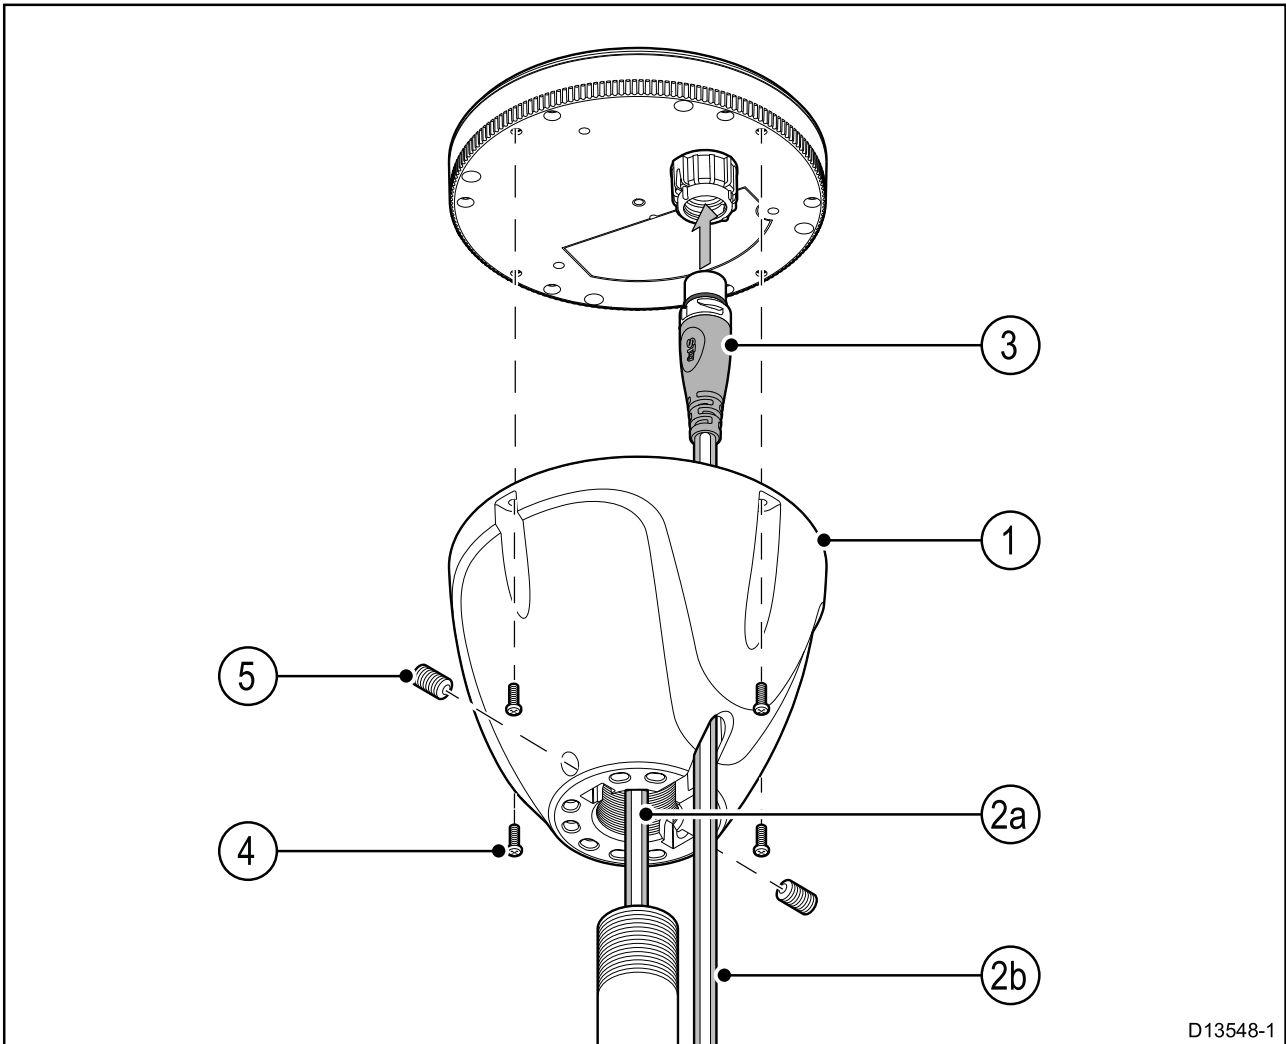

D13548-1

1. Screw the Pole mount adaptor on to the pole.
2. Feed the cable through either:
 - a) the center of the Pole mount adaptor and pole, or
 - b) the cable exit hole.
3. Connect the cable to an available **SeaTalk^{ng}** spur connection then connect the other end of the cable to the connector on the underside of the unit and secure using the locking collar.
4. Ensuring correct orientation, Secure the unit to the Pole mount adaptor using the fixings supplied with the adaptor.
5. Fix the unit's orientation by tightening the grub screws.


The grub screws and their captive nuts are supplied fitted to the adaptor.

7.6 Surface mounting using the Deck mounting kit

The Deck mounting kit (A80437) can be used to surface mount your product.


The Riser and Bracket pieces are not required for this installation.

Ensure that the chosen location meets the product's location requirements, see [6.1 Selecting a location](#) for details.

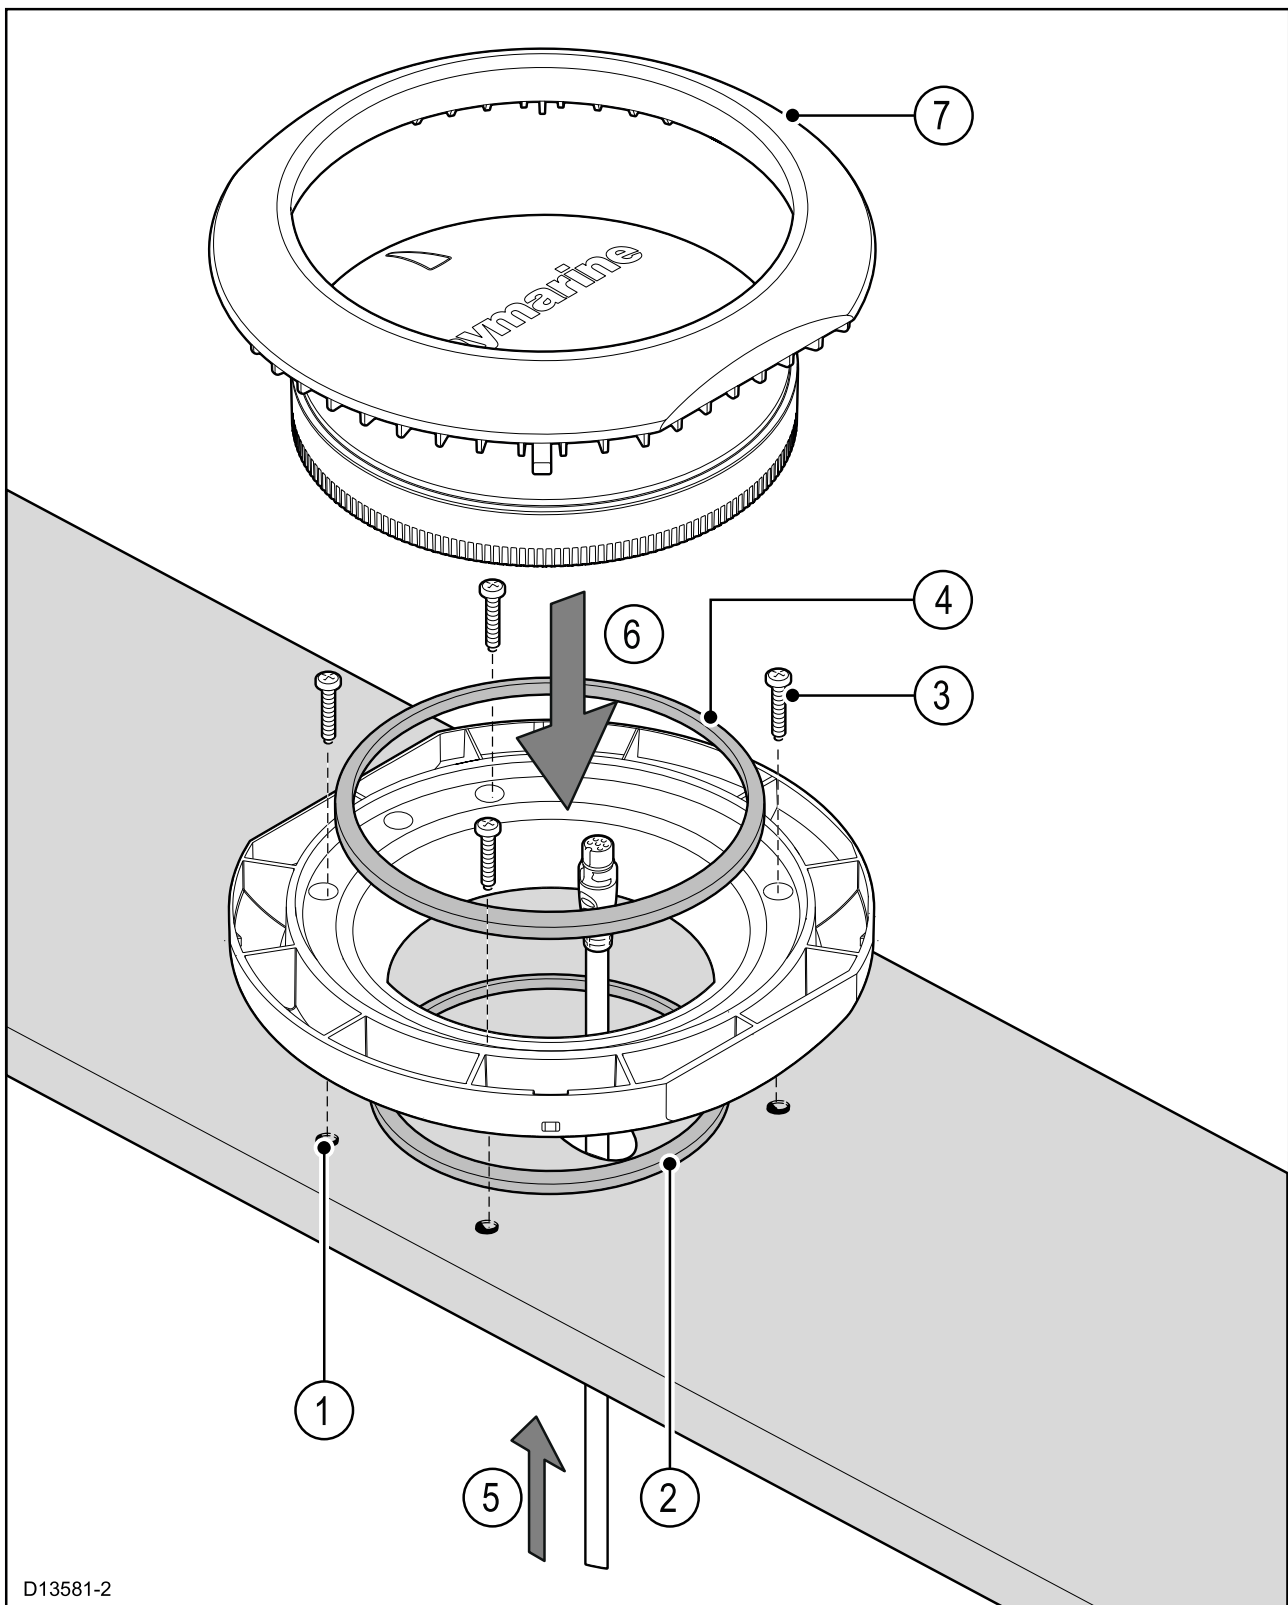

1. Using the Mounting tray template (87170), drill 4 holes in the mounting surface, plus a 22 mm (7/8 in) hole for the SeaTalkng® cable.
2. Place the small sealing ring in the groove located on the bottom of the mounting tray.
3. Secure the tray to the mounting surface using the 4 x fixings, supplied.
4. Place the large sealing ring into the groove on the upper side of the Mounting tray.

5. Pull the SeaTalkng® cable through the mounting surface hole and the Mounting tray. Plug in the cable connector on the underside of the unit and secure by rotating the locking collar clockwise 2 clicks.
6. Insert the unit into the mounting tray, ensuring the tabs in the Mounting tray are slotted into the grooves around the edge of the unit.
7. Place the Mounting trim over the unit slightly offset, and then twist the Mounting trim clockwise until it locks into position.

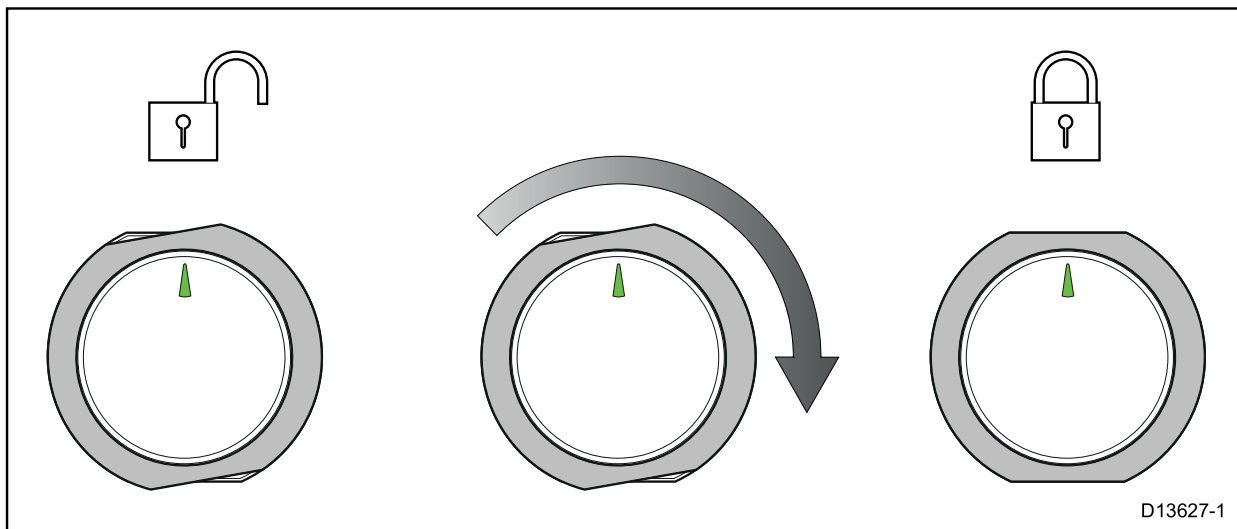


7.7 Bracket mounting using the Deck mounting kit

The Deck mounting kit (A80437) can be used to wall mount your product.

The Riser piece is not required for bracket mounting the product.


Ensure that the chosen location meets the product's location requirements, see [6.1 Selecting a location](#) for details.

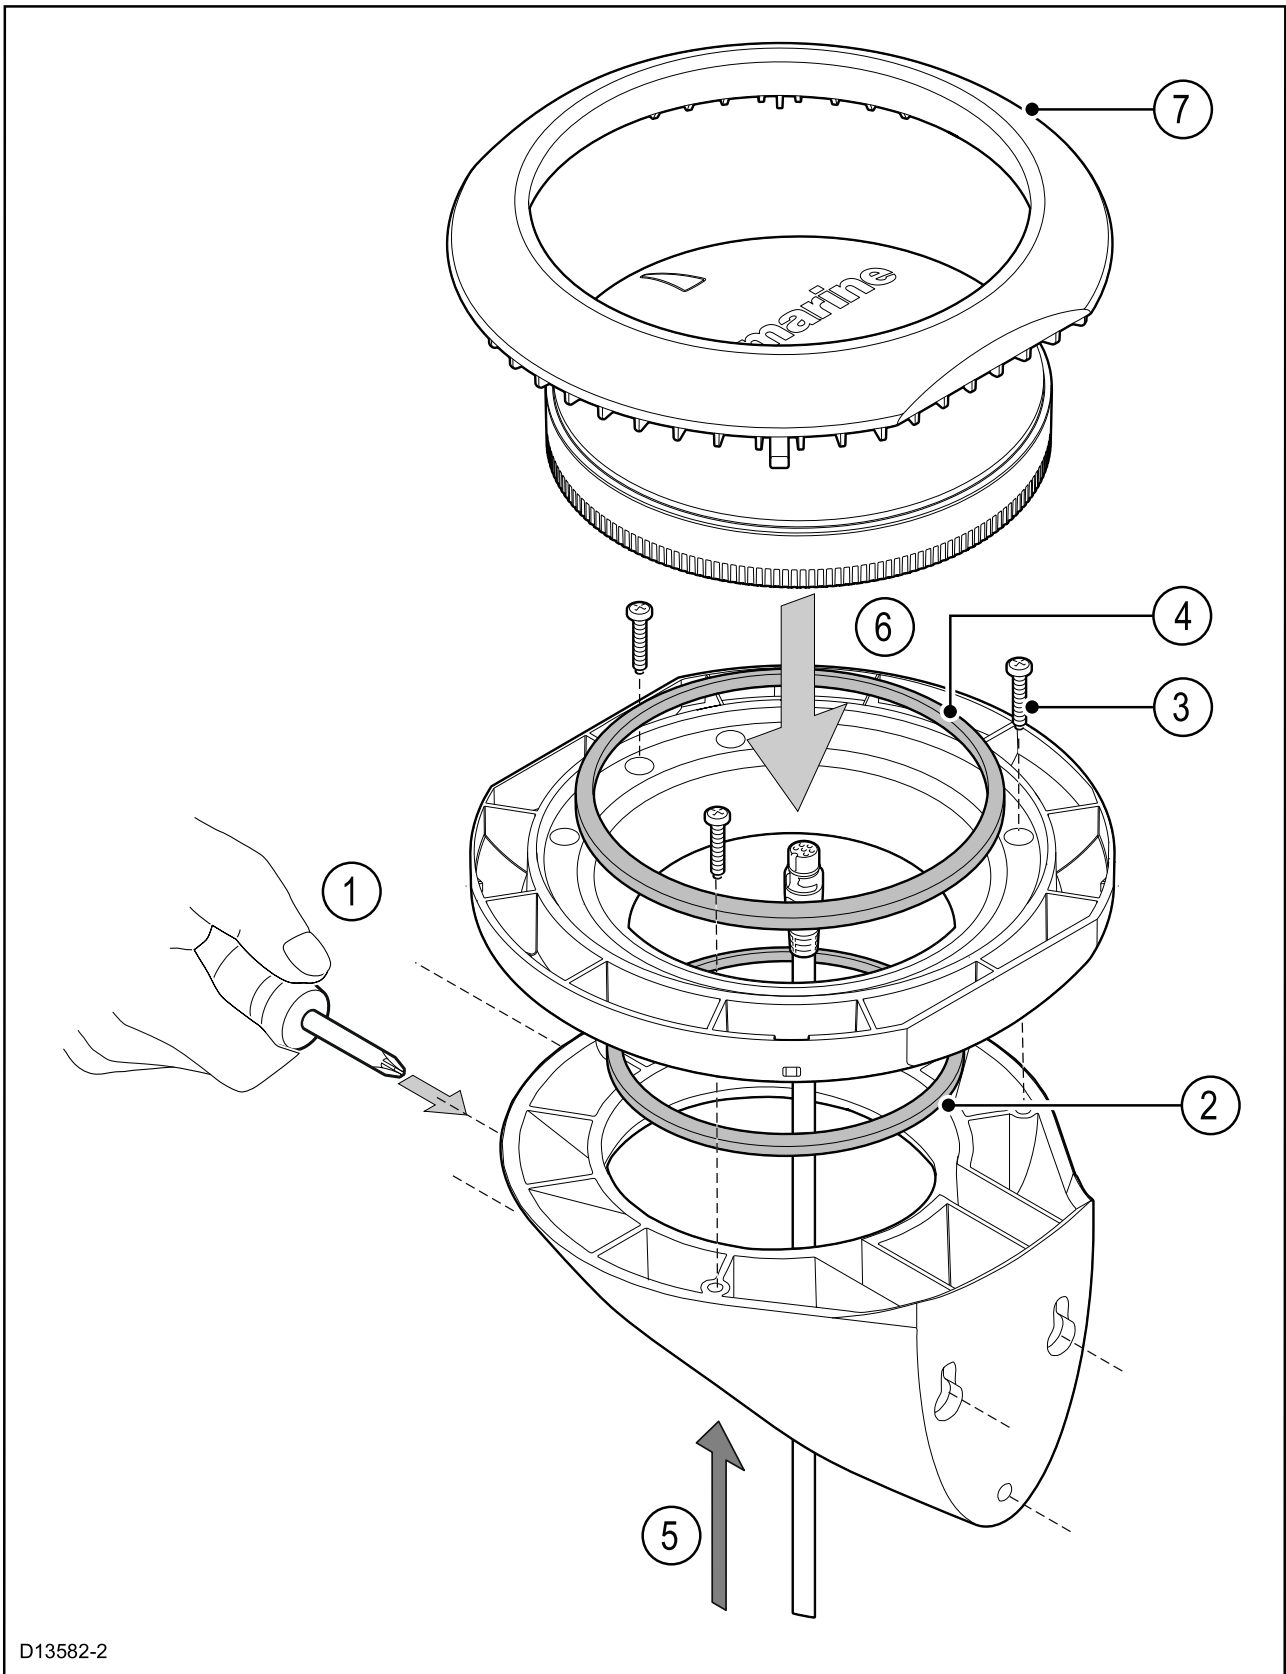


D13582-2

1. Use the Mounting bracket template (87170) to drill 3 pilot holes in the vertical mounting surface. Secure the mounting bracket to the surface using the supplied screws.
2. Place the small sealing ring in the groove located on the bottom of the Mounting tray.
3. Secure the tray to the bracket using 3 of the supplied screws, in the positions indicated in the illustration above.
4. Place the large sealing ring into the groove on the upper side of the Mounting tray.
5. Pull the SeaTalkng[®] cable through the center of the bracket and tray. Plug in the cable connector on the underside of the unit and secure by rotating the locking collar clockwise 2 clicks.

6. Insert the unit into the mounting tray, ensuring the tabs in the Mounting tray are slotted into the grooves around the edge of the unit.
7. Orientate the Mounting trim so that the release hole is accessible when mounted.

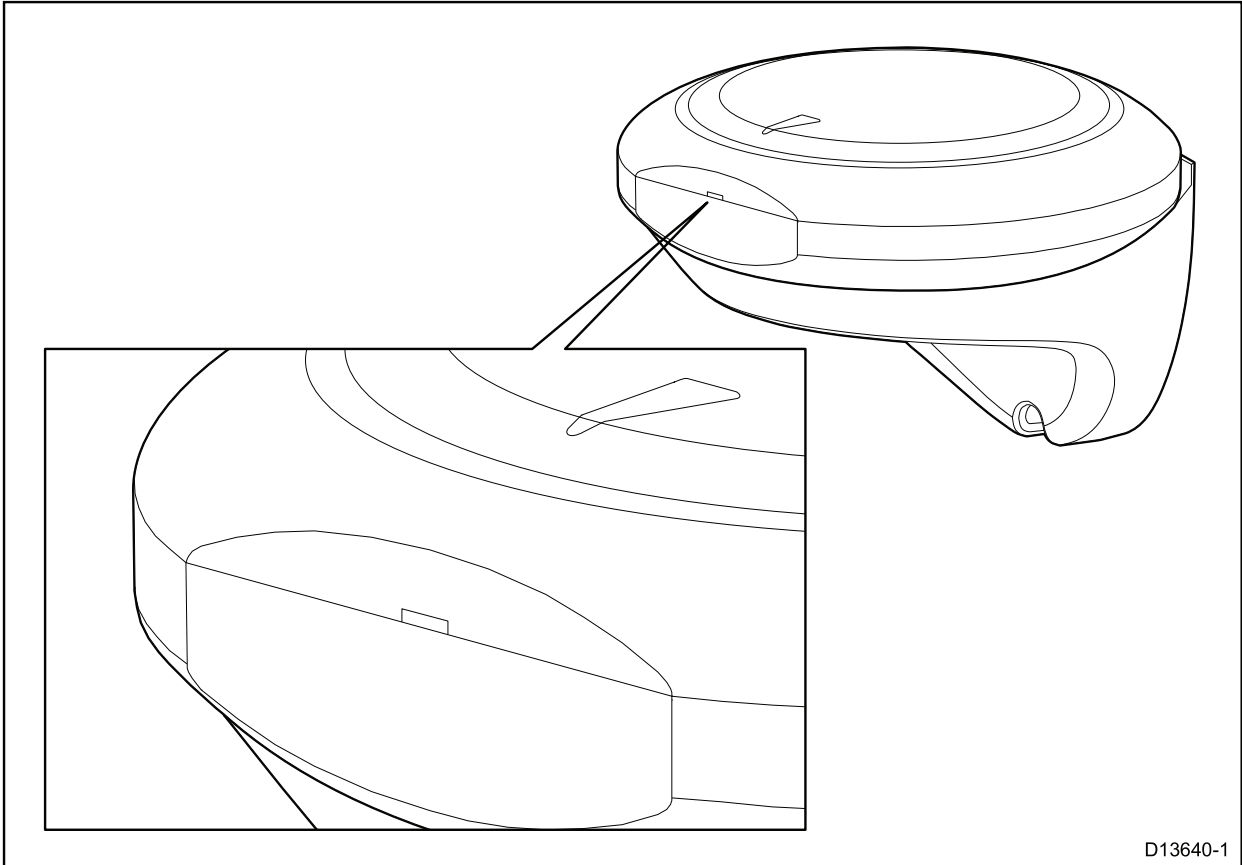


8. Place the Mounting trim over the unit slightly offset, and then twist the Mounting trim clockwise until it locks into position.

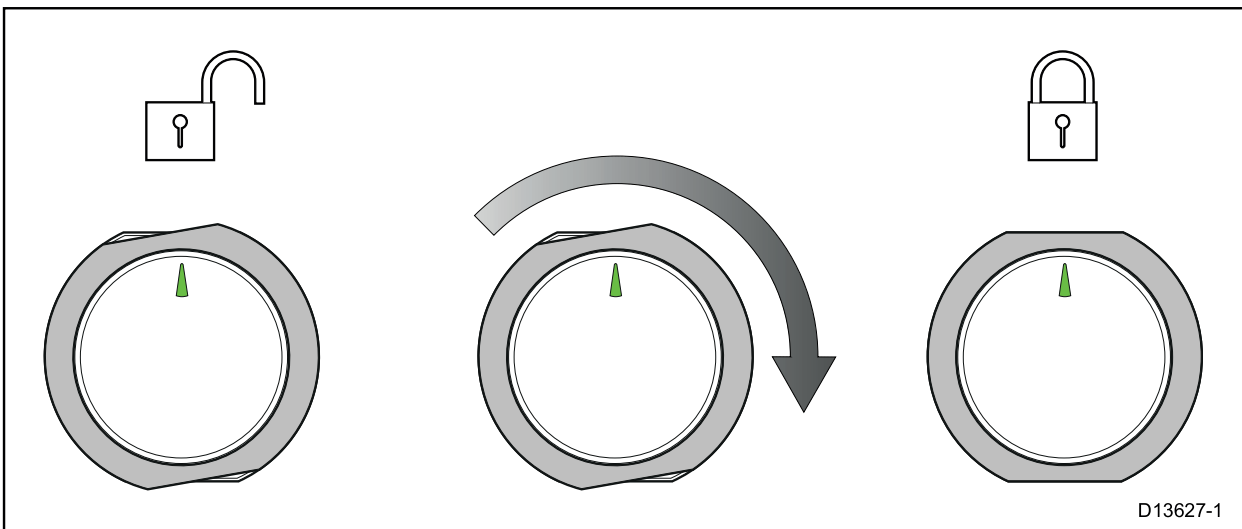

7.8 Surface mounting using the Riser

The optional Deck Mounting kit (A80437) can be used to raise the product from the mounting surface, for installations where the cabling needs to be above-surface.

The Wall bracket is not required when using the Riser.

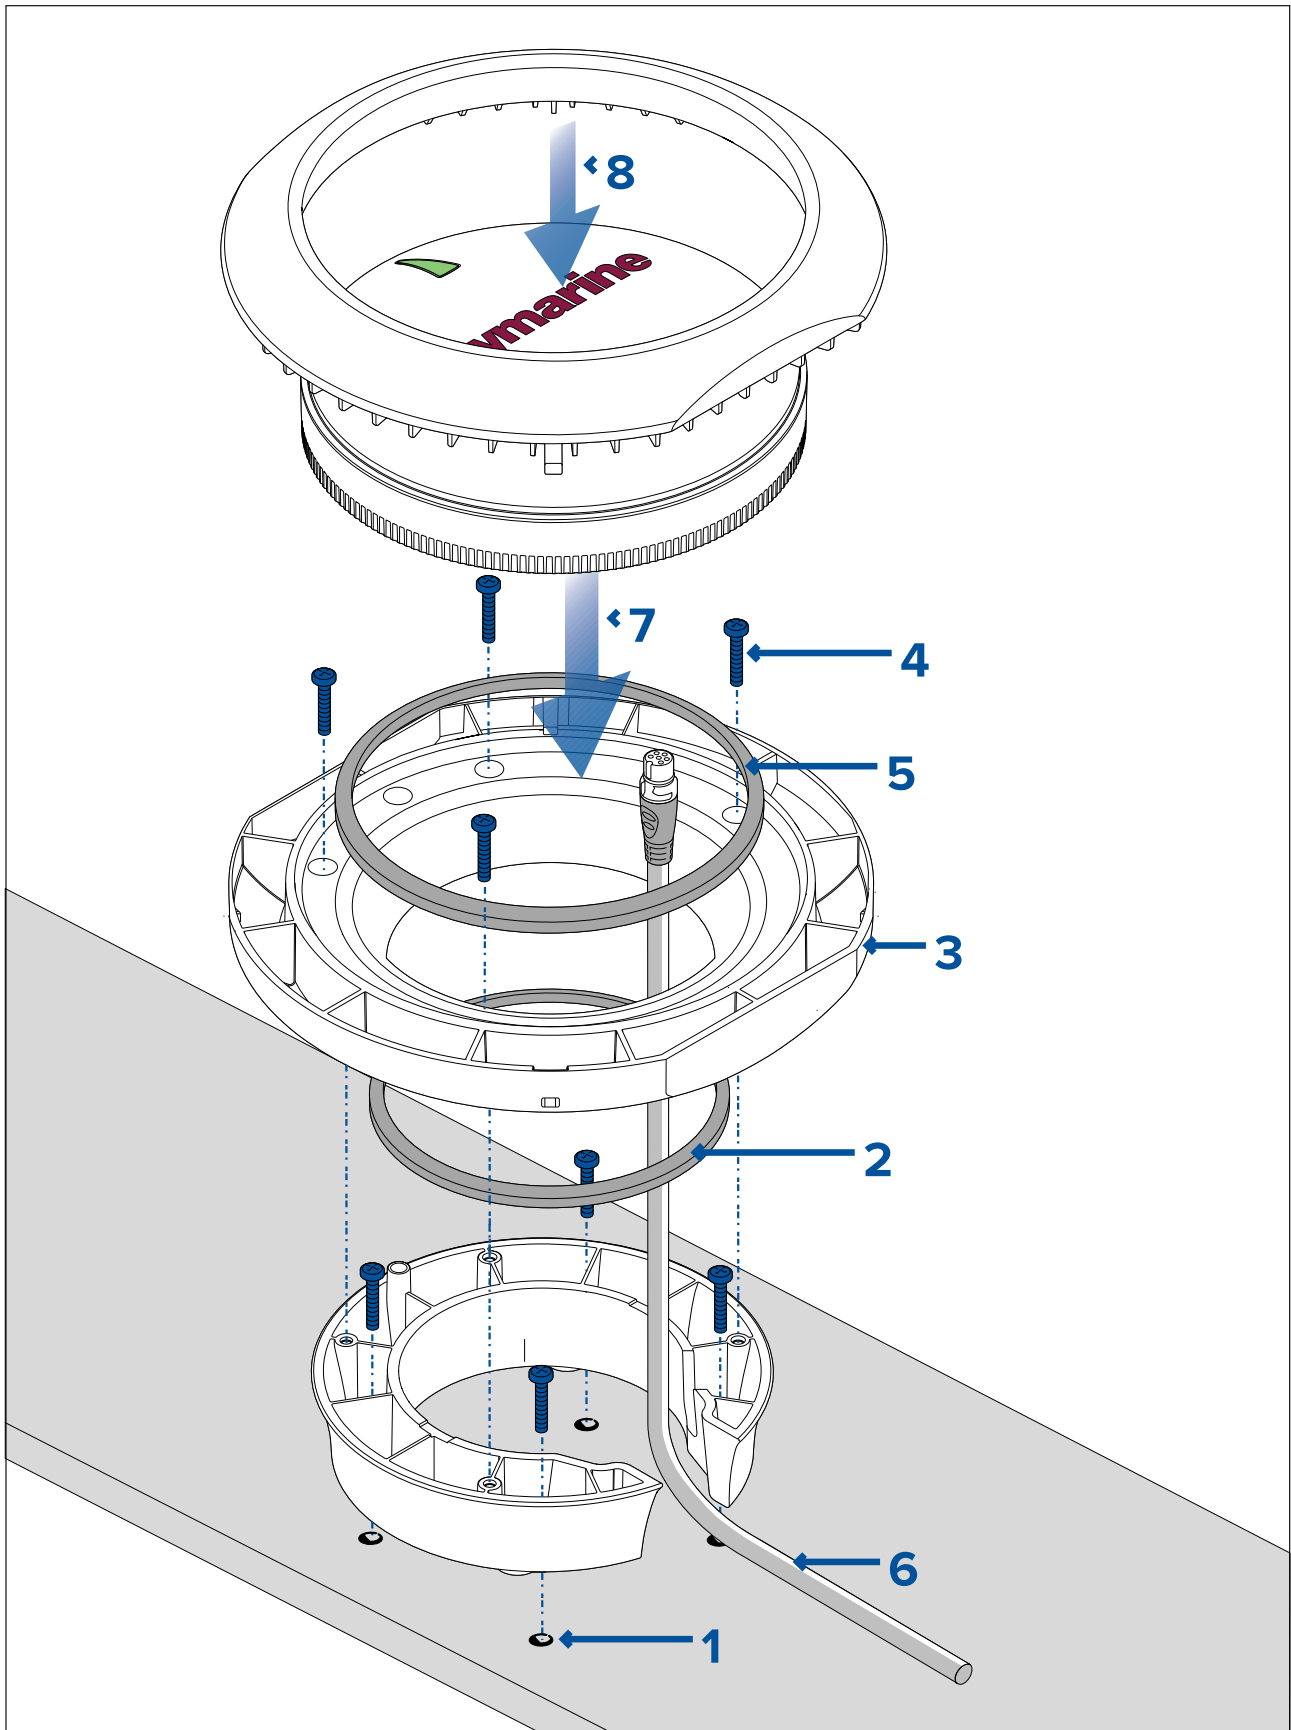

1. Use the Deck Mount riser template (87280) provided with the kit (A80437) to drill 4 holes in the mounting surface. Secure the Riser to the mounting surface using the 4 supplied fixings.
2. Place the small sealing ring in the groove located on the bottom of the mounting tray.
3. Position the Mounting tray on top of the Riser.
4. Secure the Mounting tray to the Riser using 3x supplied fixings.
5. Place the large sealing ring into the groove on the upper side of the Mounting tray.

- Pull the SeaTalkng[®] cable through the Riser and Mounting tray. Plug in the cable connector on the underside of the unit and secure by rotating the locking collar clockwise 2 clicks.


Note: If there is not enough space in the riser to accommodate the cable and to plug the SeaTalkng[®] spur cable into the unit, you may need to obtain a spur cable with a right-angled elbow connector (A06081), or a right-angled elbow adaptor (A06077).

- Insert the unit into the mounting tray, ensuring the tabs in the Mounting tray are slotted into the grooves around the edge of the unit.

Important:


The unit must be mounted with the LED 'arrow' in parallel alignment with the longitudinal axis (centerline) of the vessel and be pointing towards the vessel's bow.

- Place the Mounting trim over the unit slightly offset, and then twist the Mounting trim clockwise until it locks into position.

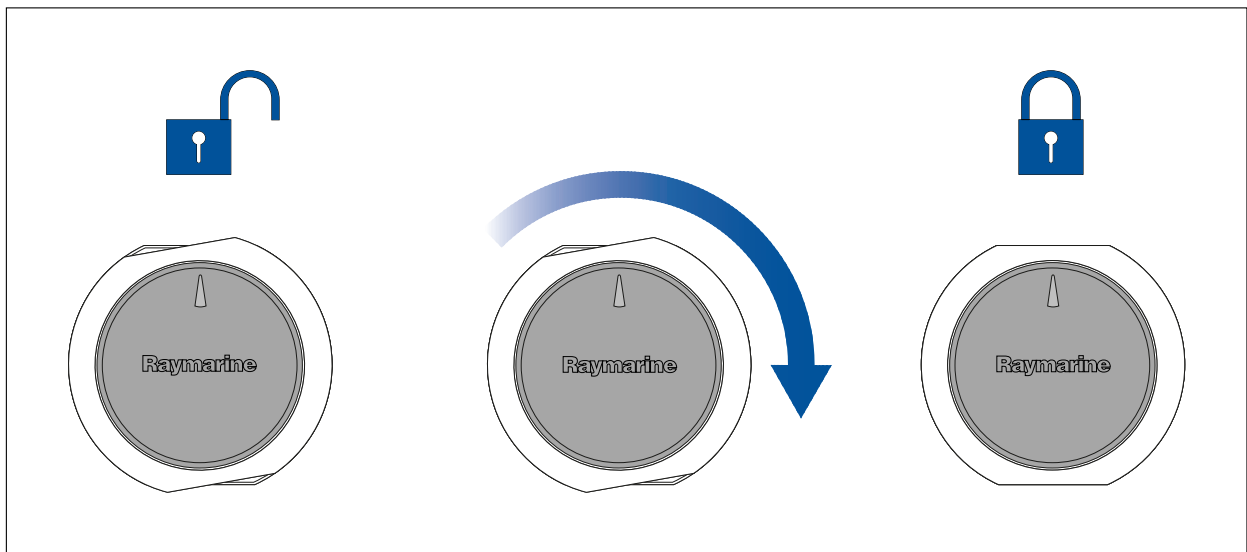

7.9 Releasing the unit from the bracket

Follow the steps below to release the unit from the Mounting bracket.

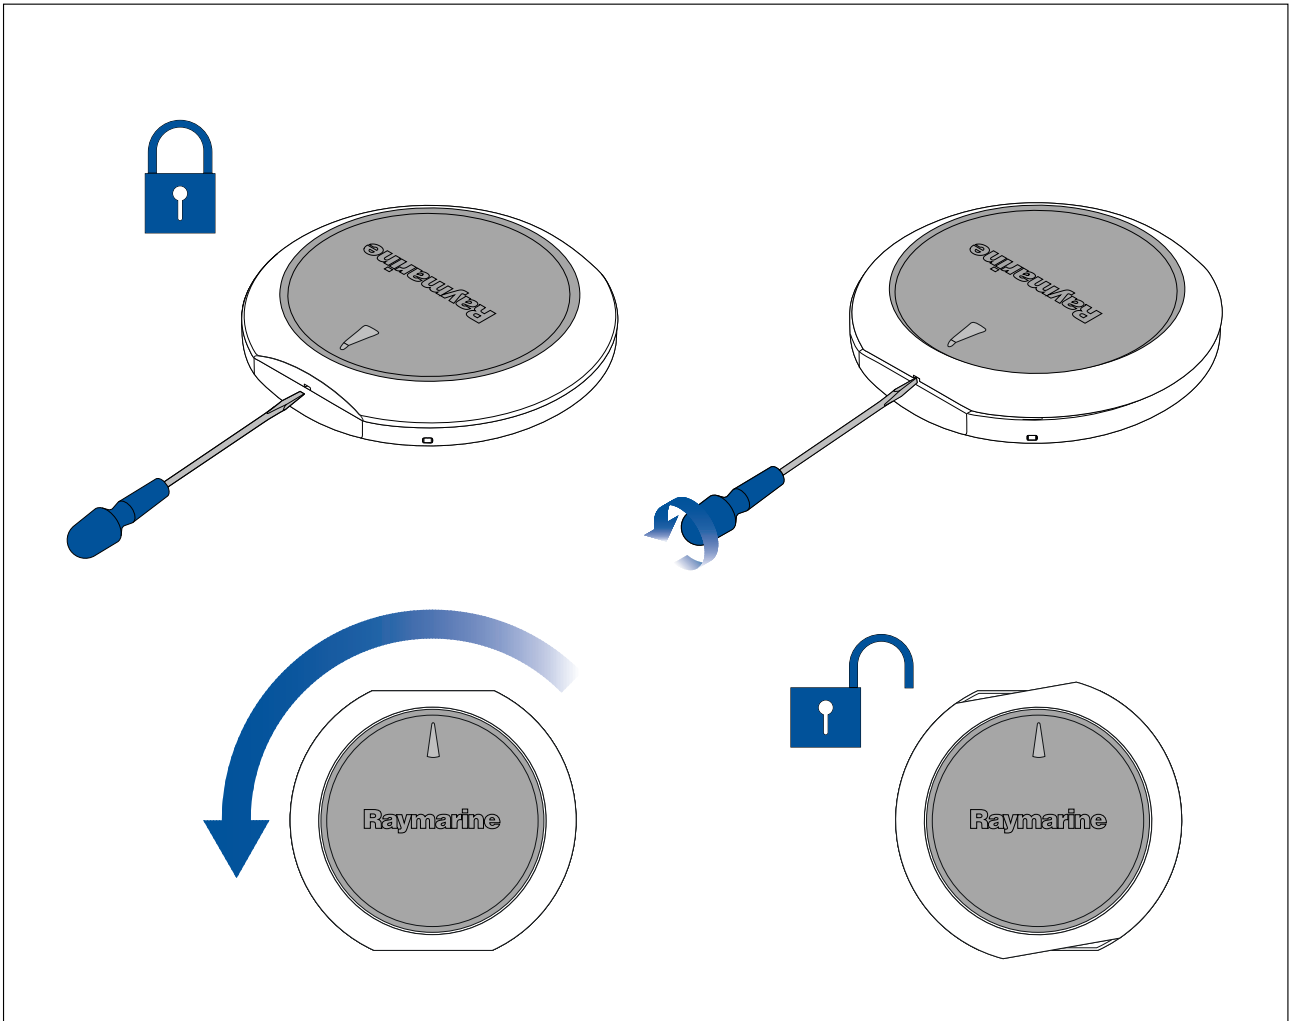

1. Insert the flat of a small flat blade screw driver, or similar tool into the release hole located on the flat edge of the mounting bracket and twist the screw driver 90°, so that there is a small gap between the Mounting trim and Mounting tray.

Important: To help prevent scratching the product, cover the tip of your screw driver with a small piece of insulation tape.

2. With the screw driver in place, twist the mounting trim counter-clockwise approximately 10° and then lift away from the unit.

Chapter 8: Cables and connections

Chapter contents

- [8.1 General cabling guidance on page 42](#)
- [8.2 Connections overview on page 43](#)
- [8.3 SeaTalkng[®] power supply on page 43](#)
- [8.4 Network examples on page 50](#)

8.1 General cabling guidance

Cable types and length


It is important to use cables of the appropriate type and length.

- Unless otherwise stated only use cables supplied by Raymarine.
- Where it is necessary to use non-Raymarine cables, ensure that they are of correct quality and gauge for their intended purpose. (e.g.: longer power cable runs may require larger wire gauges to minimize voltage drop along the run).

Cable routing

Cables must be routed correctly, to maximize performance and prolong cable life.

- Do NOT bend cables excessively. Wherever possible, ensure a minimum bend diameter (\emptyset) of 200 mm (7.87 in) / minimum bend radius (R) of 100 mm (3.94 in).

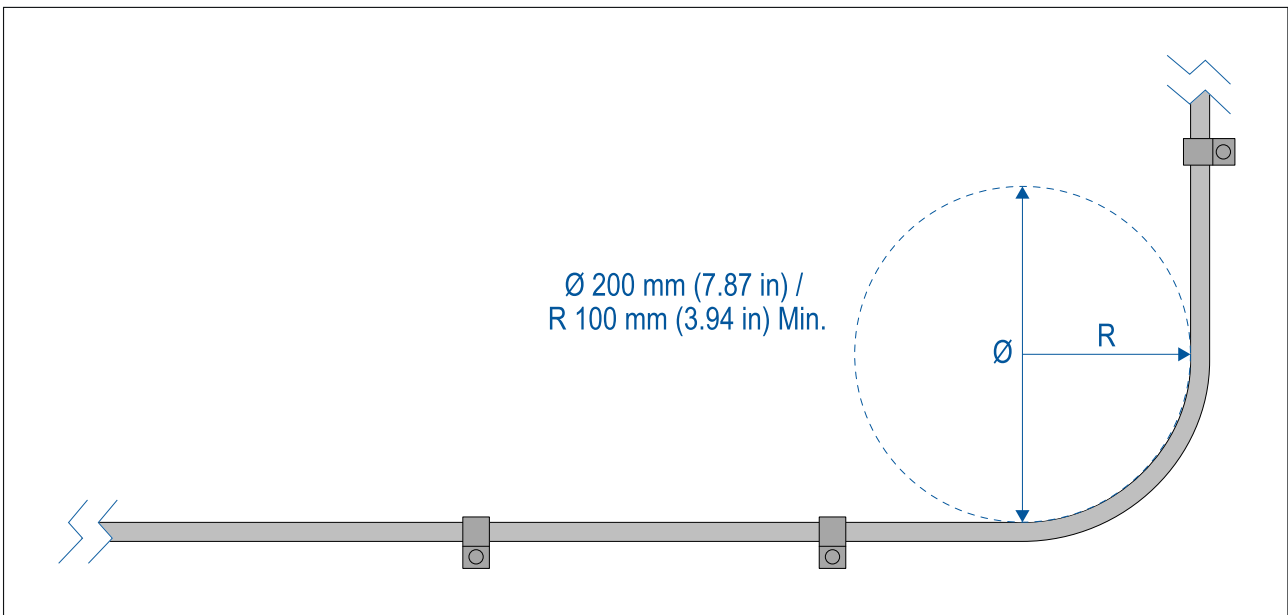

- Protect all cables from physical damage and exposure to heat. Use trunking or conduit where possible. Do NOT run cables through bilges or doorways, or close to moving or hot objects.
- Secure cables in place using cable clips or cable ties. Coil any excess cable and tie it out of the way.
- Where a cable passes through an exposed bulkhead or deckhead, use a suitable watertight feed-through.
- Do NOT run cables near to engines or fluorescent lights.
- Always route data cables as far away as possible from:
 - other equipment and cables,
 - high current carrying AC and DC power lines,
 - antennas.

Strain relief



Use adequate strain relief for cabling to ensure that connectors are protected from strain and will not pull out under extreme sea conditions.

Cable shielding


Ensure that cable shielding is not damaged during installation and that all cables are properly shielded.

8.2 Connections overview

Your product includes the following connections.
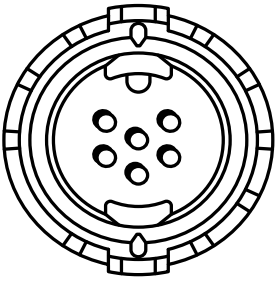
| Connection | Qty | Connects to: | Suitable cables |
|---|---|---|--|
|  | 1 | <ol style="list-style-type: none"> SeaTalkng® backbone NMEA 2000 backbone | <ol style="list-style-type: none"> SeaTalkng® spur cables SeaTalkng® to DeviceNet adaptor cable (A06045) |
|  | Can connect up to 32 Compatible Micronet (wireless) devices simultaneously. | | |

Connecting SeaTalkng® cables

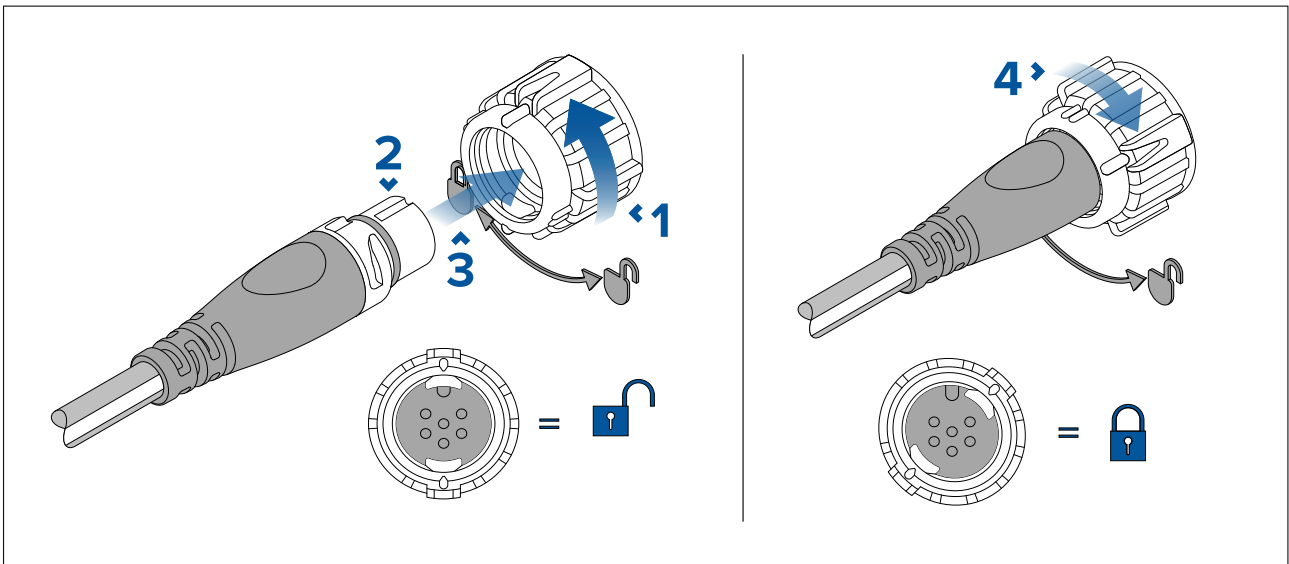

1. Rotate your product's SeaTalkng® connector locking collar counter clockwise, so that the connector is in the unlocked position.
2. Ensure the cable's connector is correctly oriented (groove pointing up).
3. Fully insert the cable connector..
4. Rotate the locking collar clockwise (2 clicks) until it is in the locked position.

SeaTalkng® product loading

The number of products that can be connected to a SeaTalkng® backbone depends on the current draw of each product and the physical length of the backbone cabling.

NMEA 2000 Load Equivalency Numbers (LEN) are used to express the amount of current that is drawn from SeaTalkng® products (1 LEN = 50 mA) The LEN for each product can be found in the product's Technical Specification.

LENs are used to determine the power connection point for the SeaTalkng® backbone.

8.3 SeaTalkng® power supply

Your product is supplied power via the SeaTalkng® backbone.

A SeaTalkng® backbone requires a single 12 V dc power supply. Power can be supplied to the SeaTalkng® backbone by one of the following methods:

- ⁽¹⁾direct connection to a 12 V dc battery

- connection via a 12 V dc distribution panel
- ⁽²⁾via an Autopilot Control Unit (ACU) (not ACU-100 or 150), or an SPX course computer (not SPX-5) that is connected to the SeaTalkng[®] backbone.
- for 24 V vessels, via a 5 amp, regulated, continuous 24 V dc to 12 V dc converter

Note:

- ⁽¹⁾The battery used for starting the vessel's engine(s) should NOT be used to power the SeaTalkng[®] backbone, as this can cause sudden voltage drops when the engines are started.
- ⁽²⁾The ACU-100, ACU-150 or SPX-5 products cannot be used to power the SeaTalkng[®] backbone.


The SeaTalkng[®] power cable (A06049) is used to connect the SeaTalkng backbone to your chosen 12 V dc power supply.

SeaTalkng[®] power connection point

The 12 V dc power supply is connected to a spur connection on the SeaTalkng[®] backbone.

Large systems

If the backbone length is greater than 60 m (197 ft), the power connection point should be connected at a point that creates a balanced current draw from each side of the backbone. The NMEA 2000 Load Equivalency Number (LEN) is used to determine the power connection point for the backbone.

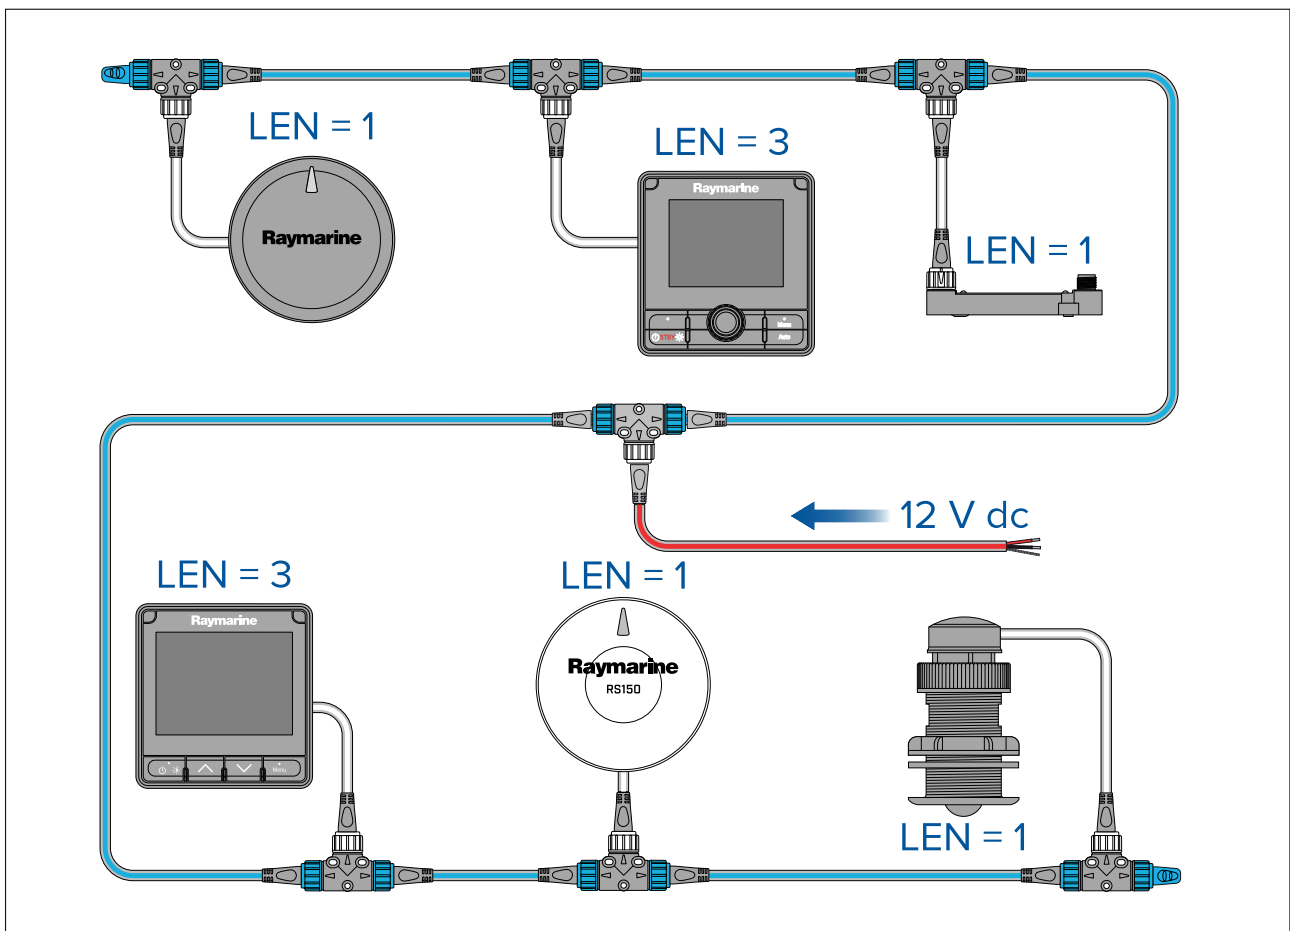

In the example above the backbone has an overall LEN of 10, so the optimum connection point would be to have 5 LEN either side of the connection point.

Small systems

If the backbone length is 60 m (197 ft) or less, the power connection point may be connected at any point in the backbone.

In-line fuse and thermal breaker ratings

The SeaTalkng[®] network's power supply requires an in-line fuse or thermal breaker to be fitted.

- In-line fuse rating: 5 A

- Thermal breaker rating : 3 A (refer to note below)

Note:

The suitable fuse rating for the thermal breaker is dependent on: 1) How many devices you have connected to your SeaTalkng® network; and 2) How many devices are sharing the same thermal breaker that your SeaTalkng® network is connected to.

SeaTalkng® system loading

The maximum loading / LEN for a SeaTalkng® system depends on the length of the backbone.

Unbalanced system loading:

- **Backbone Length:** 0 m (0 ft) to 20 m (66 ft) — **Maximum LEN:** 40
- **Backbone Length:** > 20 m (66 ft) to 40 m (131 ft) — **Maximum LEN:** 20
- **Backbone Length:** > 40 m (131 ft) to 60 m (197 ft) — **Maximum LEN:** 14

Balanced system loading:

- **Backbone Length:** 0 m (0 ft) to 60 m (197 ft) — **Maximum LEN:** 100
- **Backbone Length:** > 60 m (197 ft) to 80 m (262 ft) — **Maximum LEN:** 84
- **Backbone Length:** > 80 m (262 ft) to 100 m (328 ft) — **Maximum LEN:** 60
- **Backbone Length:** > 100 m (328 ft) to 120 m (394 ft) — **Maximum LEN:** 50
- **Backbone Length:** > 120 m (394 ft) to 160 m (525 ft) — **Maximum LEN:** 40
- **Backbone Length:** > 160 m (525 ft) to 200 m (656 ft) — **Maximum LEN:** 32

Power distribution — SeaTalkng®

Recommendations and best practice.

- Only use approved SeaTalkng® power cables. Do NOT use a power cable designed for, or supplied with, a different product.
- See below for more information on implementation for some common power distribution scenarios.


Important:

- When planning and wiring, take into consideration other products in your system, some of which (e.g. sonar modules) may place large power demand peaks on the vessel’s electrical system, which may impact the voltage available to other products during the peaks.
- The information provided below is for guidance only, to help protect your product. It covers common vessel power arrangements, but does NOT cover every scenario. If you are unsure how to provide the correct level of protection, please consult an authorized Raymarine dealer or a suitably qualified professional marine electrician.

SeaTalkng® power cable (A06049)


When powering the SeaTalkng® bus (backbone or 5–way connector) from a battery or distribution panel, the A06049 power cable must be used.

All 3 cores of the cable must be connected correctly:

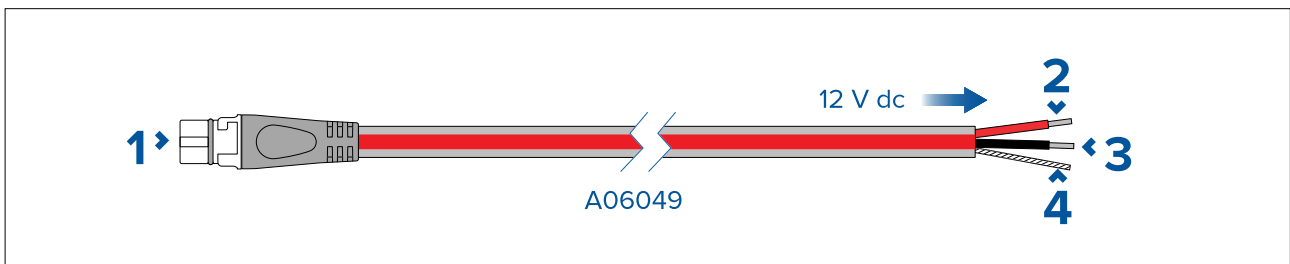


1. SeaTalkng® spur connector — connects to spur connection on the SeaTalkng® network.
2. + Red (positive) wire — connects to battery or distribution panel positive terminal.
3. – Black (negative) wire — connects to battery or distribution panel negative terminal.
4. Ground wire connects to RF ground point, if no ground point is available connect to the battery negative (-) terminal.

Implementation — connection to distribution panel

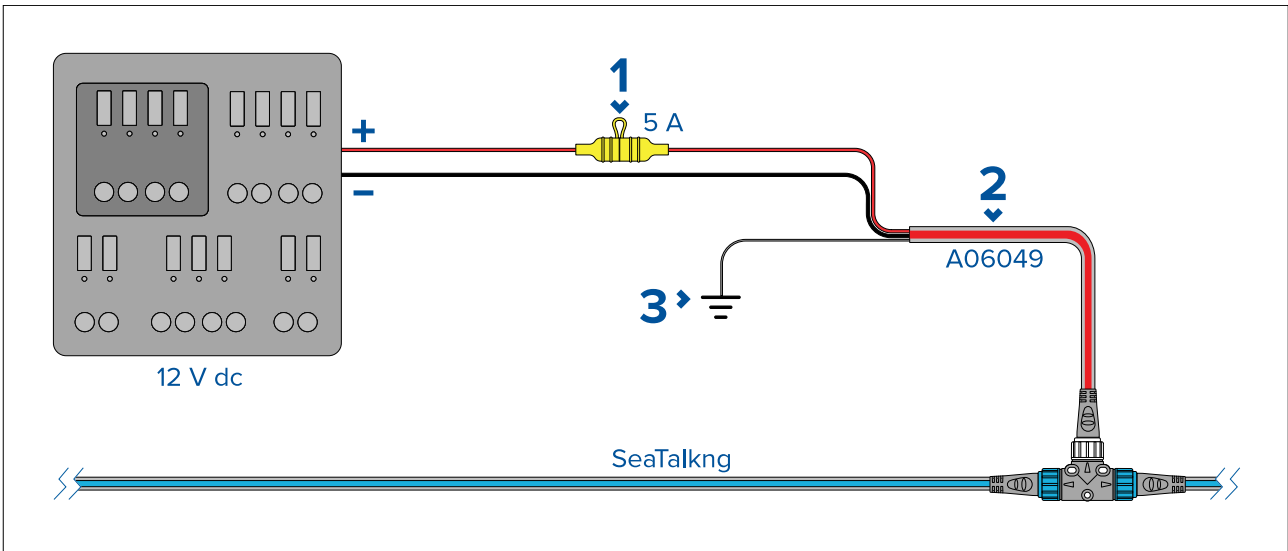

1. Waterproof fuse holder with 5 A inline fuse must be fitted (not supplied).
 2. SeaTalkng[®] power cable.
 3. RF Ground connection point for drain wire.
- Ideally, the SeaTalkng[®] power cable should be connected to a suitable breaker or switch on the vessel's distribution panel or factory-fitted power distribution point. It is recommended that a 5 A inline fuse is fitted to the red (positive) wire of the SeaTalkng[®] power cable.
 - The distribution point should be fed from the vessel's primary power source by 8 AWG (8.36 mm²) cable.
 - Ideally, all equipment should be wired to individual suitably-rated thermal breakers or fuses, with appropriate circuit protection. Where this is not possible and more than 1 item of equipment shares a breaker, use individual in-line fuses for each power circuit to provide the necessary protection.

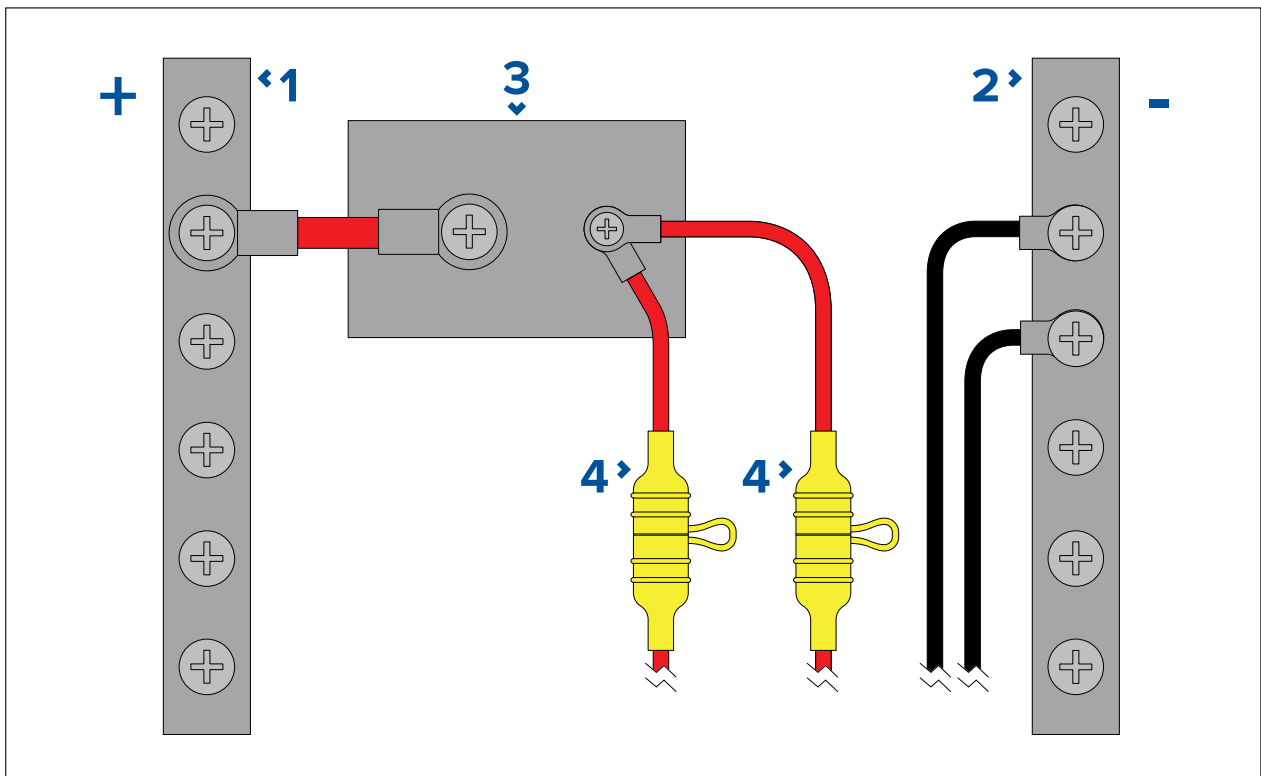


1. Positive (+) bar
2. Negative (-) bar
3. Circuit breaker
4. Waterproof fuse holder with 5 A inline fuse must be fitted (not supplied).

Important:

Observe the recommended fuse / breaker ratings provided in the product's documentation, however be aware that the suitable fuse / breaker rating is dependent on the number of devices being connected.

Implementation — direct connection to battery

- SeaTalkng® Where connection to a power distribution panel is not possible, the power cable may be connected to the vessel's battery..
- You **MUST** fit a suitably rated fuse or breaker between the red wire and the battery's positive terminal.
- Refer to the inline fuse ratings provided in the product's documentation.
- If you need to extend the length of the power cable, ensure you use suitably rated cable and that sufficient power (12 V dc) is available at the SeaTalkng® backbone's power connection.

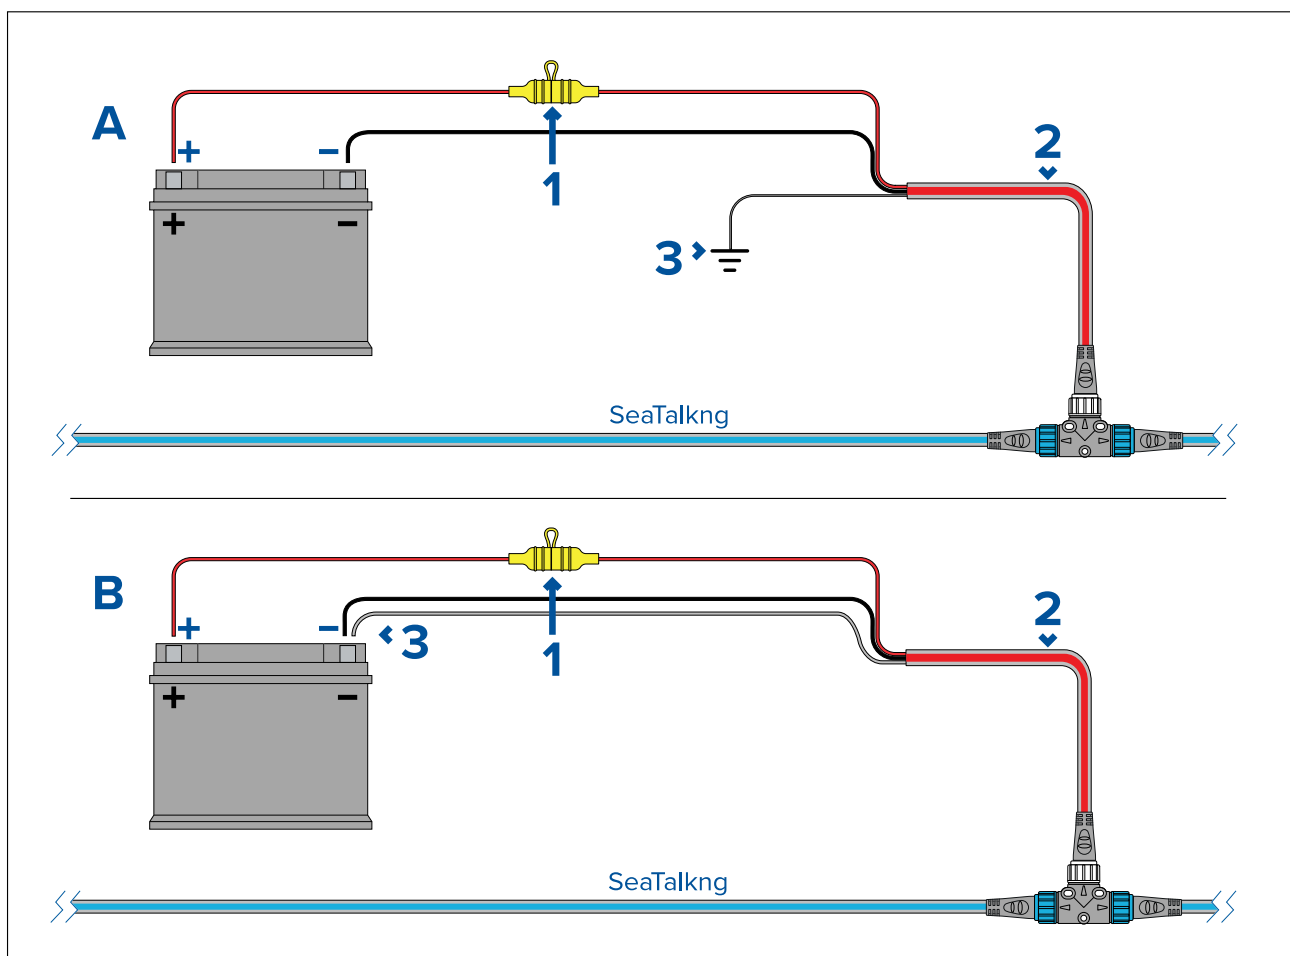

1. Waterproof fuse holder with 5 A inline fuse must be fitted (not supplied).
2. SeaTalkng® power cable.
3. Drain wire connection point.

Battery connection scenario A:

Suitable for a vessel with a common RF ground point. In this scenario, the power cable's drain wire should be connected to the vessel's common RF ground point.

Battery connection scenario B:

Suitable for a vessel without a common RF ground point. In this scenario the power cable's drain wire should be connected directly to the battery's negative terminal.

SeaTalkng® Power cable extension

If you need to extend the length of the SeaTalkng® power cable, ensure you use suitably rated cable and that sufficient power is available at the SeaTalkng® backbone's power connection point:

- For power cable extensions, a **minimum** wire gauge of 16 AWG (1.31 mm²) is recommended. For cable runs longer than 15 meters, you may need to consider a thicker wire gauge (e.g. 14 AWG (2.08 mm²), or 12 AWG (3.31 mm²)).
- An important requirement for all lengths of power cable (including any extension) is to ensure that there is a continuous **minimum** voltage at the product's power connector of 10.8 V dc, with a fully flat battery at 11 V dc.

Important:

Be aware that some products in your system (such as sonar modules) can create voltage peaks at certain times, which may impact the voltage available to other products during the peaks.


More information

It is recommended that best practice is observed in all vessel electrical installations, as detailed in the following standards:

- BMEA Code of Practice for Electrical and Electronic Installations in Boats
- NMEA 0400 Installation Standard
- ABYC E-11 AC & DC Electrical Systems on Boats
- ABYC A-31 Battery chargers and Inverters
- ABYC TE-4 Lightning Protection

Sharing a breaker

Where more than 1 piece of equipment shares a breaker you must provide protection for the individual circuits. E.g. by connecting an in-line fuse for each power circuit.

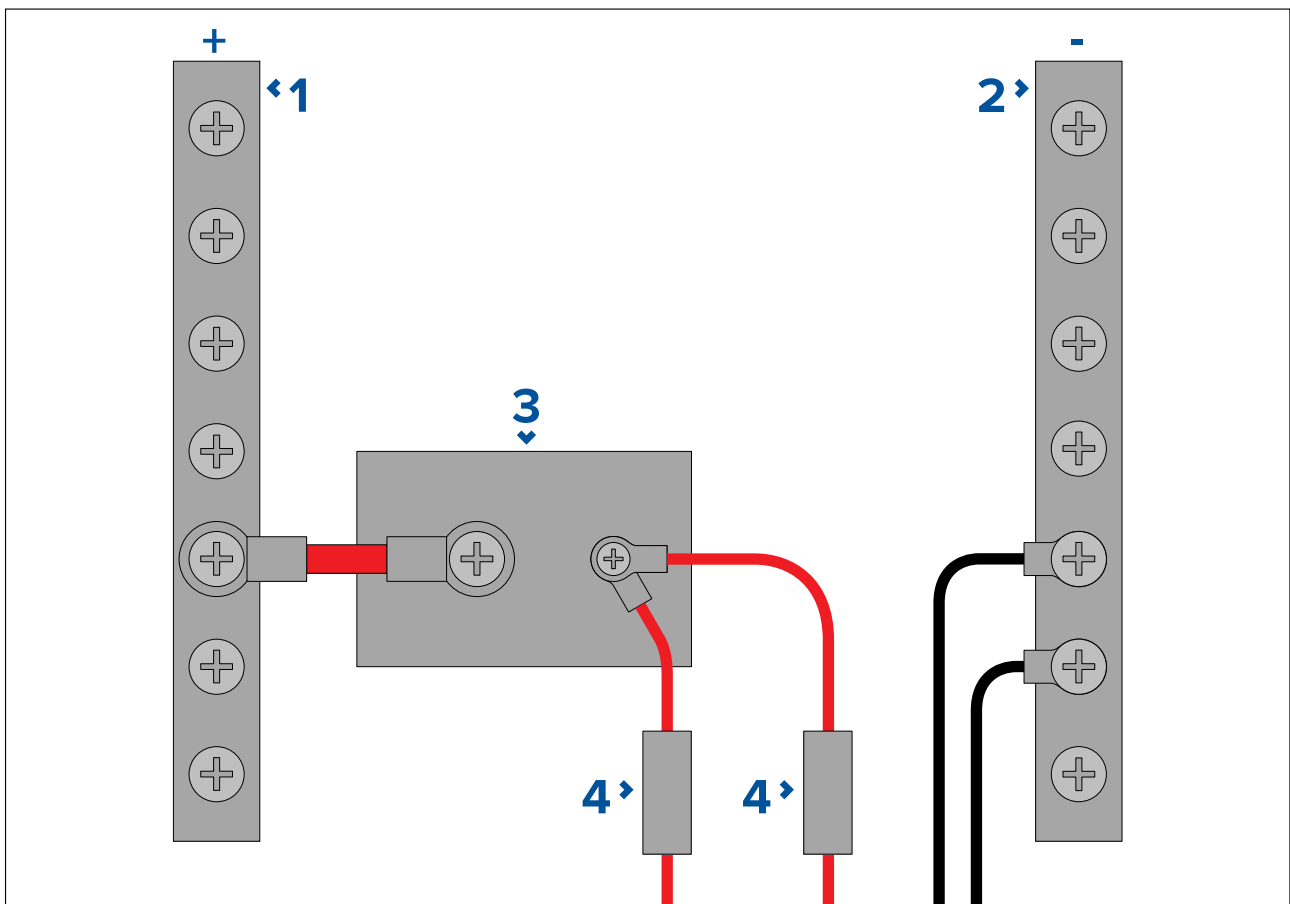

| | |
|---|------------------|
| 1 | Positive (+) bar |
| 2 | Negative (-) bar |
| 3 | Circuit breaker |
| 4 | Fuse |

Where possible, connect individual items of equipment to individual circuit breakers. Where this is not possible, use individual in-line fuses to provide the necessary protection.

**Warning: Product grounding**

Before applying power to this product, ensure it has been correctly grounded, in accordance with the instructions provided.


**Warning: Positive ground systems**

Do not connect this unit to a system which has positive grounding.

8.4 Network examples

The illustrations below are provided as examples only.

Example system with wireless hull transmitter

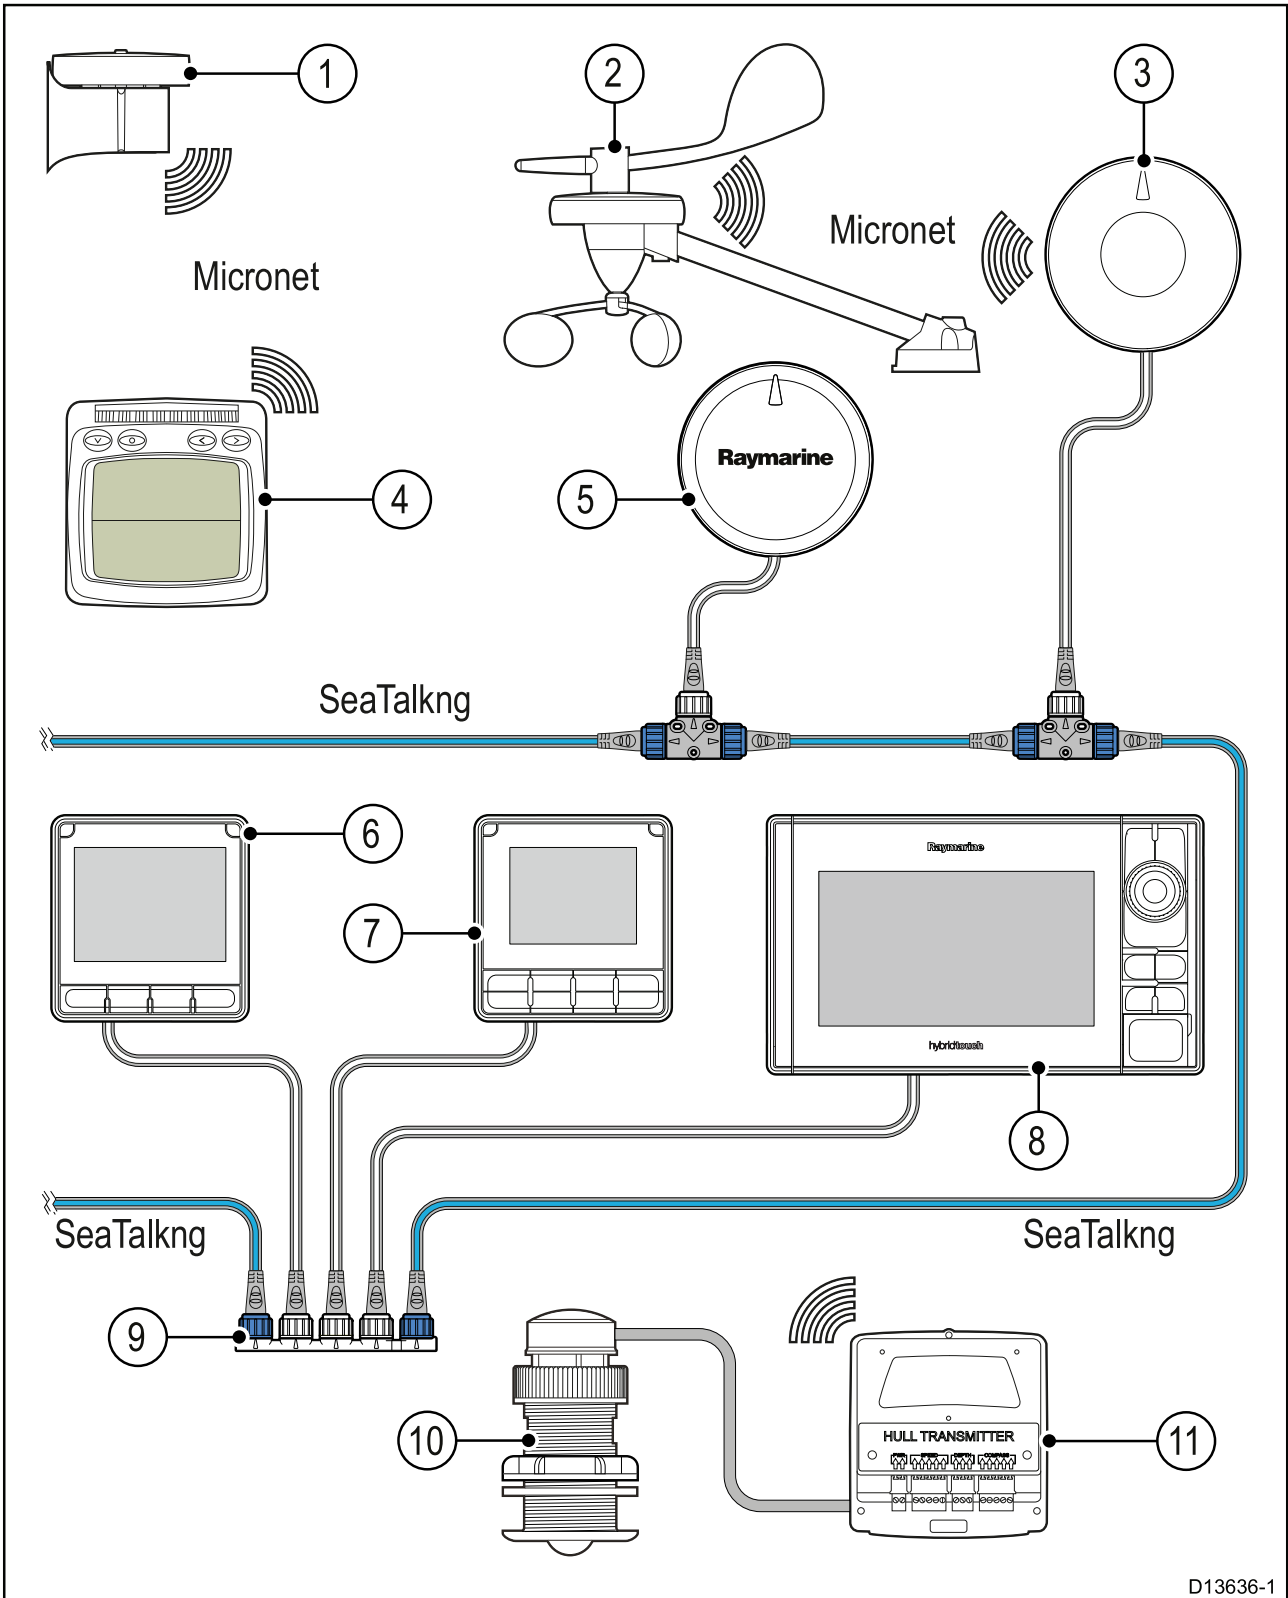


D13636-1

1. Mast rotation sensor
2. Micronet Wind transducer
3. Micro-Talk gateway
4. Wireless instrument
5. Heading source (e.g.: Evolution EV sensor)
6. SeaTalkng® instrument

7. SeaTalkng® Pilot Controller
8. SeaTalkng® MFD
9. SeaTalkng® 5-way block
10. DST transducer
11. Wireless hull transmitter

Example system with SeaTalkng® DST transducer

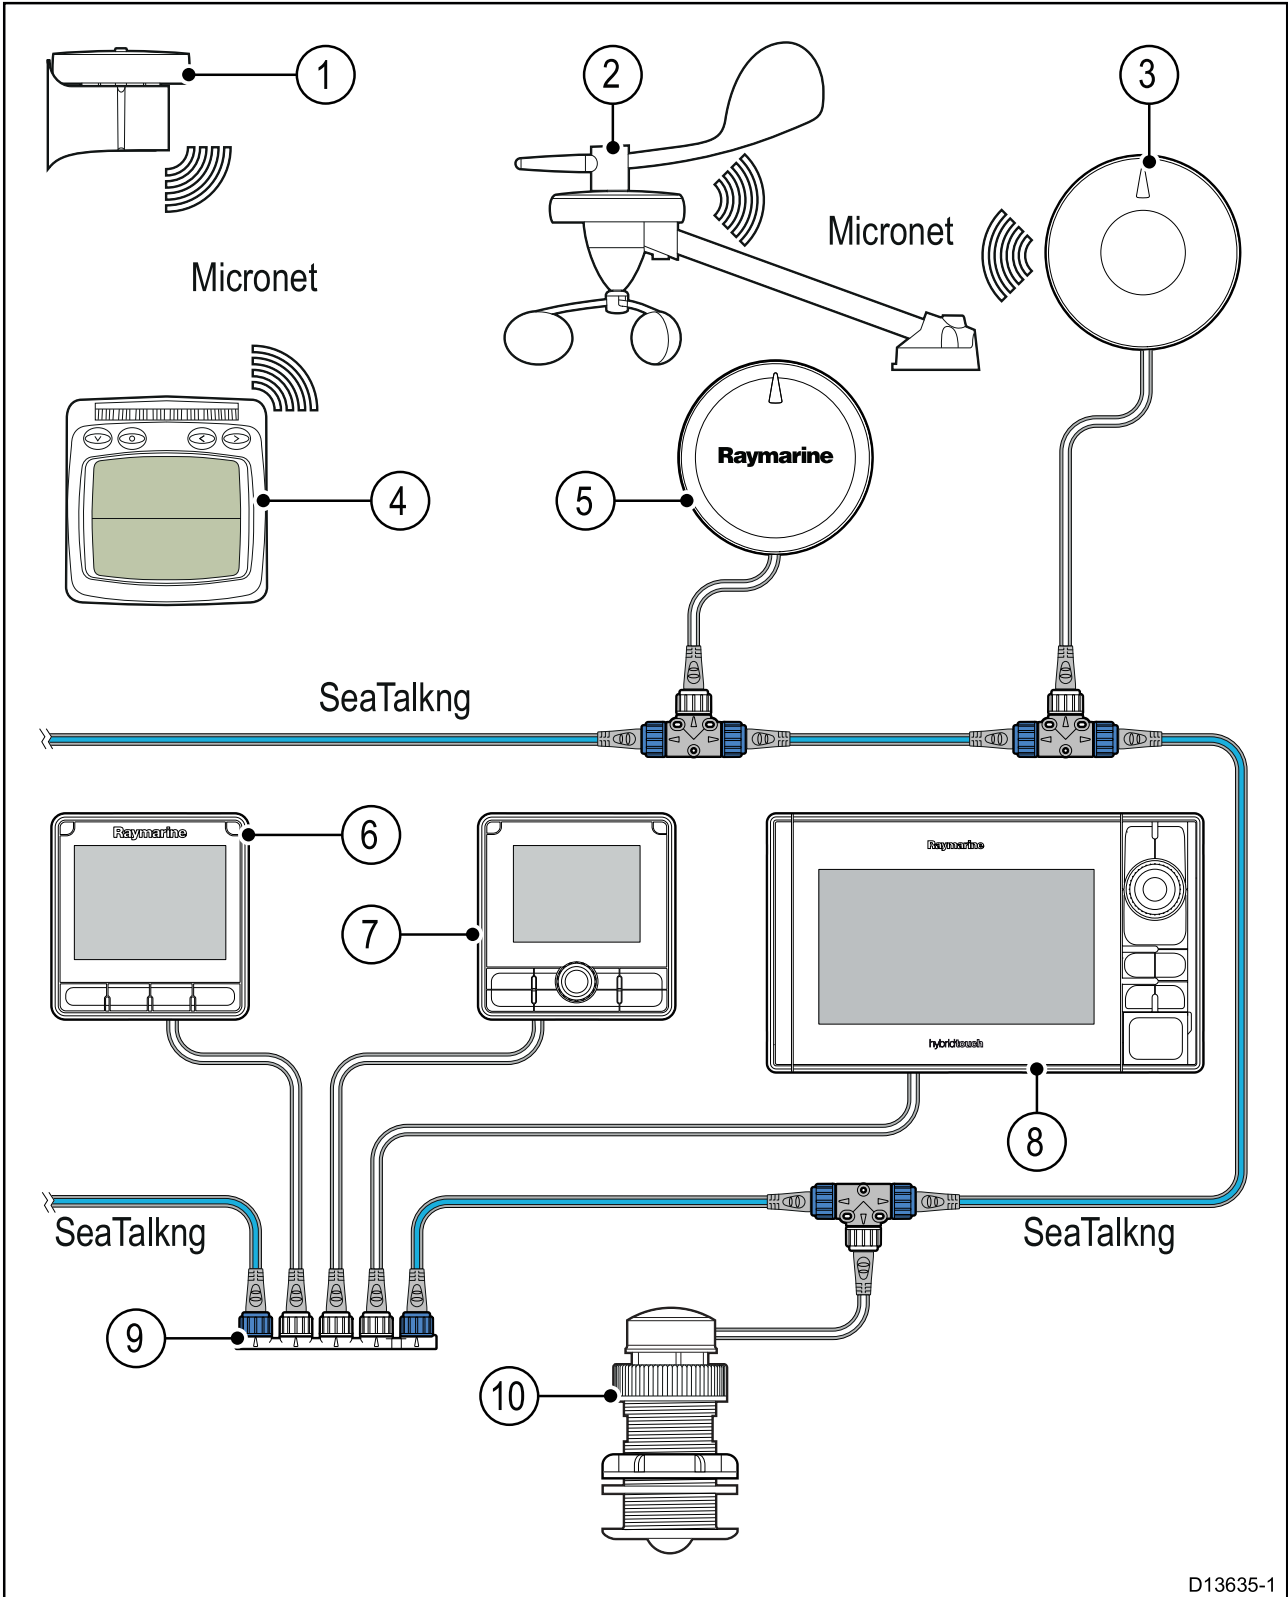

D13635-1

1. Mast rotation sensor
2. Micronet Wind transducer
3. Micro-Talk gateway

4. Wireless instrument
5. Heading source (e.g.: Evolution EV sensor)
6. SeaTalkng[®] instrument
7. SeaTalkng[®] Pilot Controller
8. SeaTalkng[®] MFD
9. SeaTalkng[®] 5-way block
10. DST transducer

Chapter 9: System operation and setup

Chapter contents

- [9.1 Transducer calibration on page 54](#)
- [9.2 Autonetworking on page 54](#)
- [9.3 Powering the unit on and off on page 57](#)
- [9.4 Data damping on page 57](#)

9.1 Transducer calibration

The Micro-Talk gateway combines SeaTalkng® and MicroNet networks together.

Prior to powering on the Micro-Talk gateway for the first time you must ensure that all transducers are calibrated. This is particularly important with the Mast rotation device, which must be linearized **after** and independently of your primary heading source. This means 2 linearizations are required, the first for the heading source and second for the Mast rotation device, which uses the linearized heading source as an input.

Please refer to the documentation that accompanied your products for calibration/linearization instructions.






9.2 Autonetworking

Micronet wireless products are networked together using the **Autonetworking** procedure.

Autonetworking connects compatible wireless products, within range, to the same Micronet network.

Autonetworking – compatible Micronet displays

Autonetworking can be initiated using one of the compatible Micronet displays shown below.
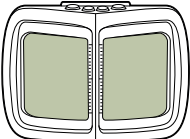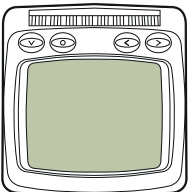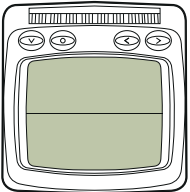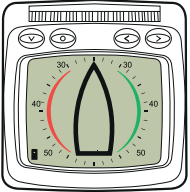
| Product | Description |
|---|---|
|  | T070 Race Master Display |
|  | T110 Multifunction wireless display |
|  | T111 Multifunction wireless dual display |
|  | T112 Multifunction wireless analogue display |
|  | T113 Multifunction wireless remote display |

Performing Autonetworking


Follow the steps below to add new Micronet products to an existing system, or create a new system from multiple boxes.



Note:


- Autonetworking should be performed before new products are mounted.
- The following procedure is NOT required when creating a new system with products that have been supplied in a single box.
- You will need to choose a display capable of initiating Autonetworking.
- If you have an existing system then a capable display from this system should be chosen.

1. Connect products that require an external power source to a 12 V dc power supply.
2. Place all **New** products within 300 mm (11.8 in) of the display you have chosen to perform Autonetworking.

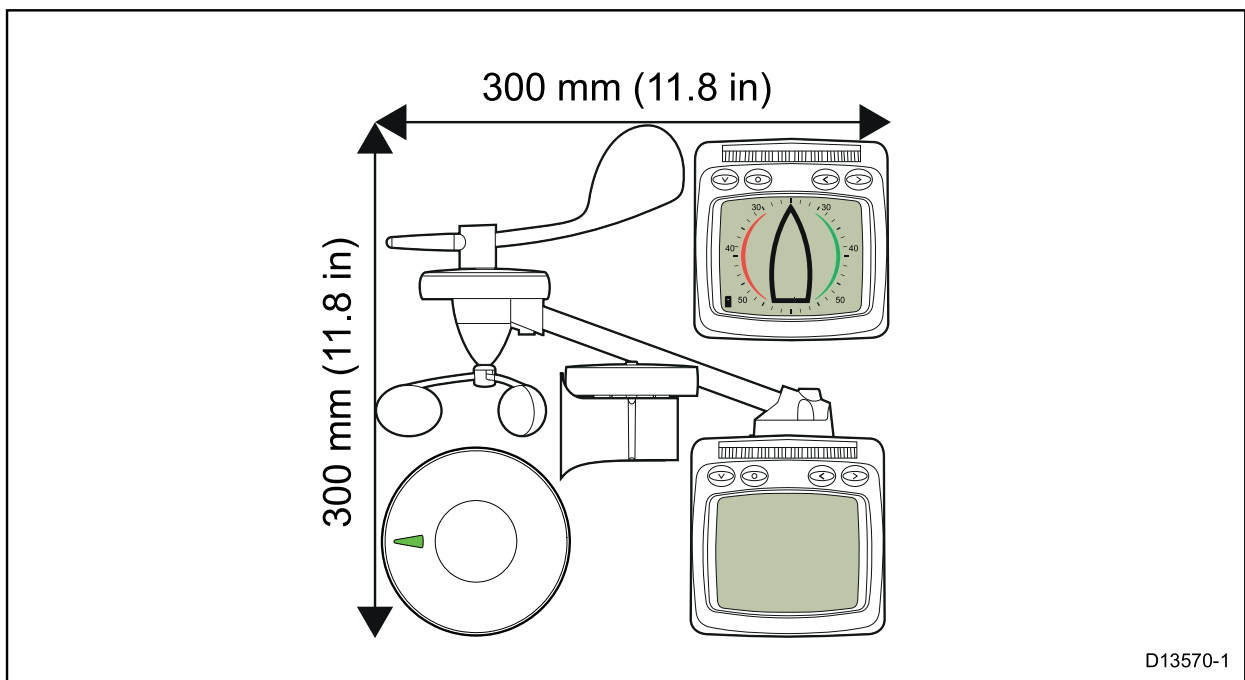
Existing networked products do not need to be included.




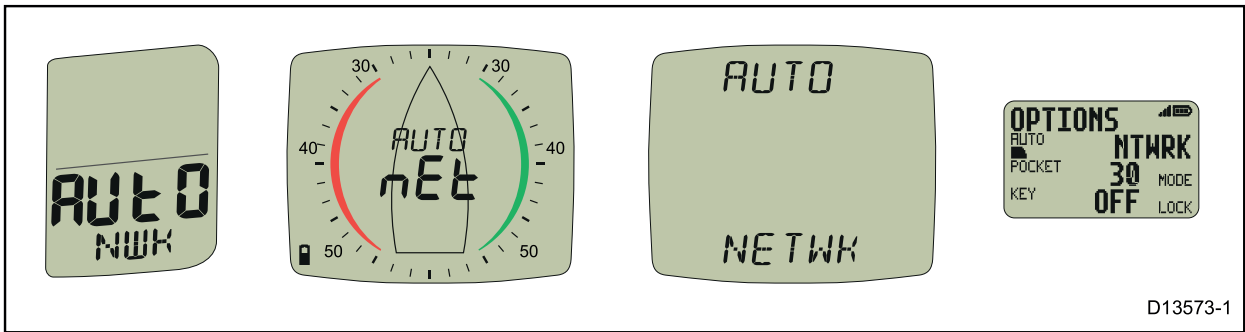
3. Ensure all products are powered off.
4. Power on the chosen display, by pressing and holding the  **Down/Power** button for 2 seconds.
5. Ensure the chosen display is not showing a 'Racer Timer' or 'Wind Shift' page.
6. Press the  **Set Up** button for 2 seconds to display the Setup menu.

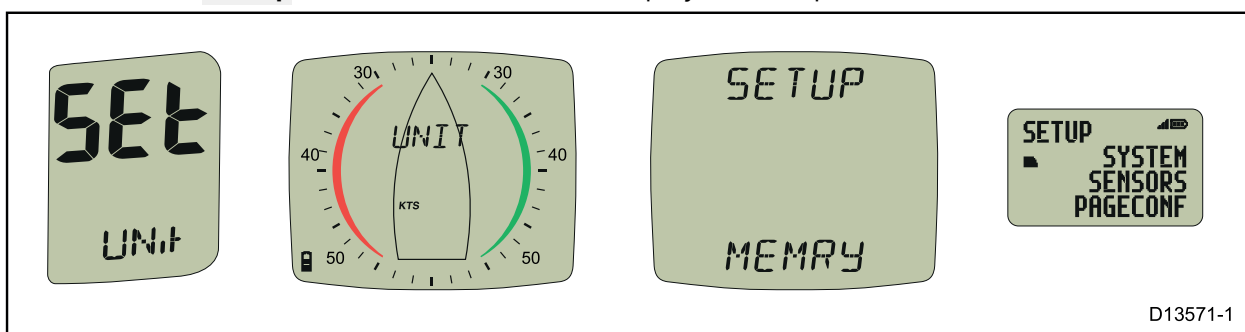


7. Press the  **Down/Power** button until the Options page is displayed.

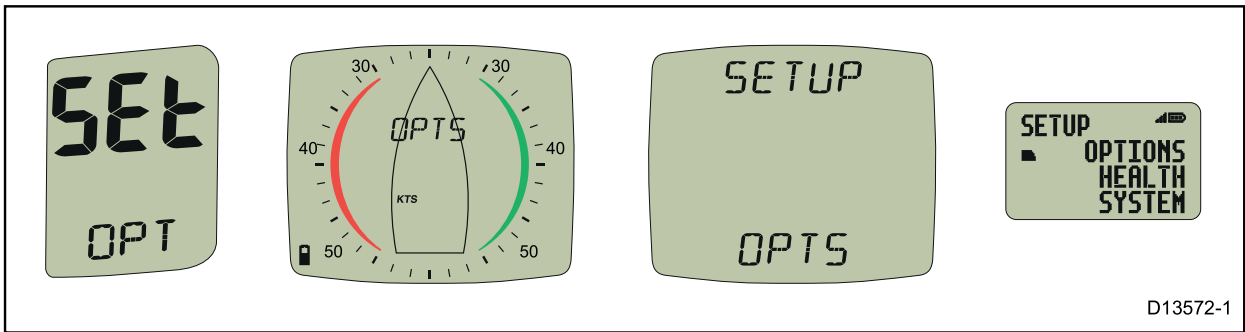


8. Press the  **Right** button to display the Autonetworking page.




9. Press the  **Set up** button to begin the Autonetworking procedure.


A countdown will begin and the chosen display shows 'WAIT' and then 'JOIN' as devices join the network.

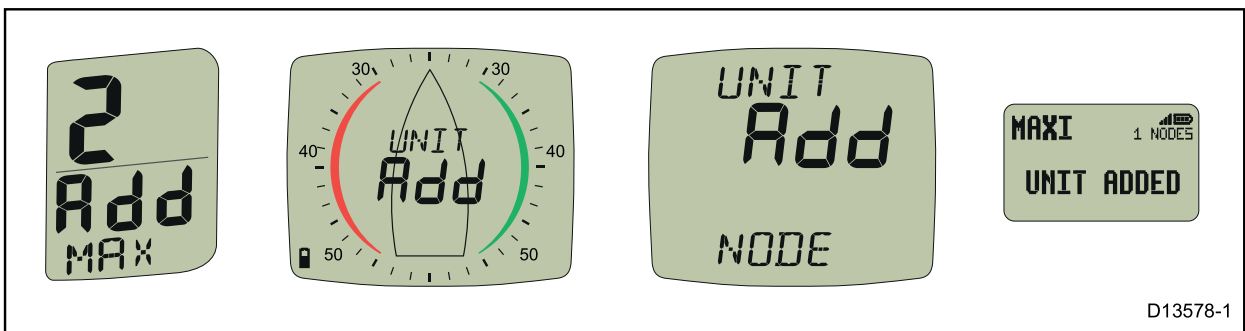

10. In the last 30 seconds of the countdown some displays may switch on and 'JOIN' will flash onscreen, to allow these displays to join the network follow the steps below:

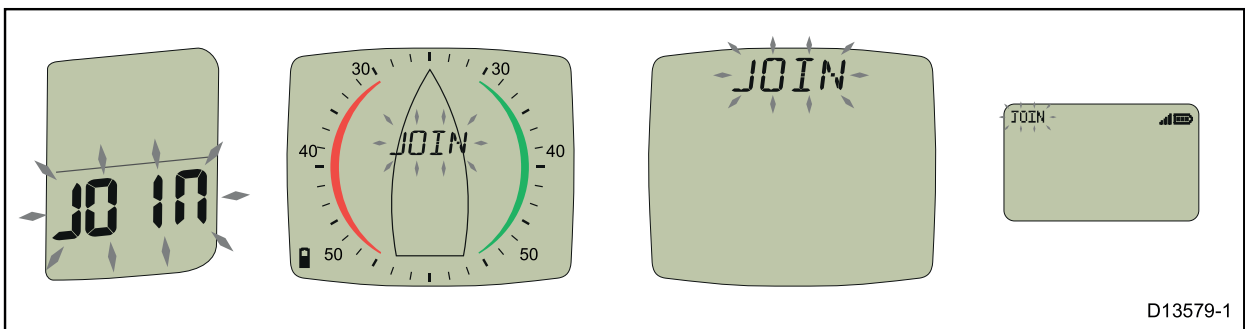


- i. Press any button on a display that has 'JOIN' flashing onscreen.
The Display will show 'JOIN YES'

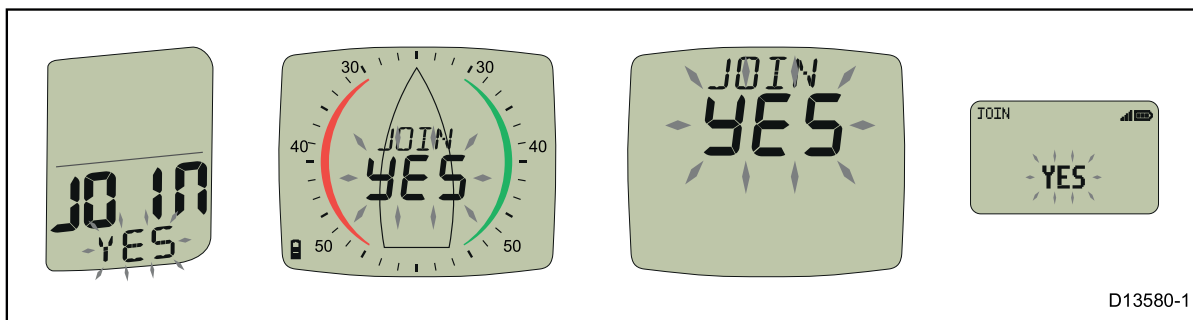

- ii. Confirm by pressing any button on the same display.
The display will show 'DONE'.

If confirmation is not completed within 25 seconds, 'FAIL' will be shown which means the display has not joined the network.

When the countdown is complete, the chosen display returns to the Autonetworking page. Press and hold the  **Set up** button for 2 seconds to return to normal operation.

11. Test the system:

- i. Switch off the chosen display.
- ii. Switch on the chosen display.

If some units do not power up, check that all new units are within 300 mm (11.8 in) of the chosen display and if required, are connected to a power source.

- 12. Repeat the steps above until all units have joined the network.
- 13. If you are replacing older units, remove them from the vessel.
- 14. Ensure all units are working correctly before mounting them.

Product identification on Micronet

The Micro-Talk gateway is identified differently during the Autonetworking process than when checking the Health pages from a Micronet display.

During Autonetworking the gateway is identified as an NMEA 2000 device (i.e.: 2000, N2000, or N 2000)

When checking the Health pages from a Micronet display the gateway is identified as Type 7 device (i.e: TYP7, TYPE7 or TYPE 7.

9.3 Powering the unit on and off

Powering on

The Micro-Talk unit will automatically power on when power is applied to the SeaTalkng[®] network that the unit is connected to.

Powering off

The Micro-Talk unit is powered off when the SeaTalkng[®] network it is connected to is powered off.

9.4 Data damping

Data damping affects the responsiveness of display data to changes in the data received from connected transducers/sensors. A less responsive setting removes data fluctuations and provides a more stable reading. A more responsive setting results in a more dynamic update to changes to the data.

Response settings are available on both MicroNet and SeaTalkng[®] networks to control data damping.

As the **Response** settings on each network are independent of each other, there is a risk that data can be double damped, once on MicroNet and then again on SeaTalkng[®]. To minimize the effect of double damping, you should reduce the relevant **Response** setting on MicroNet displays and/or increase the **Display Response** setting on SeaTalkng[®] displays.

Note: It is recommended that MicroNet **Response** settings are set to either Slow, Medium or Fast rather than Auto.

To determine whether you should make the damping changes on SeaTalkng[®] or MicroNet, the user should consider the other products in their networks. For example:

- if an Autopilot is present on the SeaTalkng[®] network and the wind data source is on the MicroNet network, then it is recommended that the **Response** setting for wind data is set to Fast, so that the Autopilot receives more dynamic data.
- if MicroNet displays are used as the primary method for displaying data, in order to avoid rapidly changing data values, it is recommended that you use a lower **Response** setting for data sources that originate on the MicroNet network.

Note:

Due to the effects of damping, there may be differences in the data shown on MicroNet displays to that shown on SeaTalkng[®] displays. You can manually alter the **Response** settings on your displays individually for each data type (i.e. wind, depth, Speed and Heading) to provide data update rates that meet your requirements.

Chapter 10: Troubleshooting

Chapter contents

- [10.1 Troubleshooting on page 60](#)
- [10.2 LED Diagnostics on page 61](#)


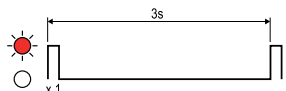
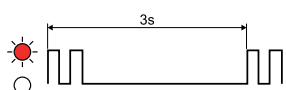
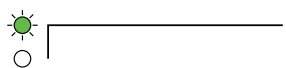
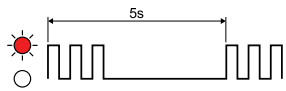
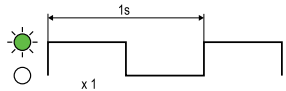
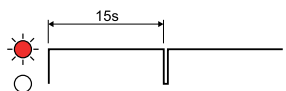
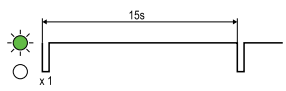
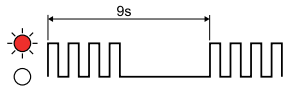
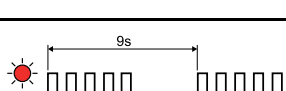

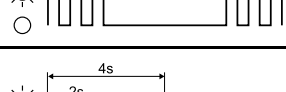
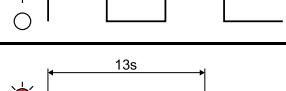
10.1 Troubleshooting

The troubleshooting information provides possible causes and corrective action required for common problems associated with installation and operation of your product.

Before packing and shipping, all Raymarine products are subjected to comprehensive testing and quality assurance programs. If you do experience problems with your product this section will help you to diagnose and correct problems to restore normal operation.

If after referring to this section you are still having problems with your product, please refer to the Technical support section of this manual for useful links and Raymarine Product Support contact details.

10.2 LED Diagnostics

| LED Sequence | LED Color | Status | Action |
|---|-----------|---|---|
|  | Red | Unit powering up | None |
|  | Red | Power up failed | Power cycle unit |
|  | Red | Multiple Micro-Talk gateways detected on SeaTalkng® | Remove all but 1 Micro-Talk gateway from SeaTalkng® |
|  | Green | SeaTalkng® powered up, Micronet powering up | None |
|  | Red | Micronet connection failed | Power cycle the unit |
|  | Green | Micronet joining network | None |
|  | Red | Micronet searching for network | None |
|  | Green | Normal operation | None |
|  | Red | SeaTalkng® connection lost, Micronet will revert to searching mode after 30 seconds | 1. Power cycle unit 2. Check network connections |
|  | Red | No data being received on SeaTalkng®, Micronet will revert to searching mode after 30 seconds | 1. Power cycle unit 2. Check network connections |
|  | Amber | Device failed to commence software update process. | Power cycle unit and retry the update |
|  | Green | Software update in progress | None |
|  | Red | Software update failed | Power cycle unit and retry the update |

Chapter 11: Maintenance

Chapter contents

- 11.1 Service and maintenance on page 64
- 11.2 Routine equipment checks on page 64
- 11.3 Product cleaning on page 64

11.1 Service and maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized Raymarine dealers. Unauthorized repair may affect your warranty.

11.2 Routine equipment checks

It is recommended that you perform the following routine checks, on a regular basis, to ensure the correct and reliable operation of your equipment:

- Examine all cables for signs of damage or wear and tear.
- Check that all cables are securely connected.

11.3 Product cleaning

Best cleaning practices.

When cleaning products:

- Switch off power supply.
- Use a clean damp cloth to wipe clean.
- Do NOT use: abrasive, acidic, ammonia, solvent or other chemical based cleaning products.
- Do NOT use a jet wash.

Chapter 12: Technical support

Chapter contents

- 12.1 Raymarine product support and servicing on page 66
- 12.2 Learning resources on page 67

12.1 Raymarine product support and servicing

Raymarine provides a comprehensive product support service, as well as warranty, service, and repairs. You can access these services through the Raymarine website, telephone, and e-mail.

Product information

If you need to request service or support, please have the following information to hand:

- Product name.
- Product identity.
- Serial number.
- Software application version.
- System diagrams.

You can obtain this product information using diagnostic pages of the connected MFD.

Servicing and warranty

Raymarine offers dedicated service departments for warranty, service, and repairs.

Don't forget to visit the Raymarine website to register your product for extended warranty benefits:

<http://www.raymarine.co.uk/display/?id=788>.

United Kingdom (UK), EMEA, and Asia Pacific:

- E-Mail: emea.service@raymarine.com
- Tel: +44 (0)1329 246 932

United States (US):

- E-Mail: rm-usrepair@flir.com
- Tel: +1 (603) 324 7900

Web support

Please visit the "Support" area of the Raymarine website for:

- **Manuals and Documents** — <http://www.raymarine.com/manuals>
- **Technical support forum** — <http://forum.raymarine.com>
- **Software updates** — <http://www.raymarine.com/software>

Worldwide support

United Kingdom (UK), EMEA, and Asia Pacific:

- Help desk: <https://raymarine.custhelp.com/app/ask>
- Tel: +44 (0)1329 246 777

United States (US):

- Help desk: <https://raymarine.custhelp.com/app/ask>
- Tel: +1 (603) 324 7900 (Toll-free: +800 539 5539)

Australia and New Zealand (Raymarine subsidiary):

- E-Mail: aus.support@raymarine.com
- Tel: +61 2 8977 0300

France (Raymarine subsidiary):

- E-Mail: support.fr@raymarine.com
- Tel: +33 (0)1 46 49 72 30

Germany (Raymarine subsidiary):

- E-Mail: support.de@raymarine.com
- Tel: +49 40 237 808 0

Italy (Raymarine subsidiary):

- E-Mail: support.it@raymarine.com
- Tel: +39 02 9945 1001

Spain (Authorized Raymarine distributor):

- E-Mail: sat@azimut.es

- Tel: +34 96 2965 102

Netherlands (Raymarine subsidiary):

- E-Mail: support.nl@raymarine.com
- Tel: +31 (0)26 3614 905

Sweden (Raymarine subsidiary):

- E-Mail: support.se@raymarine.com
- Tel: +46 (0)317 633 670

Finland (Raymarine subsidiary):

- E-Mail: support.fi@raymarine.com
- Tel: +358 (0)207 619 937

Norway (Raymarine subsidiary):

- E-Mail: support.no@raymarine.com
- Tel: +47 692 64 600

Denmark (Raymarine subsidiary):

- E-Mail: support.dk@raymarine.com
- Tel: +45 437 164 64

Russia (Authorized Raymarine distributor):

- E-Mail: info@mikstmarine.ru
- Tel: +7 495 788 0508

Viewing product information

With your MFD Homescreen displayed:

1. Select **Set-up**.
2. Select **Maintenance**.
3. Select **Diagnostics**.
4. Select **Select Device**.
5. Select the relevant product from the list.

The Diagnostics page is displayed.

12.2 Learning resources

Raymarine has produced a range of learning resources to help you get the most out of your products.

Video tutorials

Raymarine official channel on YouTube:

- [YouTube](#)

Training courses

Raymarine regularly runs a range of in-depth training courses to help you make the most of your products. Visit the Training section of the Raymarine website for more information:

- <http://www.raymarine.co.uk/view/?id=2372>

Technical support forum

You can use the Technical support forum to ask a technical question about a Raymarine product or to find out how other customers are using their Raymarine equipment. The resource is regularly updated with contributions from Raymarine customers and staff:

- <https://raymarine.custhelp.com/app/home>

Chapter 13: Technical specification

Chapter contents

- [13.1 Technical specification on page 70](#)

13.1 Technical specification

| | |
|---|---|
| Nominal supply voltage | 12 V dc (Supplied by SeaTalkng®) |
| Operating voltage range | 9 V dc to 16 V dc (protected up to 32 V dc) |
| Power consumption | 25 mA at nominal supply voltage |
| Operating frequency (MicroNet) | <ul style="list-style-type: none"> • 869.8 MHz for products operating in the UK, Europe or Africa • 915.9 MHz for products operating in the USA, Canada, South America and Australia |
| Environmental | <p>Installation environment</p> <ul style="list-style-type: none"> • Operating temperature: -20 °C to +55 °C (-4 °F to 131 °F) • Storage temperature: -30 °C to +70 °C (-22 °F to 158 °F) • Relative humidity: max 93% • Waterproof to IPx6 and IPx7 |
| Supported connection protocols | <ul style="list-style-type: none"> • SeaTalkng® / NMEA 2000 (via DeviceNet adaptor) • Micronet (wireless) |
| LEN (refer to SeaTalkng® Reference manual for more information) | 1 |

Chapter 14: Spares and accessories

Chapter contents

- [14.1 Accessories on page 72](#)
- [14.2 SeaTalkng® cabling components on page 72](#)
- [14.3 SeaTalkng® cables and accessories on page 72](#)

14.1 Accessories

The following accessories are available:

Accessories

| Item | Part number |
|-------------------------------------|-------------|
| Pole/rail mounting adaptor kit | A80370 |
| 6 m SeaTalkng white spur cable | A06072 |
| Deck mounting (Clamshell/Riser) kit | A80437 |

14.2 SeaTalkng[®] cabling components

SeaTalkng[®] cabling components and their purposes.

| Connection / Cable | Notes |
|--|--|
| Backbone cable (various lengths) | The main cable carrying data. Spurs from the backbone are used to connect SeaTalkng [®] devices. |
| T-piece connector | Used to make junctions in the backbone to which devices can then be connected. |
| Terminator | Required at either end of the backbone. |
| Inline terminator | Used to connect a spur cable directly to the end of a backbone; useful for longer cable runs. |
| Spur cable | Used to connect devices to the backbone. Devices may be daisy chained or connected directly to the T-pieces. |
| SeaTalkng [®] 5-way connector | Used to branch, split, or make additional connections in SeaTalk or SeaTalkng [®] networks. |
| Blanking plug | Inserted into unused spur connector positions in a 5-way connector or T-piece. |


14.3 SeaTalkng[®] cables and accessories

SeaTalkng[®] cables and accessories for use with compatible products.

SeaTalkng[®] kits

SeaTalkng kits enable you to create a simple SeaTalkng backbone.


Starter kit (T70134) consists of:

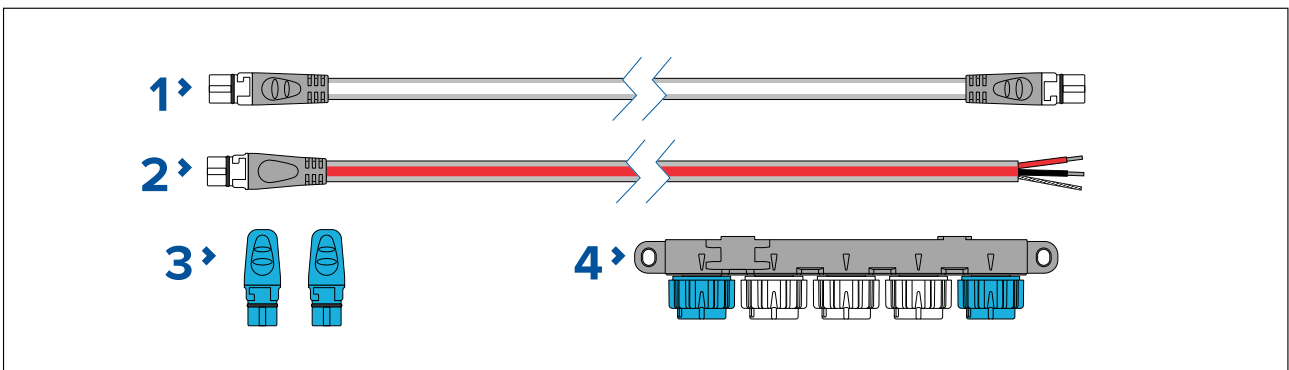

- 1 x 3 m (9.8 ft) Spur cable (**A06040**). Used to connect device to the SeaTalkng backbone.
- 1 x 2 m (6.6 ft) Power cable (**A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.
- 2 x Backbone terminators (**A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.


- 1 x 5-Way connector (**A06064**). Each connector block allows connection of up to 3 SeaTalkng devices. Multiple connector blocks can be 'daisy chained' together.

Backbone kit (A25062) consists of:

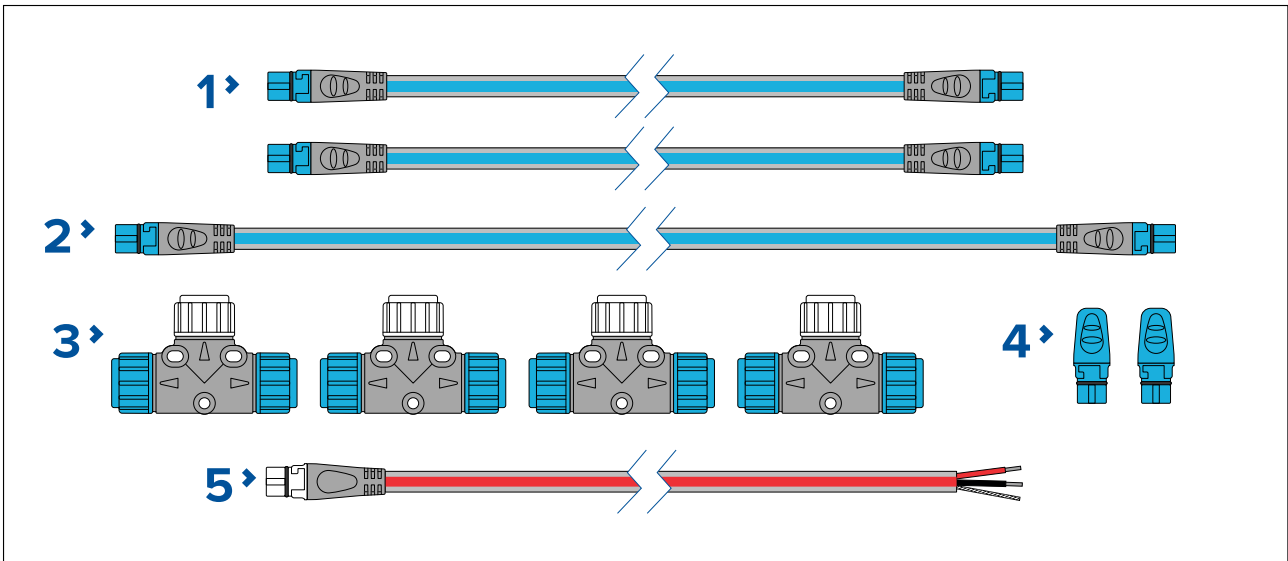


- 2 x 5 m (16.4 ft) Backbone cables (**A06036**). Used to create and extend the SeaTalkng backbone.
- 1 x 20 m (65.6 ft) Backbone cable (**A06037**). Used to create and extend the SeaTalkng backbone.
- 4 x T-piece (**A06028**). Each T-piece allows connection of one SeaTalkng device. Multiple T-pieces can be 'daisy chained' together.
- 2 x Backbone terminators (**A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.
- 1 x 2 m (6.6 ft) Power cable (**A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.

Evolution autopilot cable kit (R70160) consists of:

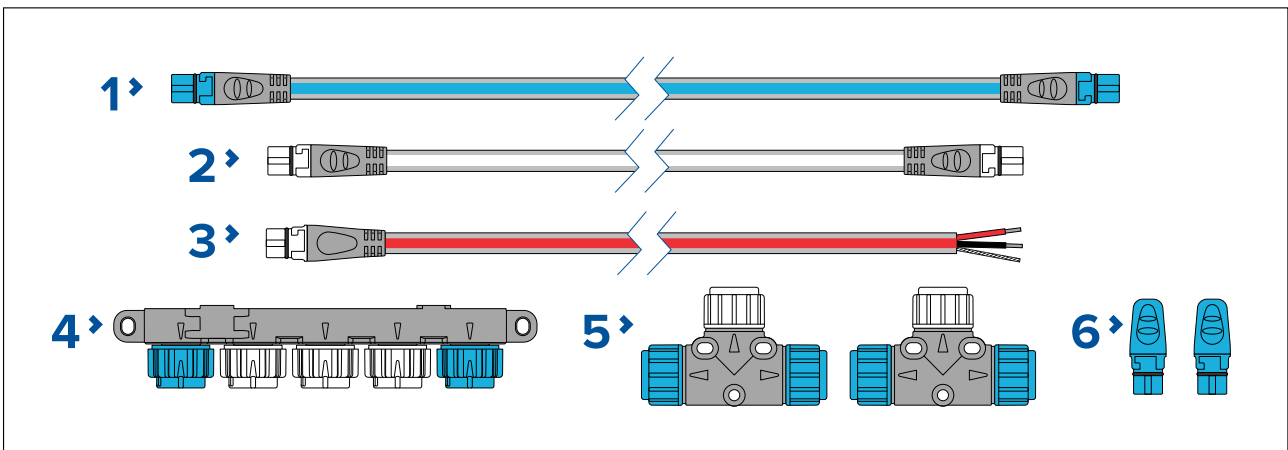


- 1 x 5 m (16.4 ft) Backbone cable (**A06036**). Used to create and extend the SeaTalkng backbone.
- 1 x 1 m (3.3 ft) Spur cable (**A06040**). Used to connect device to the SeaTalkng backbone.
- 1 x 2 m (6.6 ft) Power cable (**A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.
- 1 x 5-Way connector (**A06064**). Each connector block allows connection of up to 3 SeaTalkng devices. Multiple connector blocks can be 'daisy chained' together.
- 2 x T-pieces (**A06028**). Each T-piece allows connection of one SeaTalkng device. Multiple T-pieces can be 'daisy chained' together.
- 2 x Backbone terminators (**A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.

SeaTalk to SeaTalkng converter kit (E22158) consists of:

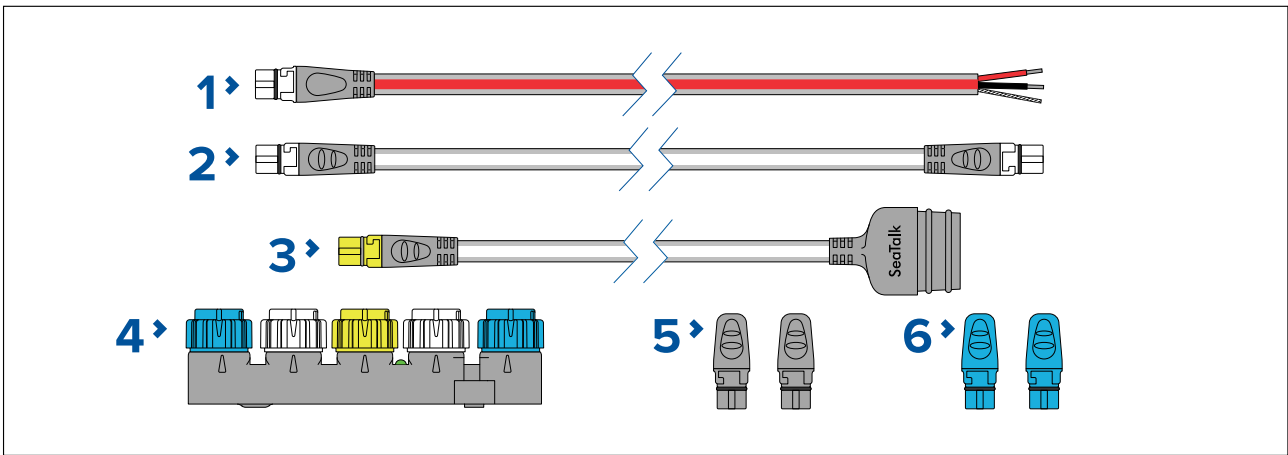

1. 1 x 2 m (6.6 ft) Power cable (**A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.
2. 1 x 1 m (3.3 ft) Spur cable (**A06039**). Used to connect a device to the SeaTalkng backbone.
3. 1 x 0.4 m (1.3 ft) SeaTalk (3 pin) to SeaTalkng adapter cable (**A22164**). Used to connect SeaTalk devices to the SeaTalkng backbone via the SeaTalk to SeaTalkng converter.
4. 1 x SeaTalk to SeaTalkng converter (**E22158**). Each converter allows connection of one SeaTalk device and up to 2 SeaTalkng devices.
5. 2 x Spur blanking plugs (**A06032**). Used to cover unused spur connections in 5–way blocks, T-piece connectors and SeaTalk to SeaTalkng converter.
6. 2 x Backbone terminators (**A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.


NMEA 0183 VHF 2 wire to SeaTalkng converter kit (E70196) consists of:

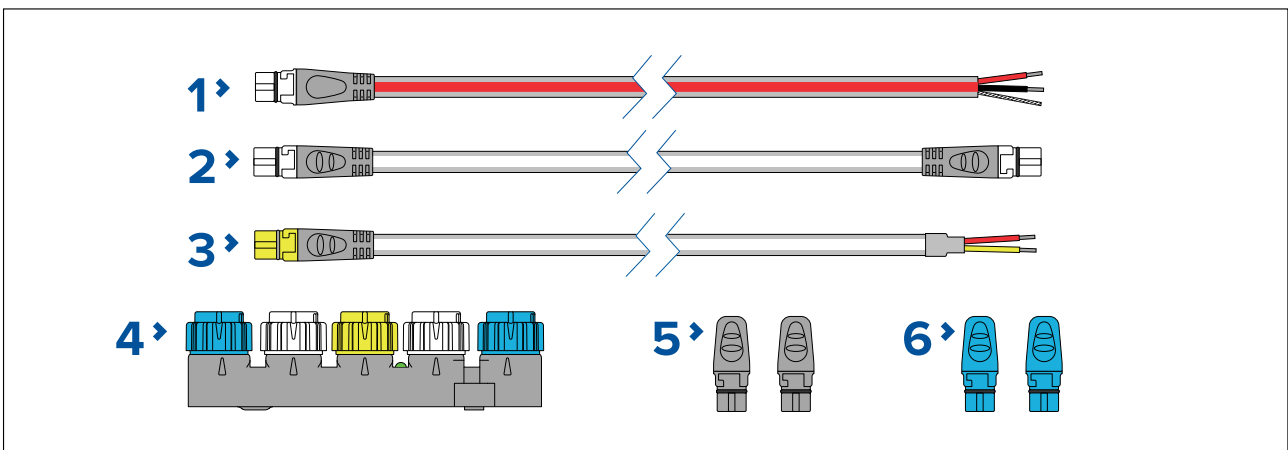

1. 1 x 2 m (6.6 ft) Power cable (**A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.
2. 1 x 1 m (3.3 ft) Spur cable (**A06039**). Used to connect a device to the SeaTalkng backbone.
3. 1 x 1 m (3.3 ft) NMEA 0183 VHF stripped-end (2 wire) to SeaTalkng adapter cable (**A06071**). Used to connect an NMEA 0183 VHF radio to the SeaTalkng backbone via the NMEA 0183 VHF to SeaTalkng converter.
4. 1 x SeaTalk to SeaTalkng converter (**E22158**). Each converter allows connection of 1 SeaTalk device and up to 2 SeaTalkng devices.
5. 2 x Spur blanking plugs (**A06032**). Used to cover unused spur connections in 5-way blocks, T-piece connectors and SeaTalk to SeaTalkng converter.
6. 2 x Backbone terminators (**A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.

SeaTalkng[®] spur cables


SeaTalkng spur cables are required to connect devices to the SeaTalkng backbone.

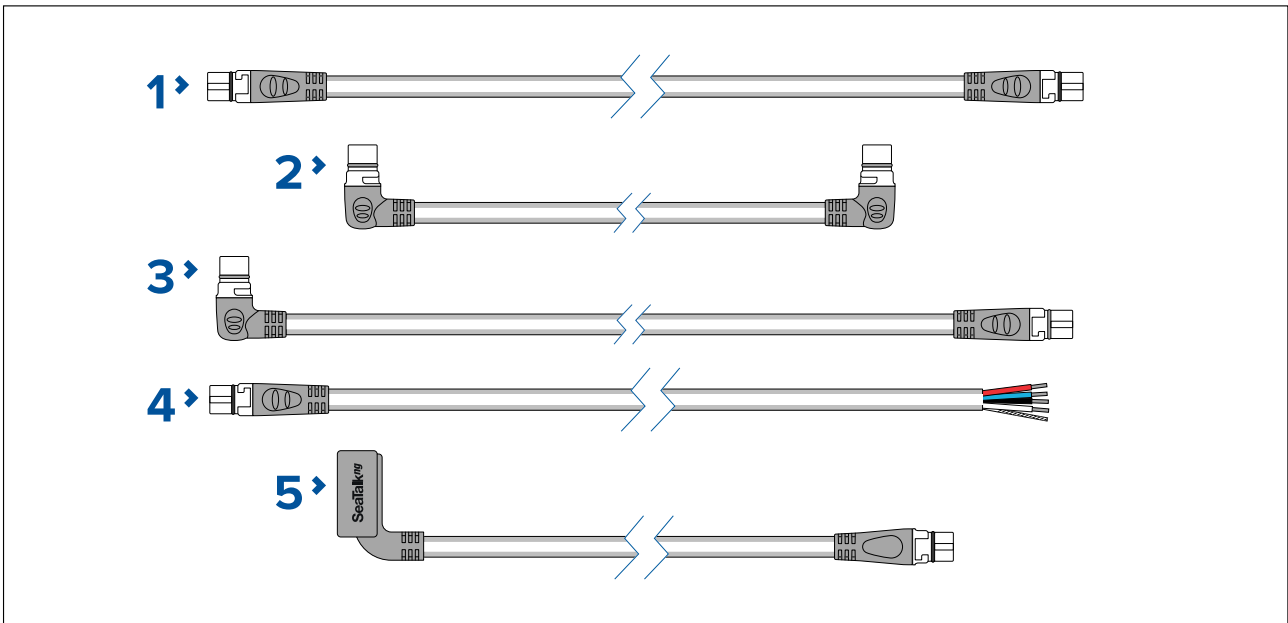

1. SeaTalkng spur cables:
 - 0.4 m (1.3 ft) Spur cable (**A06038**).
 - 1 m (3.3 ft) Spur cable (**A06039**).
 - 3 m (9.8 ft) Spur cable (**A06040**).
 - 5 m (16.4 ft) Spur cable (**A06041**).
2. 0.4 m (1.3 ft) Elbow (right angled) to elbow spur cable (**A06042**). Used in confined spaces where a straight spur cable will not fit.
3. 1 m (3.3 ft) Elbow (right angled) to straight spur cable (**A06081**). Used in confined spaces where a straight spur cable will not fit.
4. SeaTalkng to stripped-end spur cables (Connects compatible product that do not have a SeaTalkng connector such as transducer pods):
 - 1 m (3.3 ft) SeaTalkng to stripped-end spur cable — **A06043**
 - 3 m (9.8 ft) SeaTalkng to stripped-end spur cable — **A06044**
5. 0.3 m (1.0 ft) ACU / SPX autopilot to SeaTalkng spur cable (**R12112**). Connects the course computer to the SeaTalkng backbone. This connection can also be used to provide 12 V dc power to the SeaTalkng backbone.

SeaTalkng® backbone cables


SeaTalkng backbone cables are used to create or extend a SeaTalkng backbone.

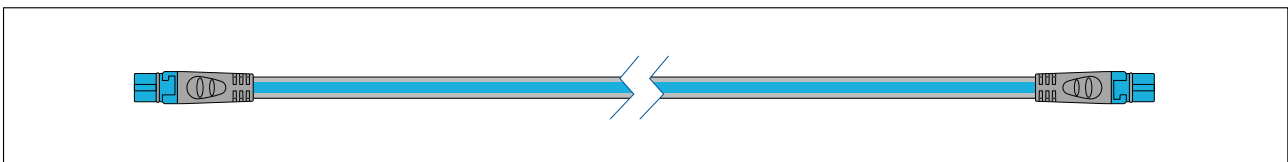

- 0.4 m (1.3 ft) Backbone cable (**A06033**).
- 1 m (3.3 ft) Backbone cable (**A06034**).
- 3 m (9.8 ft) Backbone cable (**A06035**).
- 5 m (16.4 ft) Backbone cable (**A06036**).
- 9 m (29.5 ft) Backbone cable (**A06068**).
- 20 m (65.6 ft) Backbone cable (**A06037**).

SeaTalkng® power cables


SeaTalkng power cables are used to provide the SeaTalkng backbone with a single 12 V dc power source. The power connection must include a 5 amp inline fuse (not supplied).

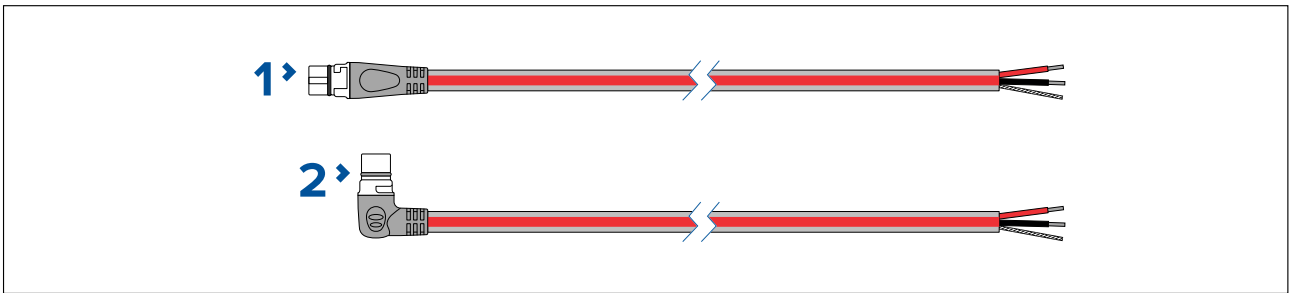

1. 2 m (6.6 ft) Power cable (straight) **(A06049)**.
2. 2 m (6.6 ft) Elbow (right angled) power cable **(A06070)**.

SeaTalkng® connectors


SeaTalkng connectors are used to connect SeaTalkng devices to the SeaTalkng backbone and to create and extend the backbone.

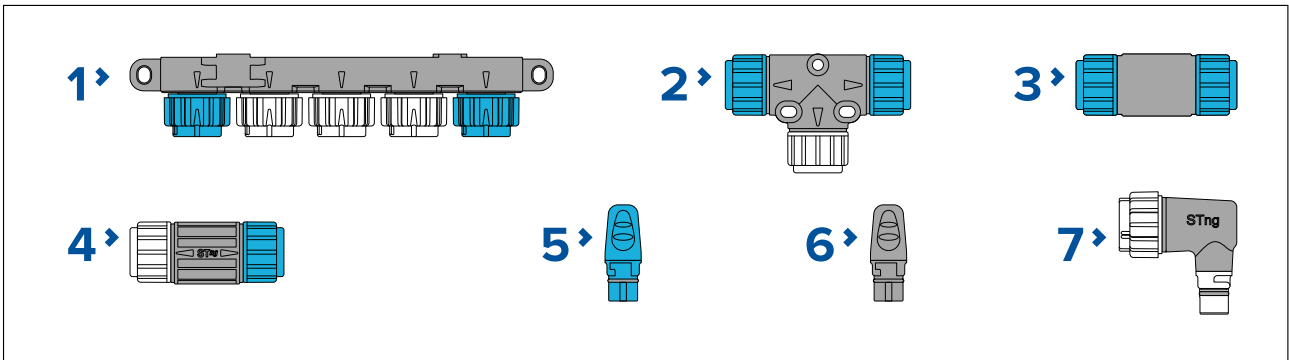

1. 5-Way connector **(A06064)**. Each connector block allows connection of up to 3 SeaTalkng devices. Multiple connector blocks can be 'daisy chained' together.
2. T-piece **(A06028)**. Each T-piece allows connection of one SeaTalkng device. Multiple T-pieces can be 'daisy chained' together.
3. Backbone extender **(A06030)**. Used to connect 2 backbone cables together.
4. Inline terminator **(A80001)**. Used to connect a spur cable and SeaTalkng device at the end of a backbone instead of a backbone terminator.
5. Backbone terminator **(A06031)**. Terminators must be fitted to both ends of the SeaTalkng backbone.
6. Spur blanking plugs **(A06032)**. Used to cover unused spur connections in 5-way blocks, T-piece connectors, or the SeaTalk to SeaTalkng converter.
7. Spur connector right angled elbow **(A06077)**. Used in confined spaces where a straight spur cable will not fit.

SeaTalkng® adaptors and adaptor cables

SeaTalkng adaptor cables are used to connect devices designed for different CAN bus backbones (e.g.: SeaTalk or DeviceNet) to the SeaTalkng backbone.

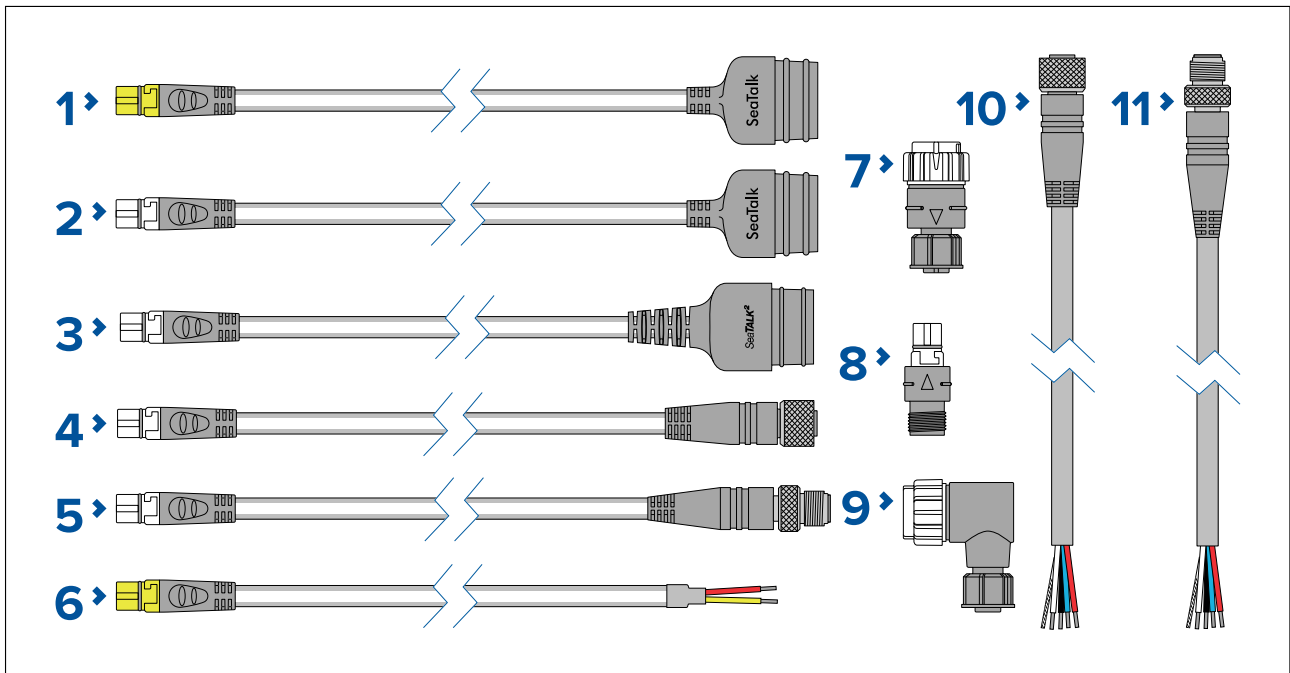

1. 1 m (3.3 ft) SeaTalk (3 pin) to SeaTalkng converter cable (**A22164 / A06073**). Can be used to connect a SeaTalk device to a SeaTalkng backbone via the SeaTalk to SeaTalkng converter, or to connect a SeaTalkng product directly to a SeaTalk network.
2. 0.4 m (1.3 ft) SeaTalk (3 pin) to SeaTalkng adaptor cable (**A06047**). Can be used to connect a SeaTalk device to a SeaTalkng backbone via the SeaTalk to SeaTalkng converter, or to connect a SeaTalkng product directly to a SeaTalk network.
3. 0.4 m (1.3 ft) SeaTalk2 (5 pin) to SeaTalkng adaptor cable (**A06048**). Used to connect SeaTalk2 devices or networks to a SeaTalkng backbone.
4. SeaTalkng to DeviceNet (female) adaptor cables connect NMEA 2000 devices that use a DeviceNet connector to the SeaTalkng backbone, or connects SeaTalkng devices to an NMEA 2000 network. The following cables are available:
 - 0.4 m (1.3 ft) SeaTalkng to DeviceNet (female) adaptor cable (**A06045**).
 - 1 m (3.3 ft) SeaTalkng to DeviceNet (female) adaptor cable (**A06075**).
5. SeaTalkng to DeviceNet (male) adaptor cables. Connect NMEA 2000 devices that use a DeviceNet connector to the SeaTalkng backbone, or connect SeaTalkng devices to an NMEA 2000 network. The following cables are available:
 - 0.1 m (0.33 ft) SeaTalkng to DeviceNet (male) adaptor cable (**A06078**).
 - 0.4 m (1.3 ft) SeaTalkng to DeviceNet (male) adaptor cable (**A06074**).
 - 1 m (3.3 ft) SeaTalkng to DeviceNet (male) adaptor cable (**A06076**).
 - 1.5 m (4.92 ft) SeaTalkng to DeviceNet (male) adaptor cable (**A06046**).
6. 1 m (3.3 ft) NMEA 0183 VHF stripped-end (2 wire) to SeaTalkng adapter cable (**A06071**). Used to connect an NMEA 0183 VHF radio to the SeaTalkng backbone via the NMEA 0183 VHF to SeaTalkng converter.
7. SeaTalkng (male) to DeviceNet (female) adaptor (**A06082**).
8. SeaTalkng (female) to DeviceNet (male) adaptor (**A06083**).
9. SeaTalkng (male) to DeviceNet (female) elbow (right angled) adaptor (**A06084**).
10. (0.4 m (1.3 ft) DeviceNet (female) to stripped-end adaptor cable (**E05026**).
11. (0.4 m (1.3 ft) DeviceNet (male) to stripped-end adaptor cable (**E05027**).

Appendix A NMEA 2000 PGN support

The unit supports the following NMEA 2000 PGNs.

| PGN | Description | Receive (Rx) | Transmit (Tx) |
|--------|---|--------------|---------------|
| 59904 | ISO Request | ● | |
| 59392 | ISO Acknowledgement | | ● |
| 60160 | ISO Transport protocol, data transfer | ● | |
| 60416 | ISO Transport protocol, connection management | ● | ● |
| 60928 | ISO Address claim | ● | ● |
| 65240 | ISO Commanded address | ● | |
| 126208 | NMEA - Request group function | ● | |
| 126208 | NMEA - Command group function | ● | |
| 126208 | NMEA - Acknowledge group function | | ● |
| 126464 | Transmission PGN list | | ● |
| 126464 | Received PGN list | | ● |
| 126992 | System time | ● | |
| 126993 | Heartbeat | | ● |
| 126996 | Product information | | ● |
| 126998 | Configuration information | | ● |
| 127237 | Heading / track control | ● | ● |
| 127250 | Vessel heading | ● | ● |
| 127258 | Magnetic variation | ● | ● |
| 128259 | Speed, water referenced | ● | ● |
| 128267 | Water depth | ● | ● |
| 128275 | Distance log | ● | ● |
| 129025 | Position, rapid update | ● | |
| 129026 | COG & SOG rapid update | ● | |
| 129029 | GNSS position data | ● | |
| 129033 | Local time offset (<i>formerly Time and date</i>) | ● | |
| 129283 | Cross track error | ● | |
| 128284 | Navigation data | ● | |
| 130306 | Wind data | ● | ● |
| 130310 | Environmental parameters | ● | ● |
| 130316 | Temperature, extended range | ● | ● |
| 130577 | Direction data | ● | |

Index

A

| | |
|---------------------------------|-------|
| Accessories | 72 |
| SeaTalkng adaptor cables | 76 |
| SeaTalkng backbone cables | 75 |
| SeaTalkng cables | 72 |
| SeaTalkng connectors | 76 |
| SeaTalkng kits | 72 |
| SeaTalkng Power cables | 75 |
| SeaTalkng spur cables | 74 |
| Autonetworking | 54–55 |

B

| | |
|----------------------------------|----|
| Box contents, See Parts supplied | |
| Bracket mounting | 34 |

C

| | |
|----------------------------------|-------|
| Cable | |
| Bend radius..... | 42 |
| Protection | 42 |
| Routing | 42 |
| Security..... | 42 |
| Strain relief..... | 42 |
| Circuit breaker connection | 48 |
| Cleaning | 9, 64 |
| Compass safe distance | 28 |
| Compatible displays | 54 |
| Connecting SeaTalkng cables..... | 43 |
| Connections | 43 |
| Battery | 47 |
| Distribution panel..... | 46 |
| Power..... | 43–45 |
| SeaTalkng | 43 |
| SeaTalkng power cable | 45 |
| Connectors, See Connections | |
| Contact details..... | 66 |

D

| | |
|--|-----------|
| Damping | 57 |
| Data bridging..... | 18 |
| Data Damping, See Damping | |
| Data differences | 58 |
| Data source, See Multiple data sources | |
| Deck mounting kit | 33–34, 36 |
| Diagnostics..... | 61 |
| Dis-assembly | 39 |
| Distribution panel connection | 46 |
| Documentation | |
| Operation instructions | 16 |
| Double damping..... | 57 |

E

| | |
|--|----|
| Electromagnetic Compatibility..... | 28 |
| EMC, See Electromagnetic Compatibility | |
| Environmental parameters | 70 |

F

| | |
|------------------------------------|----|
| Frequency, See Operating frequency | |
| Fuse rating, SeaTalkng® | 44 |

I

| | |
|-----------------------------------|-----------|
| Installation | 31–34, 36 |
| Checklist | 30 |
| Schematic diagram | 30 |
| Installation equipment, See Tools | |
| Interference | 26, 28 |
| See also Compass safe distance | |

L

| | |
|----------------------------------|----|
| LED status..... | 61 |
| LEN, See Load equivalency number | |
| Location requirements | 26 |
| Wireless | 27 |
| Wireless interference..... | 27 |

M

| | |
|--|--------|
| Maintenance | 9, 64 |
| Maximum range, See Range | |
| MDS, See Multiple data sources | |
| Micro-Talk | 14, 18 |
| Micronet | 19 |
| Micronet displays | 54 |
| Mounting location, See Location requirements | |
| Mounting template | 16 |
| Multiple data sources | 19 |

N

| | |
|------------------------------|----|
| Network examples | 50 |
| Networking | 19 |
| See also Autonetworking | |
| NMEA 2000..... | 79 |
| LEN | 43 |
| NMEA 2000 LEN | 44 |
| Nominal supply voltage | 70 |

O

| | |
|-------------------------------|--------|
| Operating frequency | 19, 70 |
| Operating license | 19 |
| Operating voltage range | 70 |
| Operation instructions | 16 |
| Optimum performance | 26 |
| Orientation..... | 26 |

P

| | |
|-----------------------------------|----|
| Pack contents, See Parts supplied | |
| Parts supplied..... | 22 |
| PGNs | 79 |
| Pole mounting | 32 |
| Power | |
| Battery connection..... | 47 |
| Distribution | 45 |
| Distribution panel..... | 46 |
| SeaTalkng power cable | 45 |
| Sharing a breaker | 46 |

| | |
|--------------------------------------|----|
| Power cable extension | 47 |
| Power consumption..... | 70 |
| Product dimensions, See Dimensions | |
| Product features | 18 |
| Product loading | 43 |
| Product orientation, See Orientation | |
| Product recycling (WEEE) | 10 |
| Product support..... | 66 |

R

| | |
|---------------------|----|
| Rail mounting..... | 32 |
| Range | 26 |
| Riser | 36 |
| Routine checks..... | 64 |

S

| | |
|---------------------------------------|------------|
| SeaTalkng | 19 |
| Adaptor cables | 76 |
| Backbone cables | 75 |
| Backbone length..... | 44 |
| Connecting | 43 |
| Connecting cables..... | 43 |
| Connectors | 76 |
| Kits | 72 |
| LEN | 43–44 |
| Load equivalency number | 43–44 |
| Power..... | 43–44 |
| Power cables | 75 |
| Spur cables..... | 74 |
| System loading | 45 |
| SeaTalkng cables | 72 |
| Service Center..... | 66 |
| Servicing..... | 9, 64 |
| Software updates | 19–20, 28 |
| Support forum | 67 |
| Surface mounting | 31, 33, 36 |
| System examples, See Network examples | |

T

| | |
|--|-------|
| Technical specification | 69 |
| Technical support..... | 66–67 |
| Thermal breaker rating, SeaTalkng® | 45 |
| Tools | 30 |
| Training courses..... | 67 |
| Troubleshooting | 60 |
| Typical systems, See Network examples | |

U

| | |
|---------------------------------|----|
| Unit | |
| Release | 39 |
| Upgrading, See Software updates | |

W

| | |
|-------------------------|----|
| Wall Bracket | 34 |
| Warranty | 66 |
| WEEE Directive..... | 10 |
| Wireless interface..... | 19 |



Raymarine

Marine House, Cartwright Drive, Fareham, Hampshire.
PO15 5RJ. United Kingdom.

Tel: +44 (0)1329 246 700

www.raymarine.com

Raymarine®

a brand by  **FLIR®**