



**Raymarine®**

# MAGNUM

## Installation Instructions



## Legal notices

### Trademark and patents notice

**Raymarine®**, **Tacktick®**, **Pathfinder®**, **Clear Pulse®**, **Truzoom®**, **SeaTalk®**, **SeaTalk HS™**, **SeaTalk NG™**, and **MicroNet™**, are registered or claimed trademarks of Raymarine UK Ltd.

**FLIR®**, **Fishidy®**, **Fishing Hot Spots®**, **YachtSense™**, **DockSense®**, **RangeFusion™**, **DownVision®**, **SideVision®**, **RealVision®**, **HyperVision™**, **Wi-Fish®**, **Dragonfly®**, **Element®**, **Quantum®**, **Cyclone™**, **Alpha™**, **Axiom®**, **Infrared Everywhere**, **The World's Sixth Sense** and **ClearCruise®** are registered or claimed trademarks of Teledyne FLIR LLC.

**All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.**

This product is protected by patents, design patents, patents pending, or design patents pending.

### Fair Use Statement

You may print no more than three copies of this manual for your own use. You may not make any further copies or distribute or use the manual in any other way including without limitation exploiting the manual commercially or giving or selling copies to third parties.

### Content notice

Please ensure that you have obtained this document only from Raymarine, and that it is the **latest** available version.

There are numerous third-party Internet websites (such as [www.manualslib.com](http://www.manualslib.com)) hosting Raymarine product manuals. These websites are not authorized by Raymarine to do so, and are often hosting illegitimate or older versions of Raymarine product manuals, which may contain inaccurate or misleading information.

To obtain the latest official documentation for a Raymarine product, please visit the official Raymarine website: [www.docs.raymarine.com](http://www.docs.raymarine.com)

### Artificial Intelligence (AI) content notice

There are numerous third-party **Artificial Intelligence (AI)** services available to the public, which are capable of providing a summary or transcription of the information provided by official Raymarine publications or websites, either in written or audio/video formats. These services may alter, supplement, or convey the original information provided by Raymarine in inaccurate or misleading ways.

Please ensure that you have obtained this document only from Raymarine, and that it is the **latest** available version.



# CONTENTS

<b>CHAPTER 1 IMPORTANT INFORMATION</b> .....	<b>8</b>	2.3 Product documentation .....	15
Safety warnings .....	8	2.4 Operation instructions .....	16
Certified Installation .....	8	<b>CHAPTER 3 PRODUCT AND SYSTEM</b>	
Transmitted power density levels .....	9	<b>OVERVIEW</b> .....	<b>17</b>
Product warnings .....	9	3.1 Product overview .....	18
Regulatory notices .....	10	3.2 Multiple radar scanners .....	18
IEEE statement .....	10	Multiple radar scanner compatibility .....	18
ICNIRP Guidelines .....	10	3.3 VCM100 Voltage Converter Module	
Water ingress .....	10	(VCM) .....	19
Disclaimer .....	10	3.4 Required additional components .....	19
EMC installation guidelines .....	10	Radar target acquisition data source	
Suppression ferrites .....	11	requirements .....	19
Connections to other equipment .....	11	3.5 Compatible multifunction displays .....	20
Compass safe distance .....	11	3.6 Magnum Radar feature compatibility .....	20
Declaration of Conformity .....	11	3.7 Typical system examples .....	21
PSTI Compliance .....	12	3.8 Software updates .....	23
Radar licensing .....	12	<b>CHAPTER 4 PARTS SUPPLIED</b> .....	<b>24</b>
FCC Notice .....	12	4.1 Parts supplied (pedestal and VCM100) .....	25
IMO and SOLAS .....	12	4.2 Parts supplied (antenna) .....	25
Warranty policy and registration .....	12	4.3 Special bundle and promotional products .....	26
Product disposal .....	12	<b>CHAPTER 5 PRODUCT DIMENSIONS</b> .....	<b>27</b>
Technical accuracy .....	12	5.1 Product dimensions .....	28
Multifunction display / chartplotter software		<b>CHAPTER 6 LOCATION REQUIREMENTS</b> .....	<b>29</b>
version .....	12	6.1 Warnings and cautions .....	30
Publication copyright .....	13	6.2 Potential ignition source .....	30
<b>CHAPTER 2 DOCUMENT INFORMATION</b> .....	<b>14</b>	6.3 VCM100 location requirements .....	30
2.1 Applicable products .....	15	6.4 Radar scanner location requirements .....	30
2.2 Document illustrations .....	15	6.5 Radar scanner mounting surface .....	31

6.6 Radar scanner mounting angle .....	32	CHAPTER 10 POWER CONNECTIONS .....	51
<b>CHAPTER 7 CABLES AND CONNECTIONS — GENERAL INFORMATION.....</b>	<b>33</b>	10.1 Pedestal power connections .....	52
7.1 General cabling guidance.....	34	Circuit breaker and fuse ratings .....	53
Cable types and length .....	34	VCM100 power connections.....	53
Cable routing and bend radius.....	34	VCM100 power wire gauge .....	54
Strain relief.....	34	VCM100 screen (drain) wire gauge.....	55
Circuit isolation.....	34	VCM100 grounding requirements .....	55
Cable shielding.....	35	<b>CHAPTER 11 SYSTEM CHECKS.....</b>	<b>57</b>
Suppression ferrites.....	35	11.1 Radar scanner initial power on test.....	58
Connecting cables .....	35	11.2 Radar check .....	58
7.2 Network cable connector types.....	35	Opening the Radar app.....	58
7.3 Radar scanner connections overview.....	36	Check and adjust bearing alignment .....	59
Cable routing options .....	36	<b>CHAPTER 12 OPERATION.....</b>	<b>61</b>
Making the Radar cable connection .....	38	12.1 Operation instructions .....	62
<b>CHAPTER 8 MOUNTING.....</b>	<b>40</b>	<b>CHAPTER 13 TROUBLESHOOTING .....</b>	<b>63</b>
8.1 Tools required.....	41	13.1 Troubleshooting .....	64
8.2 Mounting the VCM100 .....	41	13.2 Power up troubleshooting .....	64
8.3 Securing the pedestal to the mounting platform .....	42	13.3 Radar troubleshooting .....	65
8.4 Securing the Radar antenna to the pedestal.....	44	13.4 VCM100 LED indications.....	66
8.5 Radar scanner protection — sailing vessels .....	44	<b>CHAPTER 14 TECHNICAL SUPPORT .....</b>	<b>67</b>
<b>CHAPTER 9 NETWORK CONNECTIONS .....</b>	<b>46</b>	14.1 Raymarine technical support and servicing .....	68
9.1 Radar scanner connections overview.....	47	<b>CHAPTER 15 TECHNICAL SPECIFICATION.....</b>	<b>70</b>
Making the Radar cable connection .....	47	15.1 Technical specification.....	71
9.2 Typical system examples .....	48	<b>CHAPTER 16 SPARES AND ACCESSORIES.....</b>	<b>74</b>
9.3 Radar cable extensions.....	50	16.1 Spares and accessories .....	75
		16.2 RayNet to RayNet cables and connectors .....	76

16.3 RayNet to RJ45, and RJ45 (SeaTalk HS)  
adapter cables.....78

APPENDIX A INTERPRETING THE RADAR  
DISPLAY ..... 81

APPENDIX B LICENSING ISSUING  
AUTHORITIES ..... 88

APPENDIX C ETHERNET (IPV4) NETWORKING  
OF RAYMARINE DEVICES WITH THIRD-PARTY  
PRODUCTS..... 91

# CHAPTER 1: IMPORTANT INFORMATION

## Safety warnings

### Certified Installation

Raymarine recommends certified installation by a Raymarine approved installer. A certified installation qualifies for enhanced product warranty benefits. Contact your Raymarine dealer for further details.



#### Warning: Product installation and operation

- This product must be installed and operated in accordance with the instructions provided. Failure to do so could result in personal injury or damage to your vessel. It may also cause poor product performance or invalidate the product warranty.
- Raymarine highly recommends certified installation by a Raymarine approved installer. A certified installation qualifies for enhanced product warranty benefits. Register your warranty on the Raymarine website: [www.raymarine.com/warranty](http://www.raymarine.com/warranty)



#### Warning: Weather conditions

When working in adverse weather conditions, ensure that a full risk assessment is carried out prior to working aloft. Adverse weather conditions can include — but are not restricted to — high winds, heavy rain, snow, ice, or a sea state which may cause vessel pitch and roll.



#### Warning: Working aloft

When working at height, ensure that:

- All applicable regulatory, employer, shipyard and vessel health & safety requirements are adhered to, including but not limited to the inspection and use of Personal Protective Equipment (PPE), such as approved safety harnesses and protective gloves etc.
- All nearby devices with moving parts or which emit Radio Frequency (RF) radiation are fully electrically and mechanically isolated.
- Someone in authority and at ground level is aware of the required works and that suitable clear warnings are in place.
- A safety cordon is put in place below the working area.
- All access routes are secure. Beware of wet or slippery surfaces, such as work areas or ladder rungs etc.
- All equipment and loose items such as replacement equipment and tools are safely stowed or secured, to prevent a drop hazard.



#### Warning: Object lifting

- When lifting the product, equipment or spare items to a platform or via a ladder, heavy objects must be lifted using a suitably-rated lifting bag or straps.
- Where applicable, it is highly recommended that you use the lifting equipment (e.g. lifting bag or straps) which is supplied with your product. Raymarine will not be held liable for any product damage, vessel damage or personal injury which is caused as a result of using a third-party alternative.
- You MUST NOT manually carry heavy objects up ladders, as they can present a drop hazard.



### Warning: Radar scanner safety

Before rotating the Radar scanner, ensure all personnel are clear.



### Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).



### Warning: Radio Frequency (RF) radiation hazard

The radar scanner transmits electromagnetic energy at microwave frequencies which can be harmful, particularly to the eyes. Do NOT look at the scanner from close range. Ensure personnel are clear of the scanner when it is powered on.

Radio Frequency (RF) transmissions can affect cardiac pacemakers and cause damage or cause irregularities in their operation. Any users of such devices should be aware and understand the risks prior to exposure.

---

**Important:**

For safety reasons, the radar must be installed above head height, out of range of personnel.



### Warning: High voltage

This product contains high voltage. Do NOT remove covers or attempt to access internal components, unless specifically instructed in the documentation provided.



### Warning: Switch off power supply

Ensure that the vessel's power supply is switched OFF before starting to install this product. Do NOT connect or disconnect equipment with the power switched on, unless instructed to do so in this document.

## Transmitted power density levels

- A power density level of 10 W/m<sup>2</sup> is likely at distances of 34 cm or less from the Radar scanner.
- A power density level of 100 W/m<sup>2</sup> does not occur at any point.

## Product warnings



### Warning: Product grounding

Before applying power to this product, it MUST be correctly grounded, in accordance with the instructions provided.



### Warning: Positive ground systems

Do NOT connect this unit to a system which has positive grounding.



### Warning: Power supply voltage

Connecting this product to a voltage supply greater than the specified maximum rating may cause permanent damage to the unit. For the correct voltage, refer to the information label affixed to the product.

### Caution: Power supply protection

When installing this product, ensure that the power source is adequately protected by means of a suitably-rated fuse or thermal circuit breaker.

## Caution: Service and maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized Raymarine dealers. Unauthorized repair may affect your warranty.

## Regulatory notices

### IEEE statement

IEEE C95.1 – 2005 – Standard for Safety Levels with respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.

### ICNIRP Guidelines

When properly installed and operated, the use of this radar conforms to: ICNIRP Guidelines 1998 - International Commission on Non-Ionising Radiation Protection: Guidelines for limiting exposure to time-varying electric, magnetic and electro-magnetic fields (up to 300 GHz) 1998.

### Water ingress

Water ingress disclaimer

Although the waterproof rating capacity of this product meets the stated water ingress protection standard (refer to the product's *Technical Specification*), water intrusion and subsequent equipment failure may occur if the product is not installed correctly or subjected to high-pressure washing. Raymarine will not warrant products subjected to high-pressure washing.

### Disclaimer

Raymarine does not warrant that this product is error-free or that it is compatible with products manufactured by any person or entity other than Raymarine.

Raymarine is not responsible for damages or injuries caused by your use or inability to use the product, by the interaction of the product with products manufactured by others, or by errors in information utilized by the product supplied by third parties.

Third-party hardware, such as converters, adapters, routers, switches, Access Points etc., provided by third parties, may be made available directly to you by other companies or individuals under separate terms and conditions, including separate fees and charges. Raymarine UK Ltd or its affiliates have not tested or screened the third-party hardware.

Raymarine has no control over, and is not responsible for:

- (a) the content and operation of such third-party hardware; or
- (b) the privacy or other practices of such third-party hardware.

The fact that Raymarine's documentation may make reference to such third-party hardware does not indicate any approval or endorsement of any such third-party hardware. Raymarine may reference such third-party hardware only as a convenience.

**THIS INFORMATION IS MADE AVAILABLE BY Raymarine ON THE BASIS THAT YOU EXCLUDE TO THE FULLEST EXTENT LAWFULLY PERMITTED ALL LIABILITY WHATSOEVER FOR ANY LOSS OR DAMAGE HOWSOEVER ARISING OUT OF THE USE OF THIS INFORMATION OR RELIANCE UPON THIS INFORMATION.**

**Raymarine** does not exclude **Raymarine's** liability (if any) to you for personal injury or death resulting from **Raymarine UK Ltd** negligence, for fraud or for any matter which it would be illegal to exclude or to attempt to exclude.

### EMC installation guidelines

Raymarine equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) regulations, to minimize electromagnetic interference between equipment and minimize the effect such interference could have on the performance of your system.

Correct installation is required to ensure that EMC performance is not compromised.

#### Note:

In areas of extreme EMC interference, some slight interference may be noticed on the product. Where this occurs the product and the source of the interference should be separated by a greater distance.

For **optimum** EMC performance we recommend that wherever possible:

- Raymarine equipment and cables connected to it are:
  - At least 1 m (3.28 ft) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas. In the case of SSB radios, the distance should be increased to 2 m (6.6 ft).
  - More than 2 m (6.56 ft) from the path of a radar beam. A radar beam can normally be assumed to spread 20 degrees above and below the radiating element.
- The product is supplied from a separate battery from that used for engine start. This is important to prevent erratic behavior and data loss which can occur if the engine start does not have a separate battery.
- Raymarine specified cables are used.
- Cables are not cut or extended, unless doing so is detailed in the installation manual.

**Note:**

**Where constraints on the installation prevent any of the above recommendations,** always ensure the maximum possible separation between different items of electrical equipment, to provide the best conditions for EMC performance throughout the installation.

## Suppression ferrites

- Raymarine cables may be pre-fitted or supplied with suppression ferrites. These are important for correct EMC performance. If ferrites are supplied separately to the cables (i.e. not pre-fitted), you must fit the supplied ferrites, using the supplied instructions.
- If a ferrite has to be removed for any purpose (e.g. installation or maintenance), it must be replaced in the original position before the product is used.
- Use only ferrites of the correct type, supplied by Raymarine or its authorized dealers.
- Where an installation requires multiple ferrites to be added to a cable, additional cable clips should be used to prevent stress on the connectors due to the extra weight of the cable.

## Connections to other equipment

Requirement for ferrites on non-Raymarine cables:

If your Raymarine equipment is to be connected to other equipment using a cable not supplied by Raymarine, a suppression ferrite **MUST** always be attached to the cable near the Raymarine unit.

For more information, refer to your third-party cable manufacturer.

## Compass safe distance

To prevent potential interference with the vessel's magnetic compasses, ensure an adequate distance is maintained from the product.



When choosing a suitable location for the product you must aim to maintain a distance of at least 1 m (3.3 ft) in all directions from any compasses.

For some smaller vessels it may not be possible to locate the product this far away from a compass. In this situation, when choosing the installation location for your product, ensure that the compass is not affected by the product when it is in a powered on state.

## Declaration of Conformity

Teledyne FLIR LLC declares that the radio equipment type products listed below are in conformity with the relevant sections of the listed designated standards and / or other normative documents:

- Magnum-Series Open Array Radar, part number E70484
- Magnum-Series Open Array Radar, part number E70487
- Magnum-Series Open Array Radar, part number E70490
- Magnum-Series Open Array Radar, part number E70491

Region	Standard	Mark
UK	EMC Regulations 2016	
EU	Radio Equipment Directive 2014/53/EU	

The original Declaration of Conformity certificate may be viewed or downloaded via the following web page: <https://bit.ly/magnum-docs>

## PSTI Compliance

For products sold into the United Kingdom (UK), use the following link to obtain the product's Statement of Compliance with the *Product Security and Telecommunications Infrastructure* (PSTI) Regulations:

Visit the following web address and enter the product's model name or number (SKU) into the provided search field:

- [www.bit.ly/rym-sec-com](http://www.bit.ly/rym-sec-com)

## Radar licensing

Installation and operation of this radar may be subject to individual licensing of the equipment, operator or vessel.

In many countries, the licensing for the use of radar equipment is included in the **Ship Station license** and **Operator's license** issued for VHF radios.

However, even if you already have a Ship Station license and Operator's license for a VHF radio, **some countries may require a separate license for radar equipment use.**

### Important:

It is your responsibility to determine whether a license is required in your area before operating this equipment.

For a list of license issuing authorities, refer to:

[p.88 – Licensing issuing authorities](#)

## FCC Notice

Changes or modifications to this equipment not expressly approved in writing by Raymarine Incorporated could violate compliance with FCC rules and void the operator's authority to operate the equipment.

## IMO and SOLAS

The equipment described within this document is intended for use on leisure marine boats and workboats NOT covered by International Maritime Organization (IMO) and Safety of Life at Sea (SOLAS) Carriage Regulations.

## Warranty policy and registration

Visit the Raymarine website to **read the latest warranty policy**, and **register** your product's warranty online: [www.bit.ly/rym-warranty](http://www.bit.ly/rym-warranty)

It is important that you register your product to receive full warranty benefits. Your product package includes a barcode label indicating the serial number of the unit. This serial number is also provided on a label affixed to the product itself. You will need this serial number when registering your product online.

## Product disposal

Dispose of this product in accordance with the WEEE Directive.

The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment which contains materials, components and substances that may be hazardous and present a risk to human health and the environment when WEEE is not handled correctly.



Equipment marked with the crossed-out wheeled bin symbol indicates that the equipment should not be disposed of in unsorted household waste. Local authorities in many regions have established collection schemes under which residents can dispose of waste electrical and electronic equipment at a recycling center or other collection point. For more information about suitable collection points for waste electrical and electronic equipment in your region, refer to the Raymarine website: <https://bit.ly/rym-recycling>

## Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, Raymarine cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice. As a result, Raymarine cannot accept liability for any differences between the product and this document. Please check the Raymarine website to ensure you have the most up-to-date version(s) of the documentation for your product: [www.docs.raymarine.com](http://www.docs.raymarine.com)

## Multifunction display / chartplotter software version

To ensure optimum performance and compatibility with external devices, your MFD / chartplotter must be using the latest software version.

Visit [www.bit.ly/rym-software](http://www.bit.ly/rym-software) to download the latest software.

## **Publication copyright**

**Copyright ©2025 Raymarine UK Ltd. All rights reserved. No parts of this material may be copied, translated, or transmitted (in any medium) without the prior written permission of Raymarine UK Ltd.**

# CHAPTER 2: DOCUMENT INFORMATION

## CHAPTER CONTENTS

- 2.1 Applicable products — page 15
- 2.2 Document illustrations — page 15
- 2.3 Product documentation — page 15
- 2.4 Operation instructions — page 16

## 2.1 Applicable products

This document is applicable to the following products:

Part	Variant	Description
<b>T70408</b>	4kW Magnum Open Array Radar (4ft array)	4kW Magnum Open Array Radar scanner and VCM100 (E70484); 4ft array (E70490). Supplied with a 15 m (49.21 ft) combined power-and-data cable with RayNet (Ethernet) connector (A80229).
<b>T70412</b>	12kW Magnum Open Array Radar (4ft array)	12kW Magnum Open Array Radar scanner and VCM100 (E70487); 4ft array (E70490). Supplied with a 15 m (49.21 ft) combined power-and-data cable with RayNet (Ethernet) connector (A80229).
<b>T70410</b>	4kW Magnum Open Array Radar (6ft array)	4kW Magnum Open Array Radar scanner and VCM100 (E70484); 6ft array (E70491). Supplied with a 15 m (49.21 ft) combined power-and-data cable with RayNet (Ethernet) connector (A80229).
<b>T70414</b>	12kW Magnum Open Array Radar (6ft array)	12kW Magnum Open Array Radar scanner and VCM100 (E70487); 6ft array (E70491). Supplied with a 15 m (49.21 ft) combined power-and-data cable with RayNet connector (A80229).
<b>E52091</b>	VCM100 Voltage Converter Module	Power converter; required to provide power to the Magnum Open Array Radar scanner.

## 2.2 Document illustrations

Your product and if applicable, its user interface may differ slightly from that shown in the illustrations in this document, depending on product variant and date of manufacture.

All images are provided for illustration purposes only.

## 2.3 Product documentation

The following documentation is applicable to your product:

### Applicable documentation:

Document	Description
<b>87324</b>	Magnum Open Array Radar Installation Instructions (this document).
<b>87325</b>	Magnum Open Array Radar Mounting template.

These documents are available to download from the following location:

<b>Magnum documents download link</b>
<a href="http://www.bit.ly/magnum-docs">www.bit.ly/magnum-docs</a>

### Related documentation

Document	Description
<b>81406</b>	LightHouse 4 Advanced Operation Instructions.
<b>81370</b>	LightHouse 3 Advanced Operation Instructions.
<b>81360</b>	LightHouse 2 Operation Instructions.
<b>81244</b>	E-Series Networked Display Reference Manual.
<b>81312</b>	C-Series Widescreen MFD User reference handbook.

Document	Description
<b>81320</b>	E-Series Widescreen MFD User reference handbook.
<b>81276</b>	G-Series system MFD User reference handbook.

These documents are available to download from the following location:

**Documents download link**

[www.bit.ly/rym-docs](http://www.bit.ly/rym-docs)

## 2.4 Operation instructions

For detailed operation instructions for your product, refer to the documentation that accompanies your display.

Document	Description	Link
<b>81406</b>	LightHouse 4 Operation Instructions	<a href="http://www.bit.ly/LH4-docs">www.bit.ly/LH4-docs</a>
<b>81370</b>	LightHouse 3 Operation Instructions	<a href="http://www.bit.ly/LH3-docs">www.bit.ly/LH3-docs</a>
<b>81360</b>	LightHouse 2 Operation Instructions	<a href="http://www.bit.ly/LH2-docs">www.bit.ly/LH2-docs</a>


# CHAPTER 3: PRODUCT AND SYSTEM OVERVIEW

## CHAPTER CONTENTS

- 3.1 Product overview — page 18
- 3.2 Multiple radar scanners — page 18
- 3.3 VCM100 Voltage Converter Module (VCM) — page 19
- 3.4 Required additional components — page 19
- 3.5 Compatible multifunction displays — page 20
- 3.6 Magnum Radar feature compatibility — page 20
- 3.7 Typical system examples — page 21
- 3.8 Software updates — page 23

## 3.1 Product overview

The Magnum Open Array Radar is a magnetron Radar which utilizes narrow beamwidths and high power output to detect and resolve low reflectivity targets at ranges up to 96 nm. In conjunction with a compatible multifunction display / chartplotter, the Magnum scanner provides a map-like representation of an extended area around your vessel, enabling you to identify birds, weather, other vessels, and land features such as coastlines and hills.

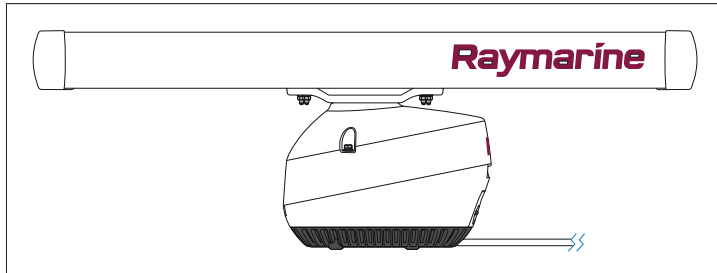

The Magnum Open Array Radar includes the following features:

- Range performance up to 96 nm (12kW variant; dependent on installation location).
- Narrow horizontal beam widths for enhanced target separation.
- “Bird mode” for bird detection up to 12 nm.
- Weather detection.
- Radar image display and control via Raymarine multifunction display.
- Real-time heading display (requires position-data source in system).
- Relative-motion “true trails” (requires position-data source in system).
- Automatic MARPA for target tracking and collision avoidance.
- 48 RPM scanner rotation.
- Data connection via RayNet (Ethernet) cable.
- 12 V or 24 V operation (with supplied VCM100 power converter).
- Waterproof to IPx6.

## 3.2 Multiple radar scanners

You can use a **maximum of 2 Radar scanners** at any one time, per networked system.

For example, you can install, and simultaneously use:

- A Magnum Open Array Radar, and a Quantum Radome.
- 2 Magnum Open Array Radars.
- A Magnum Open Array Radar, and a HD Color Radome.

### Note:

**Only one Quantum Radome** can be used at any one time, per networked system.

For important information on how to position multiple Radar scanners to avoid potential interference, refer to: [p.30 – Radar scanner location requirements](#)

## Multiple radar scanner compatibility

The following multifunction displays / chartplotters support the use of up to 2 Radar scanners on a single network at any one time.

Compatible Raymarine MFDs	Required MFD software version
<b>Axiom 2-Series:</b> Axiom 2 Pro, Axiom 2 XL	<ul style="list-style-type: none"><li>• <b>LightHouse 4</b> — software version <b>v4.0.70</b> or later.</li><li>• <b>LightHouse 3</b> — software version <b>v3.0.40</b> or later.</li></ul>
<b>Axiom-Series:</b> Axiom, Axiom+, Axiom Pro, Axiom XL	<ul style="list-style-type: none"><li>• <b>LightHouse 4</b> — software version <b>v4.0.70</b> or later.</li><li>• <b>LightHouse 3</b> — software version <b>v3.0.40</b> or later.</li></ul>
<b>eS Series:</b> eS75, eS77, eS78, eS97, eS98, eS127, eS128	<ul style="list-style-type: none"><li>• <b>LightHouse 3</b> — software version <b>v3.0.40</b> to <b>v3.11.42</b>.</li><li>• <b>LightHouse 2</b> — software version <b>v12.26</b> or later.</li></ul>


Compatible Raymarine MFDs	Required MFD software version
<b>gS Series:</b> gS95, gS125, gS165, gS195	<ul style="list-style-type: none"> <li>• <b>LightHouse 3</b> — software version <b>v3.0.40 to v3.11.42</b>.</li> <li>• <b>LightHouse 2</b> — software version <b>v12.26 or later</b>.</li> </ul>
<b>a Series:</b> a65, a67, a68, a75, a77, a78, a95, a97, a98, a125, a127, a128	<ul style="list-style-type: none"> <li>• <b>LightHouse 2</b> — software version <b>v12.26 or later</b>.</li> </ul>
<b>c Series:</b> c95, c97, c125, c127	<ul style="list-style-type: none"> <li>• <b>LightHouse 2</b> — software version <b>v12.26 or later</b>.</li> </ul>
<b>e Series:</b> e7, e7D, e95, e97, e125, e127, e165	<ul style="list-style-type: none"> <li>• <b>LightHouse 2</b> — software version <b>v12.26 or later</b>.</li> </ul>
<b>G-Series:</b> GPM400	<i>Latest software version.</i>
<b>E-Series Widescreen:</b> E90W, E120W, E140W	<i>Latest software version.</i>

### 3.3 VCM100 Voltage Converter Module (VCM)

The VCM100 converts the source of direct current from your vessel's power source to a safe level for the connected product.

#### Important:

- The VCM100 is an **essential** component in your product's system and **MUST** be used to supply power to the product. The model number of the VCM that is suitable for use with your product is: VCM100 (E70648).
- Do NOT use other versions of the VCM with your product.

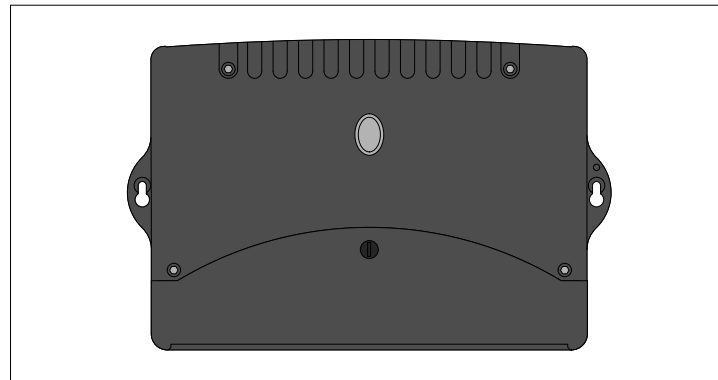

### 3.4 Required additional components

This product forms part of a system of electronics and requires the following additional components for full operation.

- A compatible Raymarine multifunction display / chartplotter. For a list of compatible multifunction displays / chartplotters, refer to: [p.20 — Compatible multifunction displays](#)
- An optional MARPA data source. For more information, refer to: [p.19 — Radar target acquisition data source requirements](#)

#### Radar target acquisition data source requirements

Radar target acquisition requires the following data sources to be available on your system (e.g. connected to your multifunction display, via SeaTalk NG or NMEA 0183).

Data type	Example data source
COG (Course Over Ground)	GNSS (GPS) receiver (multifunction display / chartplotter internal receiver or external receiver).
SOG (Speed Over Ground)	GNSS (GPS) receiver (multifunction display / chartplotter internal receiver or external receiver).
HDG / HDT (True Heading)	Compass or Autopilot sensor providing Fastheading data (e.g. Evolution-Series EV-1 / EV-2).

## 3.5 Compatible multifunction displays

This product is compatible with the following Raymarine multifunction displays / chartplotters:

**Note:**  
Certain Magnum Open Array Radar features may not be available on some multifunction displays and software versions. For more information, refer to: [p.20 — Magnum Radar feature compatibility](#)

Compatible Raymarine MFDs	Required MFD software version
<b>Axiom 2-Series:</b> Axiom 2 Pro, Axiom 2 XL	<i>Latest software version.</i>
<b>Axiom-Series:</b> Axiom, Axiom+, Axiom Pro, Axiom XL	<i>Latest software version.</i>
<b>eS Series:</b> eS75, eS77, eS78, eS97, eS98, eS127, eS128	<i>Latest software version.</i>
<b>gS Series:</b> gS95, gS125, gS165, gS195	<i>Latest software version.</i>
<b>a Series:</b> a65, a67, a68, a75, a77, a78, a95, a97, a98, a125, a127, a128	<i>Latest software version.</i>
<b>c Series:</b> c95, c97, c125, c127	<i>Latest software version.</i>
<b>e Series:</b> e7, e7D, e95, e97, e125, e127, e165	<i>Latest software version.</i>
<b>G-Series</b> GPM400	<i>Latest software version.</i>
<b>“Classic” E-Series</b> E80, E120	<i>Latest software version.</i>

Compatible Raymarine MFDs	Required MFD software version
<b>C-Series Widescreen</b> C90W, C120W, C140W	<i>Latest software version.</i>
<b>E-Series Widescreen</b> E90W, E120W, E140W	<i>Latest software version.</i>

## 3.6 Magnum Radar feature compatibility

Certain Magnum Open Array Radar features are only available with the latest Raymarine multifunction displays (MFDs), running a recent LightHouse software version.

The following table shows which new Radar features are supported for each compatible MFD / chartplotter.

MFD	Software version	Supported features
<b>Axiom 2-Series:</b>	Running LightHouse 4, software version v4.0.70 or later.	<ul style="list-style-type: none"> <li>• Real-time heading</li> <li>• Automatic MARPA</li> <li>• True trails</li> <li>• 96 nm range scale</li> <li>• Improved bird mode.</li> </ul>
<b>Axiom-Series:</b>	Running LightHouse 4, software version v4.0.70 or later.	<ul style="list-style-type: none"> <li>• Real-time heading</li> <li>• Automatic MARPA</li> <li>• True trails</li> <li>• 96 nm range scale</li> <li>• Improved bird mode.</li> </ul>
<b>Axiom-Series:</b>	Running LightHouse 3, software version v3.4.66 or later.	<ul style="list-style-type: none"> <li>• Real-time heading</li> <li>• Automatic MARPA</li> <li>• True trails</li> <li>• 96 nm range scale</li> <li>• Improved bird mode.</li> </ul>

MFD	Software version	Supported features
<b>Axiom-Series:</b>	Running LightHouse 3, software version v3.0.40 to v3.3.170	<ul style="list-style-type: none"> <li>• Real-time heading</li> <li>• Improved bird mode.</li> </ul>
<b>eS Series / gS Series:</b>	Running LightHouse 3, software version v3.4.66 or later.	<ul style="list-style-type: none"> <li>• Real-time heading</li> <li>• Automatic MARPA</li> <li>• True trails</li> <li>• 96 nm range scale</li> <li>• Improved bird mode.</li> </ul>
<b>eS Series / gS Series:</b>	Running LightHouse 3, software version v3.3.170.	<ul style="list-style-type: none"> <li>• Real-time heading</li> <li>• Improved bird mode.</li> </ul>
<b>eS Series / gS Series:</b>	Running LightHouse 2, software version v17.45 or later.	<ul style="list-style-type: none"> <li>• Improved bird mode.</li> </ul>
<b>a-Series / c-Series / e-Series:</b>	Running LightHouse 2, software version v17.45 or later.	<ul style="list-style-type: none"> <li>• Improved bird mode.</li> </ul>
<b>G-Series:</b>	Running software version v4.66	<ul style="list-style-type: none"> <li>• Improved bird mode.</li> </ul>
<b>E-Series Widescreen:</b>	Running software version v2.65	<ul style="list-style-type: none"> <li>• Improved bird mode.</li> </ul>
<b>C-Series Widescreen:</b>	Running software version v2.35	—
<b>“Classic” E-Series:</b>	Running software version v5.69	—

## 3.7 Typical system examples


The Magnum Open Array Radar scanner can be connected to a variety of equipment as part of your marine electronics system.

### Note:

The following illustrations show the various products that can be connected in a typical system. These systems are shown as an example only and may differ from your planned installation.

- For information on how to connect the products, refer to: [p.33 – Cables and connections – General information](#)
- For information on available cables and accessories, refer to: [p.74 – Spares and accessories](#)


### RayNet (Ethernet) network switch connection:

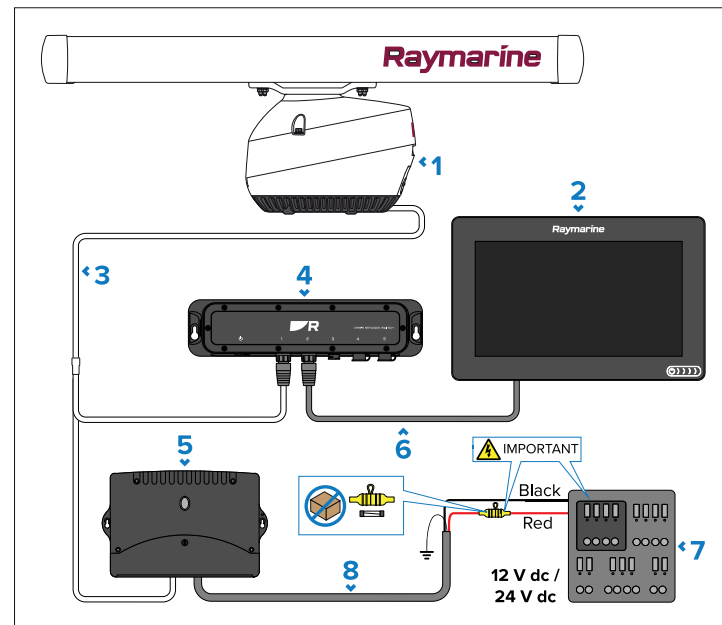

Description	
1	Magnum Open Array Radar scanner, supplied.
2	Compatible multifunction display / chartplotter, available separately.
3	15 m (49.21 ft) Radar-to-'RayNet & power' cable, supplied.
4	RayNet (Ethernet) network switch (RNS-5 currently illustrated), available separately.
5	VCM100 power converter, supplied.
6	RayNet (Ethernet) to RayNet (Ethernet) cable, available separately.
7	12 V dc / 24 V dc power supply (distribution panel or battery).
8	VCM100 power cable (not supplied).

**Note:**  
Some power connections are omitted from the illustration above. The network switch and multifunction display each require a dedicated power connection.

## RJ45 (SeaTalk HS) legacy multifunction display / chartplotter:

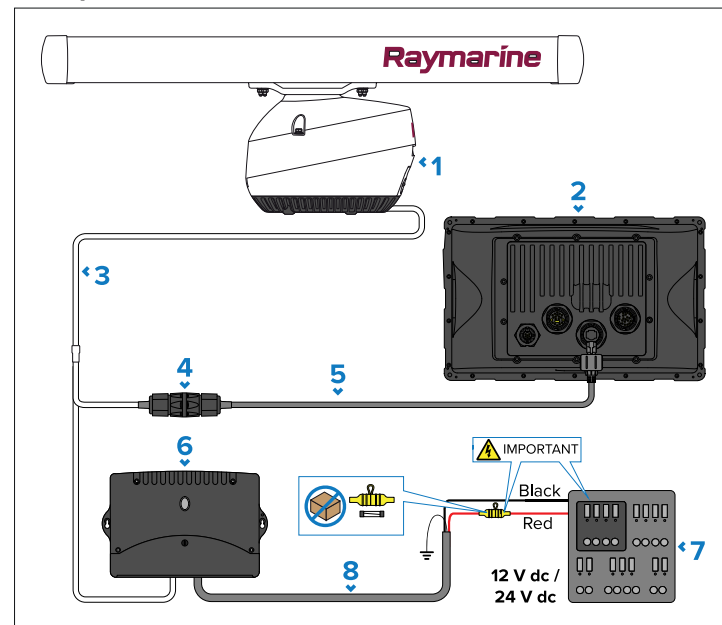

### Note:

- Some power connections are omitted from the illustration above. The multifunction display / chartplotter requires a dedicated power connection.
- A separate Radar to “RJ45 & power” accessory cable is available for connections to equipment that requires an RJ45 connector. For more information on the spares and accessories available, refer to: [p.74 – Spares and accessories](#)

Description	
1	Magnum Open Array Radar scanner, supplied.
2	Compatible multifunction display / chartplotter, available separately.

	Description
3	15 m (49.21 ft) Radar-to-'RJ45 & power' cable, available separately.
4	RJ45 to RJ45 waterproof coupler, available separately.
5	RJ45 to waterproof RJ45 (SeaTalk HS) cable, available separately.
6	VCM100 power converter, supplied.
7	12 V dc / 24 V dc power supply (distribution panel or battery).
8	VCM100 power cable (not supplied)

#### Important:

Fuses (not supplied) are required for circuit protection for the VCM100. For suitable fuse ratings, refer to: [p.53 – Circuit breaker and fuse ratings](#)

## 3.8 Software updates

Raymarine regularly issues software updates for its products, which provide new and enhanced features and improved performance and usability. It's important to ensure that you have the latest software for your products by regularly checking the Raymarine website for new software releases.

To check for the latest software updates and the software update procedure for your specific product(s), refer to: [www.bit.ly/rym-software](http://www.bit.ly/rym-software)

Unless otherwise stated, software updates for Raymarine products are performed using a Raymarine MFD / chartplotter.

- Where applicable, you should always backup your user data and settings before performing a software update.
- To update SeaTalk NG products, you must use the datamaster MFD / chartplotter which is physically connected to the SeaTalk NG backbone.
- Ethernet (RayNet) products can be updated from any MFD / chartplotter on the same network as the product to be updated.

- In order to perform a software update, any connected Autopilot or Radar must be switched to Standby.
- The MFD / chartplotter "Check online" feature is only available when connected to the Internet.

#### Note:

If in doubt as to the correct procedure for updating your product software, refer to your dealer or Raymarine technical support.

#### Caution: Installing software updates

- The software update process is carried out at your own risk. Before initiating the update process ensure you have backed up any important files.
- Ensure that the product(s) has a reliable power supply and that the update process is not interrupted.
- Damage caused by an incomplete update is not covered by Raymarine warranty.
- By downloading the software update package, you agree to these terms.


# CHAPTER 4: PARTS SUPPLIED

## CHAPTER CONTENTS

- 4.1 Parts supplied (pedestal and VCM100) — page 25
- 4.2 Parts supplied (antenna) — page 25
- 4.3 Special bundle and promotional products — page 26

## 4.1 Parts supplied (pedestal and VCM100)

The parts illustrated below are supplied in the pedestal box for the following part numbers: T70408, T70410, T70412, T70414

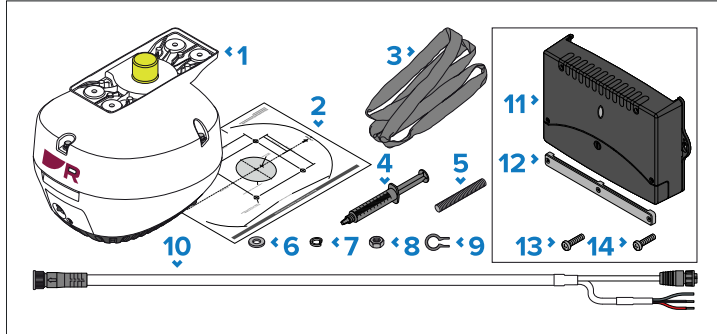

Description	
1	1x Pedestal.
2	1x Mounting template.
3	1x Lifting sling.
4	1x Denso paste.
5	4x Studs.
6	4x Plain washers.
7	4x Spring washers.
8	8x Nuts.
9	1x Cable tightening tool.
10	1x Radar-to-'RayNet & power' cable, 15 m (49.21 ft).
11	1x VCM100 Voltage Converter Module.
12	1x VCM100 cable clamp.
13	2x VCM100 mounting screws.
14	3x VCM100 cable clamp mounting screws.

### Note:

- You must provide suitable power wires (not supplied) to connect the VCM100 to the power supply, including a suitable screen wire to connect the VCM100 to the vessel's RF ground connection. For information on suitable wire gauges, refer to: [p.54 – VCM100 power wire gauge](#) and [p.55 – VCM100 screen \(drain\) wire gauge](#)


- If you do not have a thermal circuit breaker or fuse in your power circuit (fitted to the DC distribution panel, for example), you **MUST** fit an inline breaker or fuse to the positive wire of the power cable. (not supplied). For suitable fuse ratings, refer to: [p.53 – Circuit breaker and fuse ratings](#)

### Note:

A separate Radar to "RJ45 & power" accessory cable is available for connections to equipment that require an RJ45 connector. For more information on the spares and accessories available, refer to: [p.74 – Spares and accessories](#)

## 4.2 Parts supplied (antenna)

The parts illustrated below are supplied in the antenna box for the following part numbers: T70408, T70410, T70412, T70414

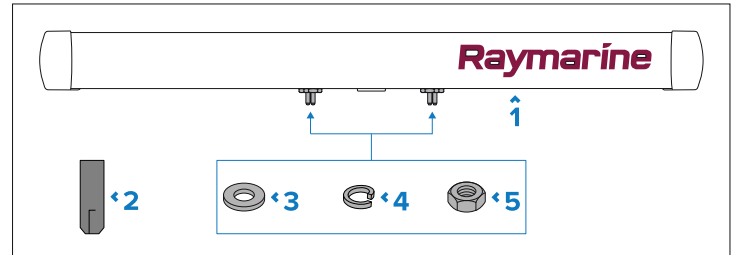

Description	
1	1x Antenna, 4 ft or 6 ft (4 ft shown).
2	4x Threaded alignment guides.

Description	
3	4x Plain washers.
4	4x Spring washers.
5	4x Nuts.

**Note:**

The supplied nut and washer fixings are attached to the antenna studs when packaged.

## 4.3 Special bundle and promotional products

From time to time, Raymarine may supply certain products as special “bundle”, “package”, or “promotional” variants.

These bundles typically include additional accessories such as cables, and usually have a Txxxxx part number. For these bundle variants, the provided parts supplied and part numbers may differ slightly from those stated in this document. However, the core supplied product and its features will remain the same as those described in this document. To ensure that you are using the correct documentation for your product, please:


- Refer to the product’s core model number, which can be found listed on the label on the rear or underside of your product, or accessed from any Raymarine multifunction display via the Diagnostics page. Ensure that the number matches one of those listed in the “Applicable products” section of your product documentation.
- Alternatively, contact the place of purchase and request the information. You may need to provide the product’s serial number, which can be found on the product packaging and also on the label on the rear or underside of the unit.

# CHAPTER 5: PRODUCT DIMENSIONS

## CHAPTER CONTENTS

- 5.1 Product dimensions — page 28

## 5.1 Product dimensions

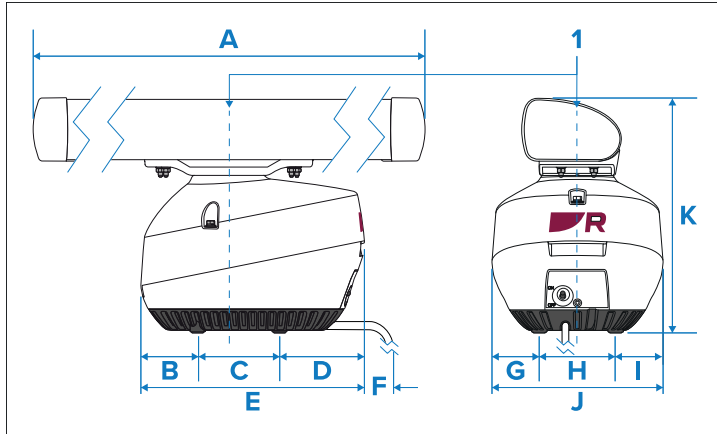

Description	
<b>1</b>	Center of rotation.
<b>A</b>	Maximum rotation: <ul style="list-style-type: none"> <li>• 48° – 1306 mm (51.4 in)</li> <li>• 72° – 1918 mm (75.7 in)</li> </ul>
<b>B</b>	104 mm (4.1 in)
<b>C</b>	150 mm (5.9 in)
<b>D</b>	155 mm (6.1 in)
<b>E</b>	409 mm (16.1 in)
<b>F</b>	59 mm (2.3 in) minimum
<b>G</b>	87 mm (3.4 in)
<b>H</b>	140 mm (5.5 in)
<b>I</b>	87 mm (3.4 in)
<b>J</b>	314 mm (12.3 in)
<b>K</b>	430 mm (16.9 in)

# CHAPTER 6: LOCATION REQUIREMENTS

## CHAPTER CONTENTS

- 6.1 Warnings and cautions — page 30
- 6.2 Potential ignition source — page 30
- 6.3 VCM100 location requirements — page 30
- 6.4 Radar scanner location requirements — page 30
- 6.5 Radar scanner mounting surface — page 31
- 6.6 Radar scanner mounting angle — page 32

## 6.1 Warnings and cautions

### Important:

Before proceeding, ensure that you have read and understood the warnings and cautions provided in the following section of this document:

- [p.8 — Important information](#)

## 6.2 Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).

## 6.3 VCM100 location requirements

When selecting a mounting location it is important to consider a number of factors.

- **Mounting orientation** — Ensure product is mounted vertically to allow for efficient heat dissipation.
- **Ventilation** — Ensure that:
  - Equipment is mounted in a compartment of suitable size.
  - Ventilation holes are not obstructed. Allow adequate separation of equipment.
- **Mounting surface** — Ensure equipment is adequately supported on a secure surface. Do not mount units or cut holes in places which may damage the structure of the vessel.
- **Cables** — Ensure the unit is mounted in a location which allows proper routing and connection of cables:
  - Minimum bend radius of 100 mm (3.94 in) unless otherwise stated.
  - Use cable supports to prevent stress on connectors.
  - The maximum length of cable between the battery and the VCM100 should not normally exceed 6 m (19.69 ft). All power cable lengths should be kept as short as possible.
- **Water ingress** — The VCM100 is splashproof, and suitable for mounting below decks only.

- **Electrical interference** — Select a location that is far enough away from devices that may cause interference, such as motors, generators and radio transmitters/receivers.
- **Magnetic compass** — Mount the VCM100 at least 1 m (3.28 ft) away from a magnetic compass.
- **Power supply** — Select a location that is as close as possible to the vessel's DC power source. This will help to keep cable runs to a minimum.

## 6.4 Radar scanner location requirements

When selecting a location it is important to consider a number of factors.

### Horizontal position

The Radar scanner should be positioned as near as possible to your vessel's centerline.

### Height

The Radar scanner should normally be mounted as high as practical above the waterline:

- Mount the scanner above head height out of range of personnel, to avoid mechanical danger and minimize exposure to electromagnetic radiation.
- Radar operates at the line-of-sight, so a high mounting position gives better long range performance.
- Surrounding large objects, in the same horizontal plane, can interfere with the Radar signal and cause blind areas or shadow sectors and false targets on the Radar display (see below).

Do not mount the Radar scanner so high that it is affected by the pitching and rolling of the vessel.

### Shadow areas and false echoes

Mount the Radar scanner away from large structures or equipment, such as engine stacks, searchlights, horns, or masts. These objects may cause shadow areas and false echoes. For example, if you

mount the Radar scanner on a mast, echoes from other targets may be reflected from the mast. Wet sails may also cause shadow areas, so Radar performance may be reduced in the rain. It is particularly important to avoid shadow areas near the bow. Raising or even lowering the Radar scanner may help to reduce these effects. In shadow areas beyond the obstruction there will be a reduction of the beam intensity. There may be a blind sector if the beam intensity is not sufficient to obtain an echo from an object. This may occur even at close range. For this reason the angular width and relative bearing of any shadow area must be determined at installation. You may be able to detect shadow areas or false echoes on your multifunction display. For example, sea clutter can be used as a good indicator of blind arcs. Dark sectors on the Radar display indicate possible shadowed areas. This information should be posted near the display unit and operators must be alert for targets in these blind areas.

## Access

The Radar scanner should be easily accessible to allow maintenance to be carried out safely. Sufficient clearance must be allowed to fully open the scanner unit for maintenance and service.

## Mounting platform

The Radar scanner must be mounted on a rigid and stable platform. The platform must be capable of supporting the mass and inertia of the Radar scanner under seagoing conditions. The platform should not twist (causing bearing errors) or be subject to excessive vibration or shock.

The platform must be free-draining, to prevent the pooling of water beneath the Radar scanner.

The mounting site must be clear of the following:

- Ropes.
- Moving rigging.
- Heat.
- Fumes.
- People.

## Magnetic compass

Mount the Radar scanner at least 1 m (3.28 ft) away from a magnetic compass.

[Location requirements](#)

## Multiple radar scanners

If two Radar scanners are installed at different locations in a dual Radar system, care should be taken to allow for the difference in position of the radars when switching between the two on your multifunction display. This is especially noticeable at short ranges on larger vessels.

To reduce possible interference between Radar scanners in a dual radar system:

- Maximise the spacing between the scanners.
- If possible, locate the scanners so that they are aligned vertically, one directly above the other, with a minimum of 2 m (6.56 ft) vertical separation.
- If the scanners can't be aligned one directly above the other, locate each scanner the same distance from the bow your vessel. Interference is more likely if the scanners are installed one in front of the other, even when separated vertically.

## Cables


- All cables should be adequately clamped and protected from physical damage and exposure to heat. Avoid running cables through bilges or doorways, or close to moving or hot objects.
- Where a cable passes through an exposed bulkhead or deckhead, use a watertight feed-through.

## 6.5 Radar scanner mounting surface

Suitable Radar scanner mounting surfaces include a mast platform, an arch, or a bridge structure.

If mounting the Radar scanner on a sailboat, it may be necessary to install a Radar guard to prevent the sails or any rigging coming into contact with the Radar scanner or mounting platform. Without a proper Radar guard the mounting platform and the Radar scanner could be severely damaged.


The following diagram illustrates suitable mounting surfaces for the Radar scanner:

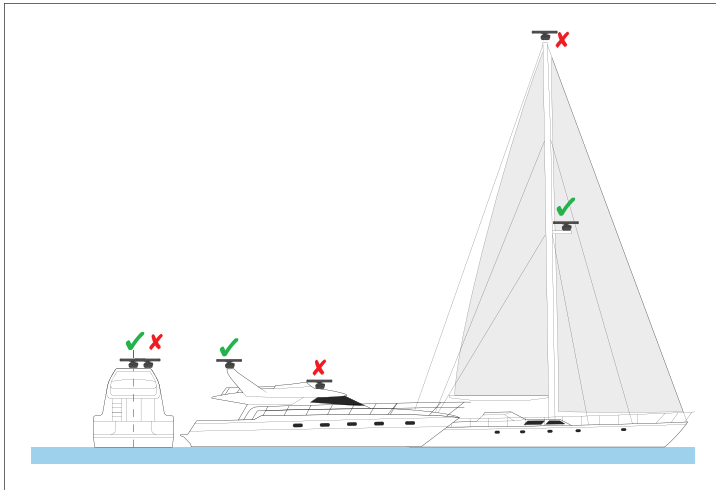

## 6.6 Radar scanner mounting angle


Ensure the Radar scanner rotates parallel to the water line.

The Radar beam from the Radar scanner is approximately 25° wide in the vertical direction, to give good target detection even when your vessel pitches and rolls.

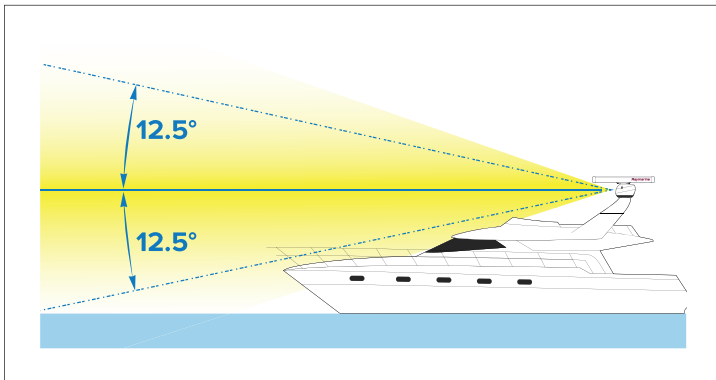

Planing hull vessels, and some displacement hull vessels, adopt a higher bow angle when the vessel is at cruising speed. This may raise the Radar's main radiation angle, and can cause poor detection

of nearby targets. It may be necessary to compensate for the bow rise to ensure optimum target detection. This can be achieved by fitting a wedge or washers between the mounting platform and the base of the Radar scanner, so that the Radar beam remains parallel to the water line when the vessel's bow rises at cruising speed.

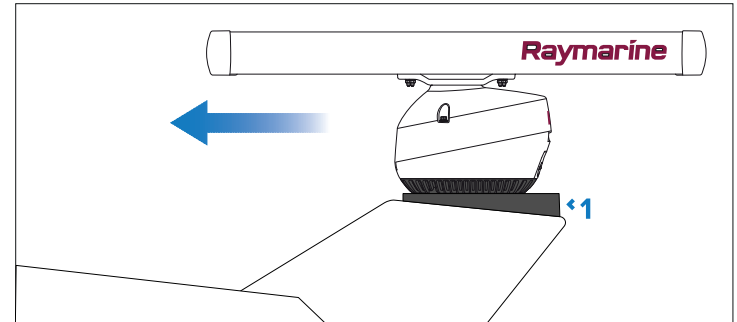

### Description

- 1 Wedge or washers.

# CHAPTER 7: CABLES AND CONNECTIONS — GENERAL INFORMATION

## CHAPTER CONTENTS

- [7.1 General cabling guidance — page 34](#)
- [7.2 Network cable connector types — page 35](#)
- [7.3 Radar scanner connections overview — page 36](#)

## 7.1 General cabling guidance

### Cable types and length


It is important to use cables of the appropriate type and length.

- Unless otherwise stated only use cables supplied by Raymarine.
- Where it is necessary to use non-Raymarine cables, ensure that they are of correct quality and gauge for their intended purpose. (e.g.: longer power cable runs may require larger wire gauges to minimize voltage drop along the run).

### Cable routing and bend radius

To maximize cable performance and lifespan, it's important to ensure that all cables are routed correctly and adequate space is provided to allow for each cable's minimum bend radius.

#### Minimum cable bend radius

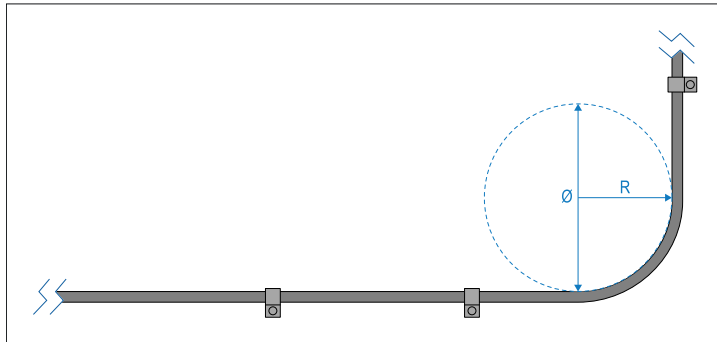

Do NOT bend cables excessively. Wherever possible, ensure that your chosen product installation location allows enough clearance for the minimum cable bend diameter specified in the following table:

	Description	Value
Ø	Cable minimum bend <b>diameter</b> .	200 mm (7.87 in.)
R	Cable minimum bend <b>radius</b> .	100 mm (3.94 in.)

#### Note:

For products where multiple different cable types are connected, each with a different minimum cable bend radius, the higher figure is provided in the table above (i.e. the cable with the greatest minimum bend radius is specified).

### Cable routing — best practices

- Protect all cables from physical damage and exposure to heat. Use trunking or conduit where possible. Do NOT run cables through bilges or doorways, or close to moving or hot objects.
- Secure cables in place using cable clips or cable ties. Coil any excess cable and tie it out of the way.
- Where a cable passes through an exposed bulkhead or deckhead, use a suitable watertight feed-through (conduit).
- Do NOT run cables near to engines or fluorescent lights.
- Always route data cables as far away as possible from:
  - Other equipment and cables.
  - High current-carrying AC and DC power lines.
  - Antennas.

### Strain relief

Use adequate strain relief for cabling to ensure that connectors are protected from strain and will not pull out under extreme sea conditions.

### Circuit isolation

Appropriate circuit isolation is required for installations using both AC and DC current:

- Always use isolating transformers or a separate power-inverter to run PCs, processors, displays and other sensitive electronic instruments or devices.
- If using Weather FAX audio cables, always use an isolating transformer.
- If using a third-party audio amplifier, always use an isolated power supply.
- If using an RS232/NMEA converter, always ensure optical isolation on the signal lines.

- Always ensure that PCs or other sensitive electronic devices have a dedicated power circuit.

## Cable shielding

Ensure that cable shielding is not damaged during installation and that all cables are properly shielded.

### Important:

Be aware that some **third-party** cables and adaptors (for example, certain Ethernet cables using RJ45 connectors) are not always shielded. To prevent breaks in cable shielding continuity and potential grounding issues, special attention is required to ensure that any cables, extension cables, adaptors, or other signal-coupling devices (such as multi-way connectors, junction boxes, terminal blocks etc.) used in cable runs **maintain all shield connections throughout the cable run.**

## Suppression ferrites

- Raymarine cables may be pre-fitted or supplied with suppression ferrites. These are important for correct EMC performance. If ferrites are supplied separately to the cables (i.e. not pre-fitted), you must fit the supplied ferrites, using the supplied instructions.
- If a ferrite has to be removed for any purpose (e.g. installation or maintenance), it must be replaced in the original position before the product is used.
- Use only ferrites of the correct type, supplied by Raymarine or its authorized dealers.
- Where an installation requires multiple ferrites to be added to a cable, additional cable clips should be used to prevent stress on the connectors due to the extra weight of the cable.



### Warning: Positive ground systems

Do NOT connect this unit to a system which has positive grounding.

## Connecting cables




Follow the steps below to connect the cable(s) to your product.

1. Ensure that the vessel's power supply is switched off.

2. Ensure that the device being connected has been installed in accordance with the installation instructions supplied with that device.
3. Ensuring correct orientation, push cable connectors fully onto the corresponding connectors.
4. Engage any locking mechanism to ensure a secure connection (e.g.: turn locking collars clockwise until tight, or in the locked position).
5. Ensure any bare ended wire connections are suitably insulated to prevent shorting and corrosion due to water ingress.


## 7.2 Network cable connector types

In Raymarine systems, Ethernet network cable connectors may be one of three different types — RayNet, RJ45, or RJ45 (SeaTalk HS).

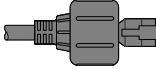
Connector	Description
	RayNet. This connector type is waterproof.
	RJ45. This connector type is NOT waterproof.
	Waterproof RJ45 (SeaTalk HS) for connection to (legacy) Raymarine equipment featuring a lockable RJ45 (SeaTalk HS) connector. Alternatively, these cables may be coupled with suitable adapter cables for waterproof connections to equipment featuring a RayNet connector.

## 7.3 Radar scanner connections overview

The Radar scanner includes the following connectors:

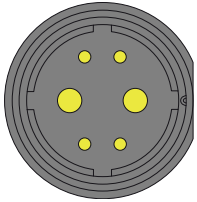Connector	Connects to	Suitable cables
	<ul style="list-style-type: none"> <li>RayNet (Ethernet) network devices.</li> </ul>	<ul style="list-style-type: none"> <li>Radar-to-'RayNet &amp; power' cable, supplied.</li> </ul>
	<ul style="list-style-type: none"> <li>RJ45 (SeaTalk HS) network devices.</li> </ul>	<ul style="list-style-type: none"> <li>Radar-to-'RJ45 &amp; power' cable, available separately.</li> </ul>
	<ul style="list-style-type: none"> <li>12 V / 24 V power supply.</li> </ul>	

The combined power-and-data connector is located on the underside rear of the scanner:

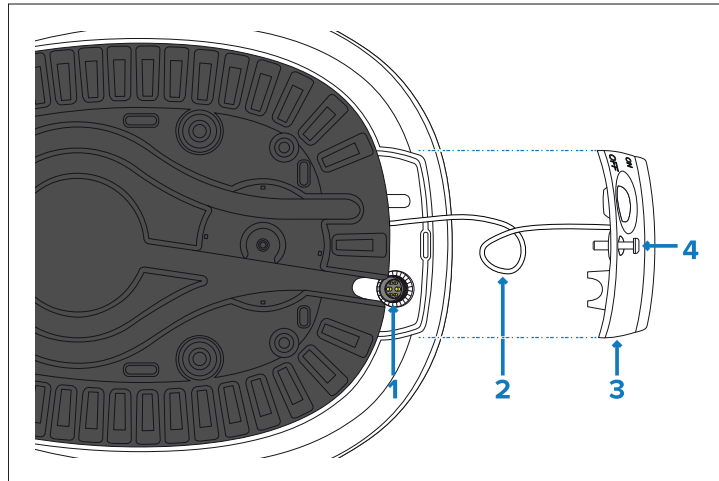

Description	
1	Power-and-data connector.
2	Lanyard.

Description	
3	Rear panel.
4	Rear-panel retaining screw.

### Note:

The rear panel must first be removed in order to access the connector. For more information, refer to: [p.38 — Making the Radar cable connection](#)

## Cable routing options

You can route the combined power-and-data cable away from the Radar in several ways.

The available routing options allow for the cable to exit the Radar in 3 different positions. The option you choose will depend on the Radar mounting location:


- Rear-horizontal cable exit** — if the Radar is mounted on an extended flat surface, and the cable cannot be routed through the surface.
- Rear-vertical cable exit** — if the Radar is mounted on a truncated flat surface that does not extend far beyond the rear of the flat Radar base, and the cable cannot be routed through the surface.
- Base cable exit** — if the Radar is mounted on a flat surface, and the cable can be routed through the surface.

The following examples show how to route the cable in each scenario.

### Note:

The Illustrations below show the Radar with the rear cover removed. For more information on how to remove the rear cover, refer to: [p.38 — Making the connection to the Radar](#)

## Rear-horizontal cable exit (Radar mounted to extended flat surface):

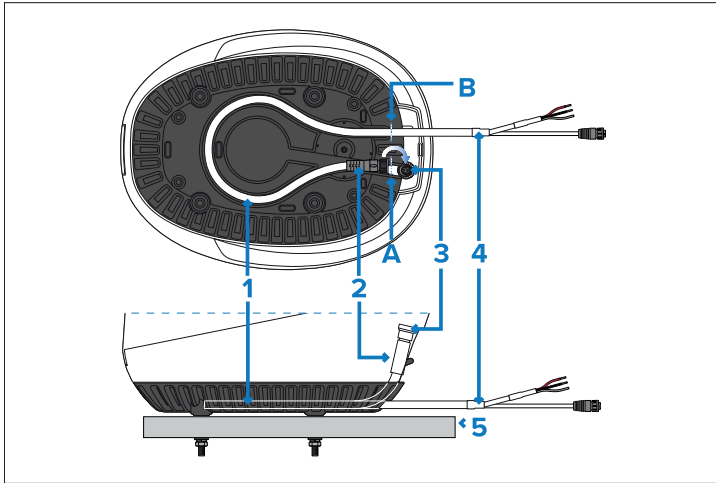


### Note:

When laying the cable between the power supply / network connections and the cable's rear exit point from the Radar, ensure that approximately 650 mm (26 in) of cable is available for routing within the Radar base to the power-and-data connector. This length of cable is shown between the dashed lines (between **A** and **B**) in the illustration above.


1. Cable routed through channel in Radar base.
2. Cable plug.
3. Power-and-data connector.
4. Combined power-and-data cable.
5. Mounting surface.

## Rear-vertical cable exit (Radar mounted to truncated flat surface):

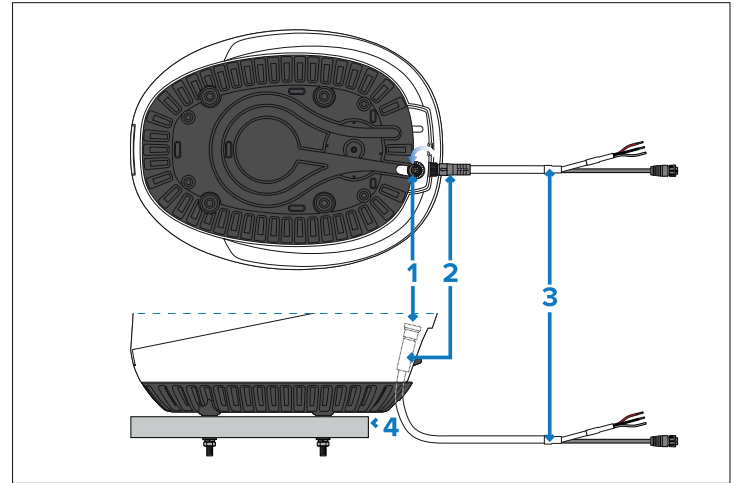

1. Power-and-data connector.
2. Cable plug.
3. Combined power-and-data cable.
4. Mounting surface.

## Base cable exit (Radar mounted to flat surface):

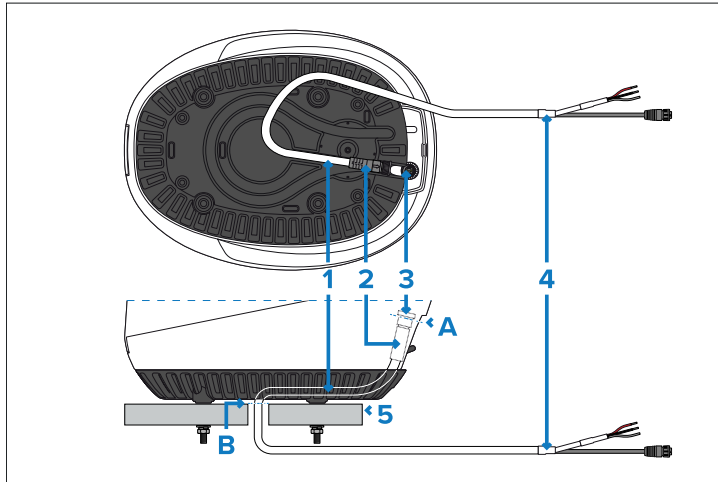

### Note:

When laying the cable between the power supply / network connections and the cable's bottom exit point from the Radar, ensure that approximately 255 mm (10 in) of cable is available for routing within the Radar base to the power-and-data connector. This length of cable is shown between the dashed lines (between **A** and **B**) in the illustration above.

1. Cable routed through channel in Radar base.
2. Cable plug.
3. Power-and-data connector.
4. Combined power-and-data cable.
5. Mounting surface.

## Making the Radar cable connection

Follow the steps below to connect the combined power-and-data cable to the Radar.

Before connecting the combined power-and-data cable to the Radar, ensure that:


- The vessel's power supply is switched off.
- The multifunction display / chartplotter being connected to the scanner has been installed in accordance with the installation instructions supplied with that device.
- You loosen the rear-panel retaining screw, and carefully pull the rear panel away from the rear of the scanner.

### Note:


The retaining screw is permanently attached to the rear panel to prevent loss, and the rear panel remains attached to the scanner with a lanyard. Do not attempt to detach the lanyard, or to completely remove the retaining screw from the rear panel.

- If necessary, the combined power-and-data cable has been routed within the scanner base. The cable routing option required will depend on the mounting location that you have chosen for your scanner. For more information, refer to: [p.36 – Cable routing options](#)

In order to connect the combined power-and-data cable:

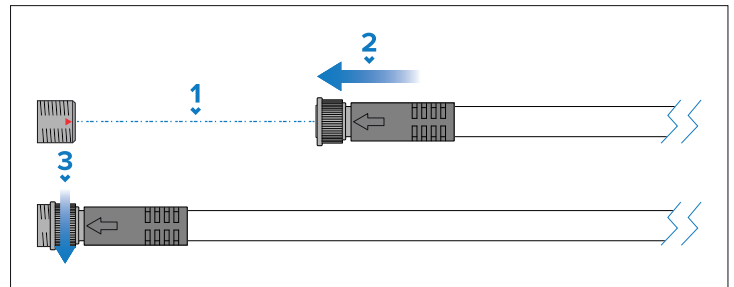

1. Ensure that the arrow on the power-and-data cable connector is aligned with the red triangular mark on the Radar scanner connector.
2. Carefully push the combined power-and-data cable connector fully into the Radar scanner connector.
3. Hand-tighten the locking collar on the combined power-and-data cable connector.

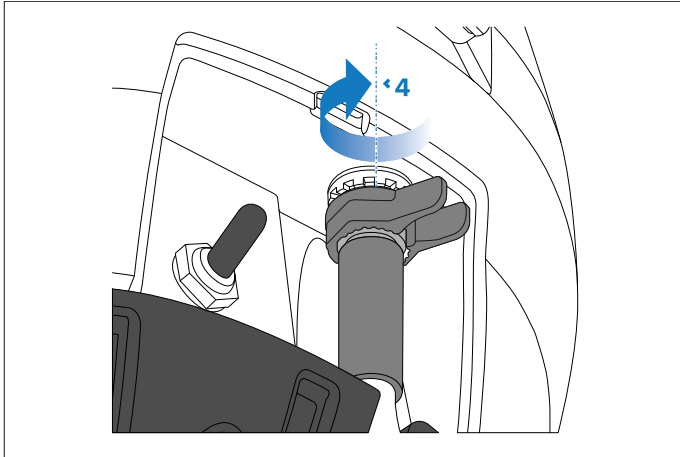

4. Use the plastic tool provided to fully tighten the locking collar. Do NOT use a wrench or any other tool, as this may damage the connector.
5. Grease the retaining screw with the supplied Denso paste.
6. Replace the rear panel, and tighten the retaining screw.

**Note:**

If the cable plug is disconnected after the initial installation, Raymarine recommends that you lightly coat the connector thread with water-repellent grease before reconnecting.


# CHAPTER 8: MOUNTING

## CHAPTER CONTENTS

- 8.1 Tools required — page 41
- 8.2 Mounting the VCM100 — page 41
- 8.3 Securing the pedestal to the mounting platform — page 42
- 8.4 Securing the Radar antenna to the pedestal — page 44
- 8.5 Radar scanner protection — sailing vessels — page 44

## 8.1 Tools required

Product installation requires the following tools:

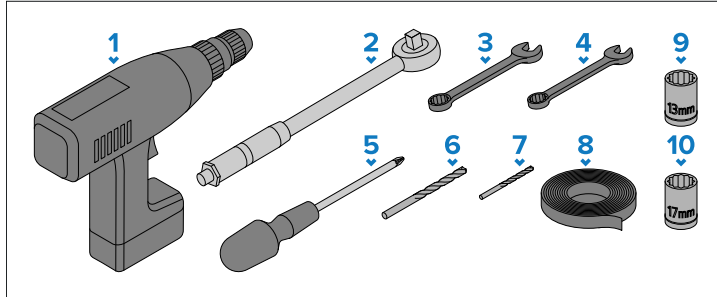

Description	
1	Power drill.
2	Torque wrench.
3	17 mm (1 <sup>1</sup> / <sub>16</sub> " ) spanner.
4	13 mm (1 <sup>1</sup> / <sub>2</sub> " ) spanner.
5	Pozidrive screwdriver.
6	11 mm (7 <sup>7</sup> / <sub>16</sub> " ) drill bit.
7	3 mm (1 <sup>1</sup> / <sub>8</sub> " ) drill bit.
8	Adhesive tape.
9	13 mm (1 <sup>1</sup> / <sub>2</sub> " ) socket.
10	17 mm (1 <sup>1</sup> / <sub>16</sub> " ) socket.

## 8.2 Mounting the VCM100

Instructions for mounting the VCM100.

**Before mounting the unit, ensure that you have:**

- Selected a suitable location, based on the location requirements found in this document. For further information, refer to:
  - [p.29 – Location requirements](#)


### Important:

The VCM100 is splashproof, and suitable for mounting below decks only.

- Identified the cable connections and route that the cables will take.

### Important:

**Do NOT connect any cables to the power supply until the following steps have been completed.**

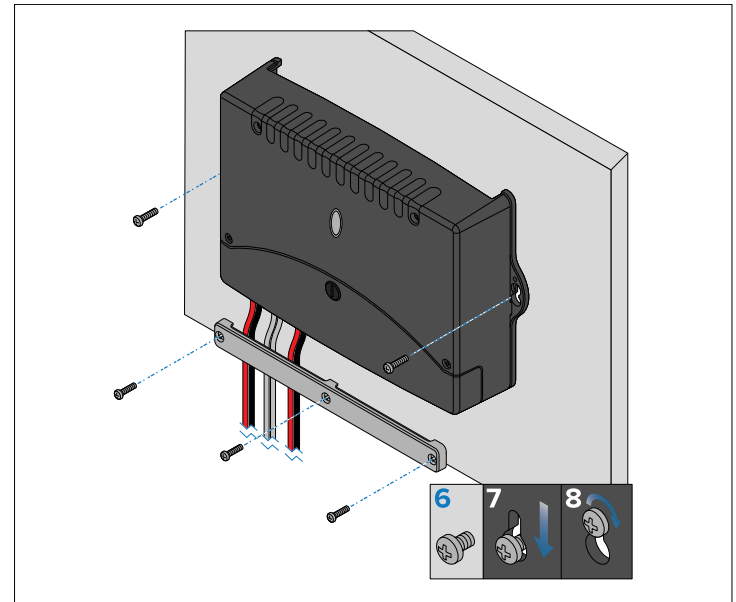

- Check the selected location for the unit. The VCM100 requires a clear, flat, vertical surface with suitable space for routing the cables below the unit.
- Hold the VCM100 in place at the required mounting location.
- Using a pencil, mark the drilling area inside the mounting lug on each side of the VCM100 unit.
- Using a 3 mm (0.1 in) drill bit, drill holes at the marked locations.
- Using a suitable screwdriver, screw the self-tapping mounting screws approximately halfway into the drilled holes.

6. Align the VCM100 mounting lugs with the drill holes.
7. Place the VCM100 into position, and ensure that the VCM100 slides down into position.
8. Secure the VCM100 by fully tightening the screws.
9. Connect the cables, according to the instructions provided in this document.
10. Hold the cable clamp in place over the cables, approximately 50 mm (2 in) below the mounted VCM100 unit.
11. Using a pencil, mark the drilling area inside each mounting bracket hole.

**Ensure that the cables do NOT cover the holes.**

12. Using a 3 mm (0.1 in) drill bit, drill a hole through the pencil marks.
13. Hold the cable clamp in place, each hole aligned with the drill holes.
14. Using a suitable screwdriver, screw the self-tapping mounting screws through the bracket holes, into the drilled holes.

## 8.3 Securing the pedestal to the mounting platform

**Before securing the pedestal to the mounting platform, ensure that you have:**

- Selected a suitable location, based on the location requirements found in this document. For further information, refer to: [p.29 — Location requirements](#)
- Identified the cable connections and route that the cables will take.
- Prepared suitable lifting equipment for fixing the pedestal to the mounting platform. The Radar pedestal weighs 24.2 kg (53.35 lb) without an antenna fitted.


### Important:

For safety reasons it is recommended that the unit is not lifted by one person. The unit is supplied with a lifting sling (maximum Safe Working Load (SWL) = 1000 kg). Suitable lifting equipment could include a crane, hoist, or an appropriate rigid overhead structure. Do NOT attach the antenna to the pedestal prior to lifting.

### Note:


Do NOT connect any cables until the following steps have been completed.

1. Check the selected location. A clear, flat platform is required for mounting the pedestal unit. For more information, refer to the following section: [p.30 — Radar scanner location requirements](#)
2. Fix the supplied mounting template to the platform, using masking or self-adhesive tape.

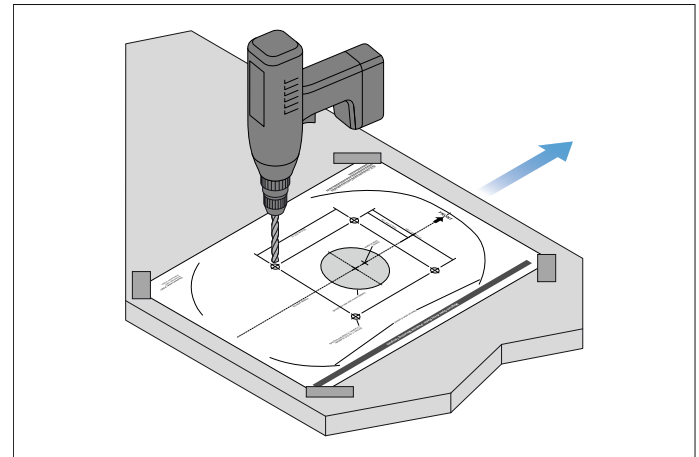

3. Using a 3 mm ( $1/8$ " ) drill bit, drill the 4 holes, as indicated on the mounting template.  
Check that the holes have been drilled in the correct position.
4. Using an 11 mm ( $7/16$ " ) drill bit, drill through the 4 holes.
5. Remove the mounting template.
6. The pedestal unit has a cap fitted over the open array mounting shaft to protect the protruding coaxial pin. This cap must be left in place until the open array antenna is fitted to the pedestal.


7. Grease the 4 metal studs with the supplied Denso paste.

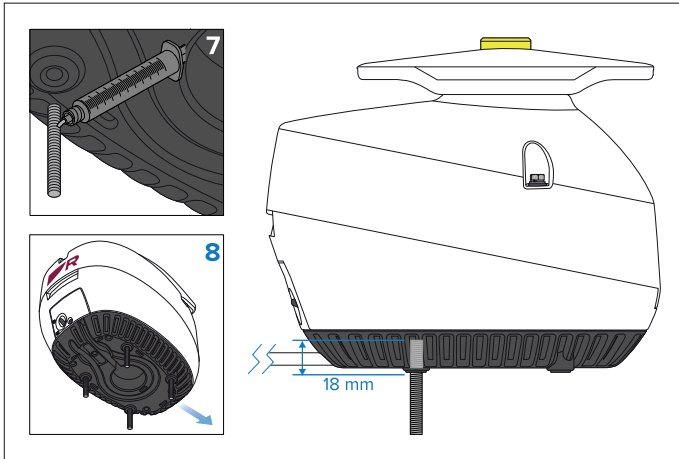


8. Insert the studs no more than 18 mm (0.71 in) into the holes in the pedestal base, and hand-tighten. 4 spare nuts are provided which may be used as temporary locking nuts to aid insertion of the studs into the pedestal.
- If the supplied studs are not long enough for the mounting surface thickness, use M10 stainless steel, grade A4-70 studding of a suitable length.
9. Using the supplied lifting sling, looped beneath the antenna rotor, raise the pedestal over the mounting surface. Carefully lower into position, taking care that the studs pass through the holes without damaging the threads. Ensure that the front of the pedestal is pointing towards the bow of the vessel.

**Important:**

Do NOT attach the antenna to the pedestal prior to lifting.

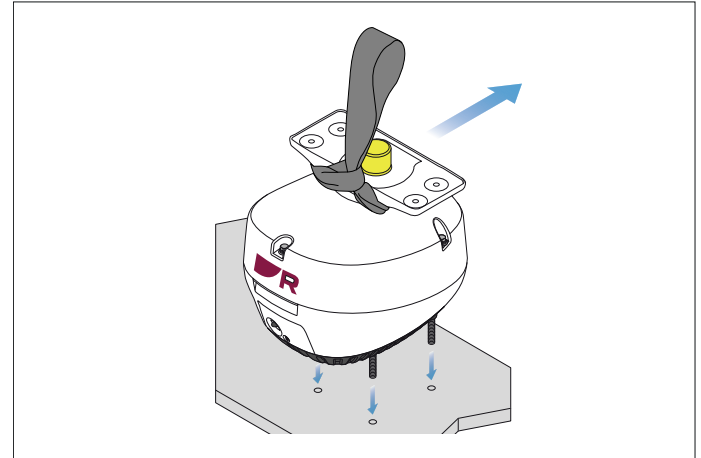


10. Grease the studs with the supplied Denso paste.
11. Referring to the following illustration, use the 4 nuts and associated washers to secure the pedestal to the platform. Tighten each nut to 30 N-m (22.1 lbf-ft) torque.

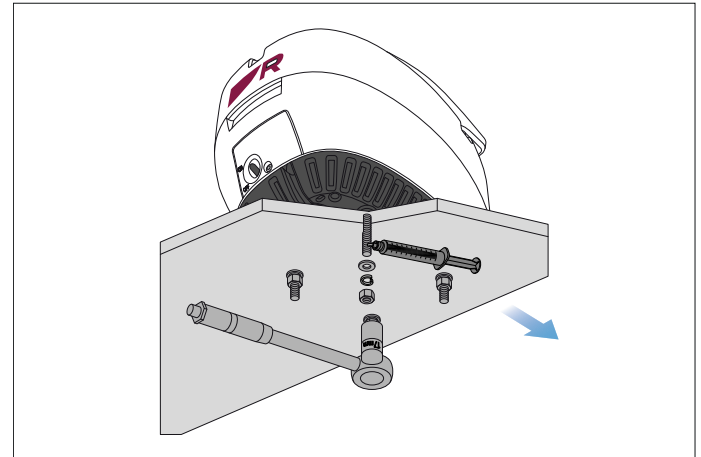

12. Ensure all 4 sets of nuts and washers are used to secure the pedestal to the mounting platform. There should be no more

than 6 mm (0.24 in) of excess stud below the nut. Cut-off any excess stud.

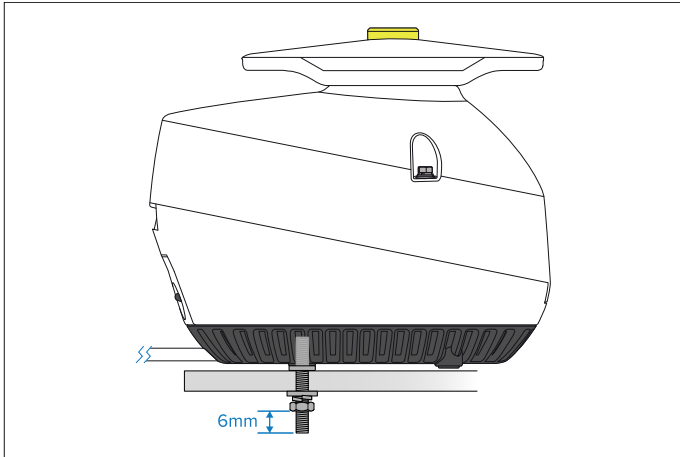

13. Retain the 4 spare nuts (which may have been used as a temporary measure during step 8).


## 8.4 Securing the Radar antenna to the pedestal

**Before securing the Radar antenna to the pedestal, ensure that:**

- The pedestal base is securely fixed to the platform.
- The cable is NOT attached.
- The pedestal power switch is in the OFF position.
- The pedestal unit has a cap fitted over the open array mounting shaft to protect the protruding co-axial pin. This cap must remain in place until you're ready to fit the antenna to the pedestal unit.

### Important:

You MUST ensure that the antenna does not come into contact with the delicate protruding co-axial pin. This is a critical component and should be treated with caution. Follow all the instructions provided below, and ensure that the alignment guides are used.

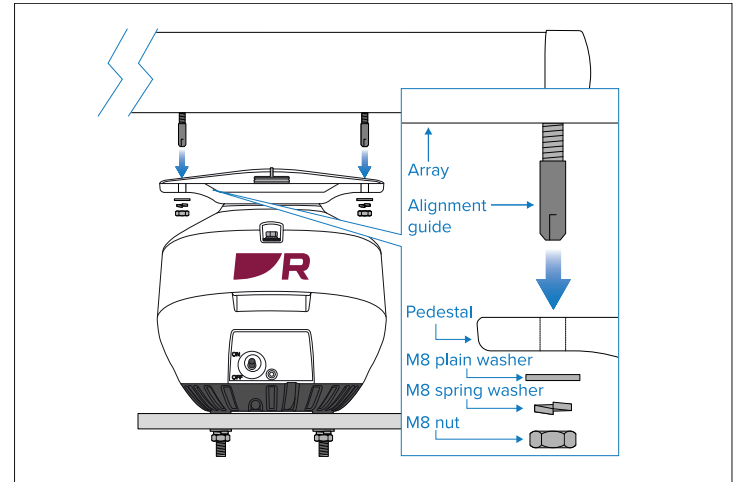

1. Fit the 4 threaded alignment guides to the studs on the underside of the antenna. Ensure a close fit. The alignment guides are essential to help prevent damage to the coaxial pin.
2. Remove the protective cap from the antenna shaft. Retain the cap for future use.
3. Position the antenna mounting bracket on the Port to Starboard axis of the pedestal.
4. Lift the antenna into position, ensuring it is in the correct orientation and that the threaded alignment guides are fitted. Carefully align and slowly lower the antenna.
5. Once the antenna is in position, remove the alignment guides.
6. Grease the 4 securing studs with the supplied Denso paste.
7. Use the 4 nuts and associated washers to secure the antenna to the pedestal, as shown in the following diagram. Tighten each nut to 10 Nm (7.4 lb ft) torque.

## 8.5 Radar scanner protection — sailing vessels

Additional considerations apply when installing the radar scanner on a sailing vessel.

- When mounting the radar scanner unit onto the mast, check that the unit is not fouled by the sails, especially when tacking.

- Depending on the type of sailing vessel and the design of the sailplan, a radar scanner guard should be attached to the mast if the sails or rigging contact either the radar scanner unit or the mounting bracket. Without a proper radar guard, serious damage can result to the radar mounting bracket and the radar itself. In extreme cases, such damage could result in the radar scanner unit being pulled off the mast. Therefore, it is recommended that a radar scanner guard should be mounted additionally and separately to the radar scanner mounting bracket.
- To prevent the risk of the radar scanner unit falling in the event that it has been damaged, the security lanyard supplied with the mast bracket **MUST** be secured properly to the mast and to the radar scanner unit, according to the instructions provided with the bracket. If a safety lanyard is not supplied with the mounting bracket, contact your local dealer for appropriate parts. **Do NOT** attach other equipment to either the radar scanner unit or the bracket.
- Raymarine strongly recommends that you check the condition and security of the bracket mounting feet, the security lanyard(s), the radar scanner guard, and the radar scanner unit itself, on a yearly basis (or more frequently depending on environmental applications). Any fittings should be replaced as appropriate.


# CHAPTER 9: NETWORK CONNECTIONS

## CHAPTER CONTENTS


- [9.1 Radar scanner connections overview — page 47](#)
- [9.2 Typical system examples — page 48](#)
- [9.3 Radar cable extensions — page 50](#)

## 9.1 Radar scanner connections overview

The Radar scanner includes the following connectors:

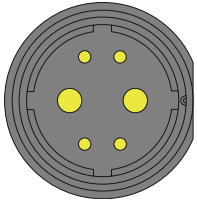Connector	Connects to	Suitable cables
	<ul style="list-style-type: none"> <li>• RayNet (Ethernet) network devices.</li> <li>• RJ45 (SeaTalk HS) network devices.</li> <li>• 12 V / 24 V power supply.</li> </ul>	<ul style="list-style-type: none"> <li>• Radar-to-'RayNet &amp; power' cable, supplied.</li> <li>• Radar-to-'RJ45 &amp; power' cable, available separately.</li> </ul>

The combined power-and-data connector is located on the underside rear of the scanner:

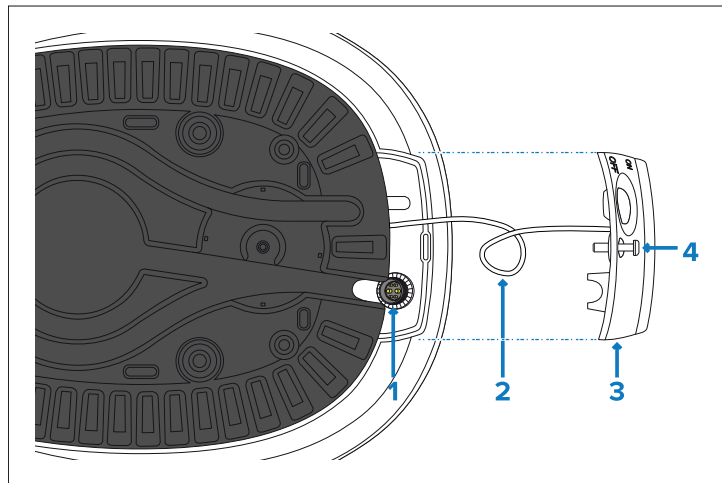

Description	
1	Power-and-data connector.
2	Lanyard.

Description	
3	Rear panel.
4	Rear-panel retaining screw.

### Note:

The rear panel must first be removed in order to access the connector. For more information, refer to: [p.47 – Making the Radar cable connection](#)

## Making the Radar cable connection

Follow the steps below to connect the combined power-and-data cable to the Radar.

Before connecting the combined power-and-data cable to the Radar, ensure that:


- The vessel's power supply is switched off.
- The multifunction display / chartplotter being connected to the scanner has been installed in accordance with the installation instructions supplied with that device.
- You loosen the rear-panel retaining screw, and carefully pull the rear panel away from the rear of the scanner.

### Note:


The retaining screw is permanently attached to the rear panel to prevent loss, and the rear panel remains attached to the scanner with a lanyard. Do not attempt to detach the lanyard, or to completely remove the retaining screw from the rear panel.

- If necessary, the combined power-and-data cable has been routed within the scanner base. The cable routing option required will depend on the mounting location that you have chosen for your scanner. For more information, refer to: [p.36 – Cable routing options](#)

In order to connect the combined power-and-data cable:

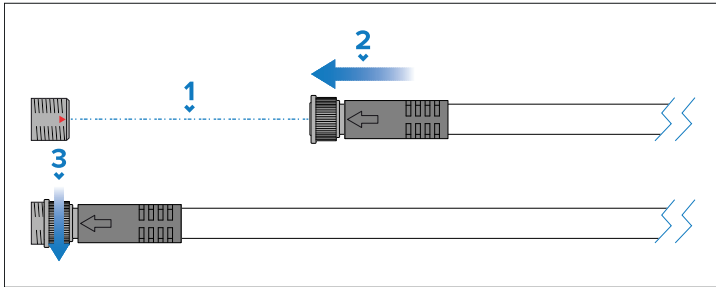

1. Ensure that the arrow on the power-and-data cable connector is aligned with the red triangular mark on the Radar scanner connector.
2. Carefully push the combined power-and-data cable connector fully into the Radar scanner connector.
3. Hand-tighten the locking collar on the combined power-and-data cable connector.

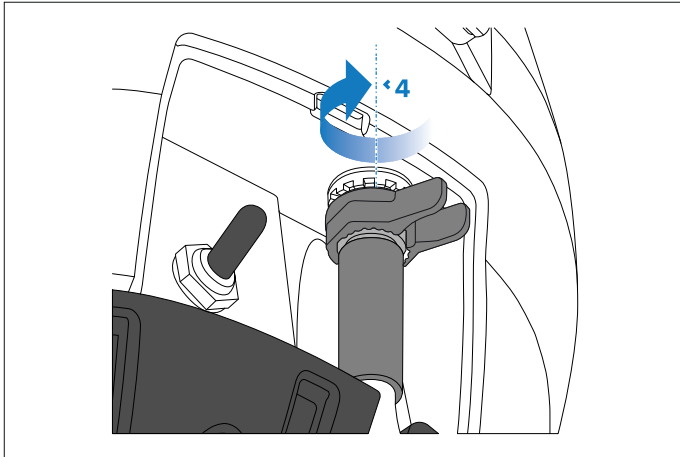

4. Use the plastic tool provided to fully tighten the locking collar. Do NOT use a wrench or any other tool, as this may damage the connector.
5. Grease the retaining screw with the supplied Denso paste.
6. Replace the rear panel, and tighten the retaining screw.

**Note:**

If the cable plug is disconnected after the initial installation, Raymarine recommends that you lightly coat the connector thread with water-repellent grease before reconnecting.

## 9.2 Typical system examples


The Magnum Open Array Radar scanner can be connected to a variety of equipment as part of your marine electronics system.

**Note:**

The following illustrations show the various products that can be connected in a typical system. These systems are shown as an example only and may differ from your planned installation.

- For information on how to connect the products, refer to: [p.33 – Cables and connections – General information](#)
- For information on available cables and accessories, refer to: [p.74 – Spares and accessories](#)

## RayNet (Ethernet) network switch connection:

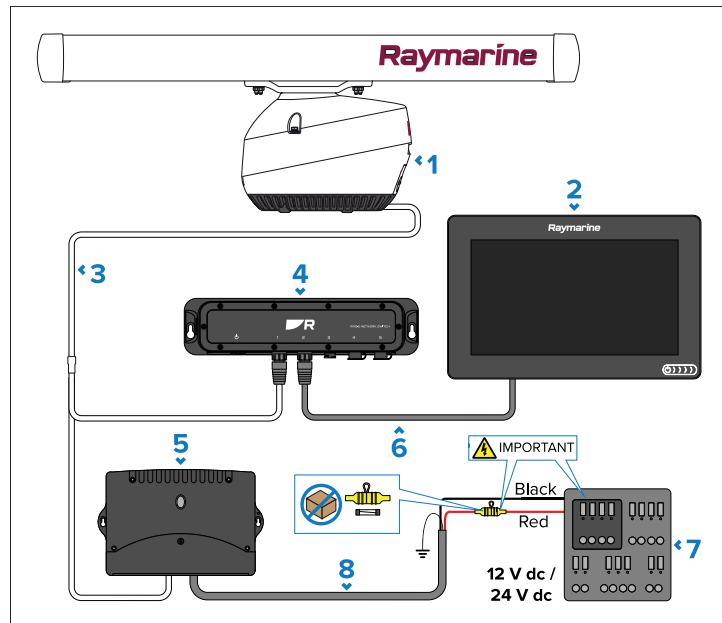


### Description

- 1 Magnum Open Array Radar scanner, supplied.
- 2 Compatible multifunction display / chartplotter, available separately.
- 3 15 m (49.21 ft) Radar-to-'RayNet & power' cable, supplied.
- 4 RayNet (Ethernet) network switch (RNS-5 currently illustrated), available separately.
- 5 VCM100 power converter, supplied.
- 6 RayNet (Ethernet) to RayNet (Ethernet) cable, available separately.
- 7 12 V dc / 24 V dc power supply (distribution panel or battery).
- 8 VCM100 power cable (not supplied).

### Note:

Some power connections are omitted from the illustration above. The network switch and multifunction display each require a dedicated power connection.

## RJ45 (SeaTalk HS) legacy multifunction display / chartplotter:

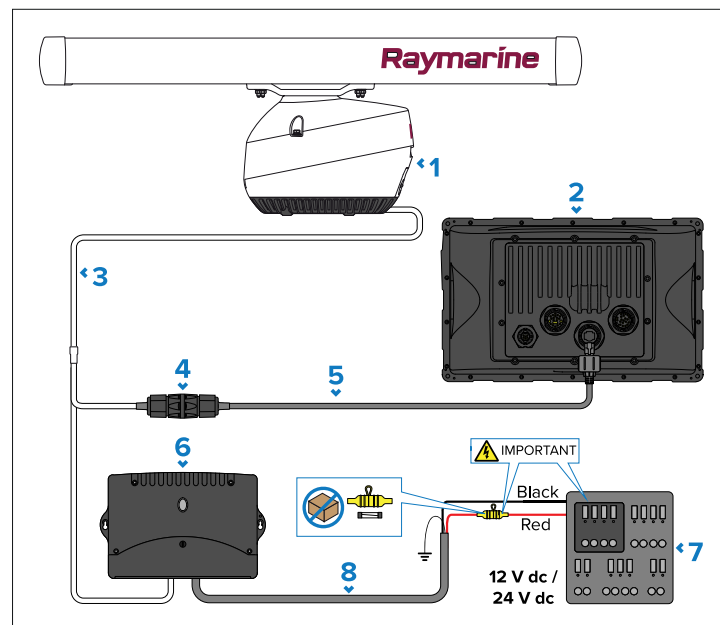

### Note:

- Some power connections are omitted from the illustration above. The multifunction display / chartplotter requires a dedicated power connection.
- A separate Radar to "RJ45 & power" accessory cable is available for connections to equipment that requires an RJ45 connector. For more information on the spares and accessories available, refer to: [p.74 – Spares and accessories](#)

Description	
1	Magnum Open Array Radar scanner, supplied.
2	Compatible multifunction display / chartplotter, available separately.
3	15 m (49.21 ft) Radar-to-'RJ45 & power' cable, available separately.
4	RJ45 to RJ45 waterproof coupler, available separately.
5	RJ45 to waterproof RJ45 (SeaTalk HS) cable, available separately.
6	VCM100 power converter, supplied.
7	12 V dc / 24 V dc power supply (distribution panel or battery).
8	VCM100 power cable (not supplied)

#### Important:

Fuses (not supplied) are required for circuit protection for the VCM100. For suitable fuse ratings, refer to:

[p.53 — Circuit breaker and fuse ratings](#)

## 9.3 Radar cable extensions

If you wish to extend the length of the combined power-and-data Radar cable connected to your product, refer to the following section:

[p.74 — Spares and accessories](#)

#### Note:

- The available accessory extension cables connect directly to the Radar scanner, and are compatible with both the RayNet (Ethernet) and RJ45 Radar cable variants.
- The maximum length for the combined power-and-data Radar cable (including all extensions) is 25 m (82.02 ft).


# CHAPTER 10: POWER CONNECTIONS

## CHAPTER CONTENTS

- 10.1 Pedestal power connections — page 52

## 10.1 Pedestal power connections

The Radar scanner **must** be powered via the supplied VCM100 Converter Module.

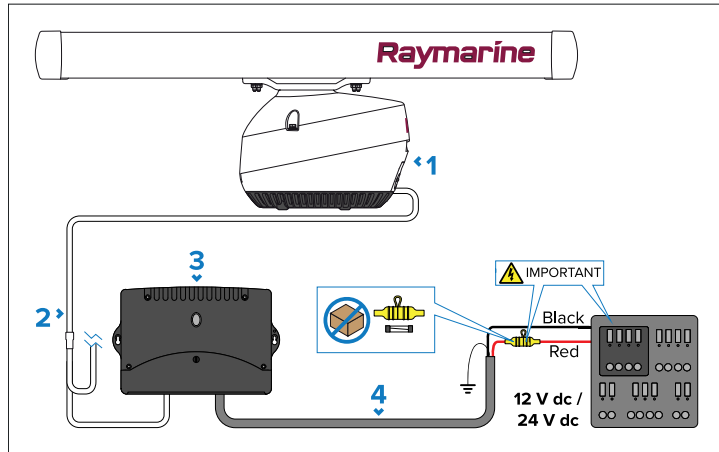

Description	
1	Radar scanner, supplied.
2	Power component of Radar to “RayNet & power cable” cable, supplied.
3	VCM100 power converter, supplied.
4	VCM100 power cable (not supplied).
5	Vessel power supply.

The Radar scanner is intended for use on vessel DC power systems operating at 12 V or 24 V DC.


- All power connections must be made via the VCM100 Voltage Converter Module.
- The Radar scanner must NOT be connected directly to a battery.
- The Radar scanner’s power cable must be connected directly to the VCM100 only.
- Only one Radar scanner must be connected per VCM100 unit. Each Radar scanner in your system requires a dedicated VCM100 unit.

- The power connection between the Radar scanner and the VCM100 must be via an official Raymarine combined power-and-data cable. A 15 m (49.21 ft) combined power-and-data cable with a RayNet connector (A80229) is supplied with the following part numbers: T70408, T70410, T70412 and T70414.
- Do NOT cut and re-join any part of the power cable. A range of cable lengths are available for longer cable runs. For more information, refer to: [p.74 — Spares and accessories](#)

### Important:

The maximum length of the Radar power cable (including all extensions) must NOT exceed 25 m (82.02 ft).

The following diagram illustrates the power connections of the combined power-and-data cable.

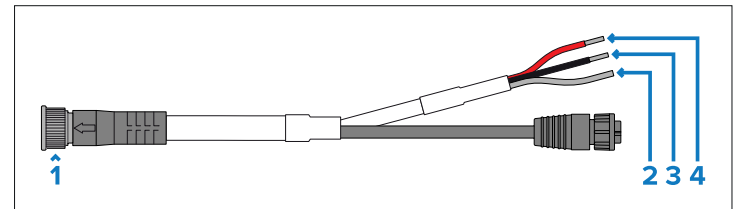

Description	
1	Combined power-and-data connector.
2	Screen (drain) strands — connect to one of the SCREEN terminals of the VCM100.
3	Black wire — connect to the negative POWER OUT terminal of the VCM100.
4	Red wire — connect to the positive POWER OUT terminal of the VCM100.

### Note:

A separate Radar to “RJ45 & power” accessory cable is available for connections to equipment that require an RJ45 connector. The power connections are identical for both types of cable. For more information on the spares and accessories available, refer to: [p.74 — Circuit breaker and fuse ratings](#)

### Important:

Fuses (not supplied) are required for circuit protection for the Radar scanner. For information, refer to the fuse ratings listed below.



### Warning: Positive ground systems

Do NOT connect this unit to a system which has positive grounding.

## Circuit breaker and fuse ratings

Battery isolator switch, thermal breaker, and fuse ratings.

All power connections between the VCM100 and its power source must be protected by a thermal circuit breaker or fuse, fitted close to the power connection. The connection from the output of the VCM100 to the digital Radar does not require a fuse or circuit breaker.

If you do not have a thermal circuit breaker or fuse in your power circuit (fitted to the DC distribution panel, for example), you MUST fit an in-line breaker or fuse to the positive wire of the power cable.

The following table provides suitable ratings for battery isolator switches, circuit breakers, and fuses.

Power supply	Protection	4kW scanner	12kW scanner
12 V	Isolator switch	30 A (minimum rating)	30 A (minimum rating)
	Thermal breaker	15 A	15 A
	Fuse	20 A	20 A
24 V	Isolator switch	15 A (minimum rating)	15 A (minimum rating)
	Thermal breaker	8 A	8 A
	Fuse	10 A	10 A


## VCM100 power connections

VCM100 power and grounding requirements.

The VCM100 is intended for use on a vessel's DC power system, operating from 12 to 24 Volts DC.

- The VCM100 must be connected to a battery isolator switch, or a DC distribution panel.
- The battery isolator switch or DC distribution panel must be connected to the POWER IN terminals of the VCM100.
- Do NOT connect additional power switches to the cable providing the power feed to the VCM100.
- All power connections between the VCM100 and the power source must have appropriate fuse protection.
- All power connections must be of high quality to minimize resistance and to remove the risk of accidental shorts.
- The VCM100 SCREEN terminals must be connected to your vessel's RF ground system.
- The distribution point should be fed from the vessel's primary power source by 8 AWG (8.36 mm<sup>2</sup>) cable.
- Ideally, all equipment should be wired to individual suitably-rated thermal breakers or fuses, with appropriate circuit protection. Where this is not possible and more than 1 item of equipment shares a breaker, use individual inline fuses for each power circuit to provide the necessary protection.
- Do NOT connect the radar scanner or the VCM100 to a positively-grounded power system.

The following diagram illustrates the power connections of the VCM100:

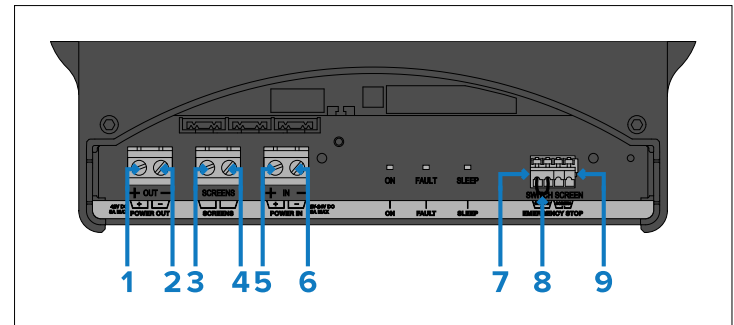

1. **POWER OUT (Positive)** — connect to the RED wire of the radar scanner power cable.
2. **POWER OUT (Negative)** — connect to the BLACK wire of the radar scanner power cable.

3. **SCREEN** — connect to the bare screen (drain) strands of the radar scanner power cable.
4. **SCREEN** — connect to your vessel's RF ground system.
5. **POWER IN (Positive)** — connect to the positive terminal of the vessel's power supply (ideally a battery isolator switch or DC distribution panel).
6. **POWER IN (Negative)** — connect to the negative terminal of the vessel's power supply (ideally a battery isolator switch or DC distribution panel).
7. **EMERGENCY STOP (Switch)** — if you have an optional VCM100 emergency stop button, remove the wire bridging link from the VCM100 EMERGENCY STOP terminals, and connect the emergency stop button SWITCH wire to the VCM100 EMERGENCY STOP SWITCH terminal.
8. **EMERGENCY STOP wire bridging link** — only remove if fitting the optional emergency stop button.
9. **EMERGENCY STOP (Screen)** — if you have an optional VCM100 emergency stop button, remove the wire bridging link from the VCM100 EMERGENCY STOP terminals, and connect the emergency stop button SCREEN (drain) wire to the VCM100 EMERGENCY STOP SCREEN terminal.

### Important:

- When planning and wiring, take into consideration other products in your system, some of which (e.g. sonar modules) may place large power demand peaks on the vessel's electrical system, which may impact the voltage available to other products during the peaks.
- The information provided is for guidance only, to help protect your product. It covers common vessel power arrangements, but does NOT cover every scenario. If you are unsure how to provide the correct level of protection, please consult an authorized dealer or a suitably qualified professional marine electrician.

### More information

It is recommended that best practice is observed in all vessel electrical installations, as detailed in the following standards:

- BMEA Code of Practice for Electrical and Electronic Installations in Boats

- NMEA 0400 Installation Standard
- ISO 13297: Small craft — Electrical systems — Alternating and direct current installations
- ISO 10133: Small craft — Electrical systems — Extra-low-voltage d.c. installations
- ABYC E-11 AC & DC Electrical Systems on Boats
- ABYC A-31 Battery chargers and Inverters
- ABYC TE-4 Lightning Protection

### VCM100 power wire gauge

You must provide suitable power wires to connect the VCM100 to the vessel's DC distribution panel or battery isolator switch.

It is essential that both power cores and the screen (drain) are connected and that the connection is of very low resistance, as considerable power passes through this connection.

The following table provides recommended total power cable lengths and gauges. These figures relate to the maximum round-trip length of power cables from the vessel's DC distribution panel or battery isolator switch to the VCM100. Exceeding these lengths may cause unreliable operation.

AWG (American Wire Gauge)	mm <sup>2</sup>	Maximum distance (12 V supply)	Maximum distance (24 V supply)
7	10.55	15 m (49.2 ft.)	55 m (180.4 ft.)
8	8.36	10 m (32.8 ft.)	40 m (131.2 ft.)
10	5.26	8 m (26.2 ft.)	32 m (104.9 ft.)
11	4.17	6 m (19.6 ft.)	24 m (78.7 ft.)

### Note:

If the required lengths result in unacceptably large diameter cables, use 2 or more smaller gauge wires to achieve the required copper wire cross-section. For example, using 2 pairs of 2 mm<sup>2</sup> cables is equivalent to using 2 single 4 mm<sup>2</sup> cables.

## VCM100 screen (drain) wire gauge

You must provide and connect a suitable screen (drain) wire between the VCM100's SCREEN terminal and your vessel's RF ground system.

The screen (drain) wire should use an 8 mm braid or AWG 10 (5.26 mm<sup>2</sup>) multi-stranded cable.



### Warning: Product grounding

Before applying power to this product, it **MUST** be correctly grounded, in accordance with the instructions provided.


## VCM100 grounding requirements

VCM100 grounding requirements.

### Note:

The Magnum is not grounded directly, but is connected to ground via the VCM100. The following grounding requirements apply to the VCM100:

- The VCM100 power cable screen must be connected to the vessel's common ground point.
- It is recommended that the common ground point is a bonded ground, i.e. with the ground point connected to battery negative, and situated as close as possible to the battery negative terminal. If a bonded ground system is not possible, a non-bonded RF ground may be used.

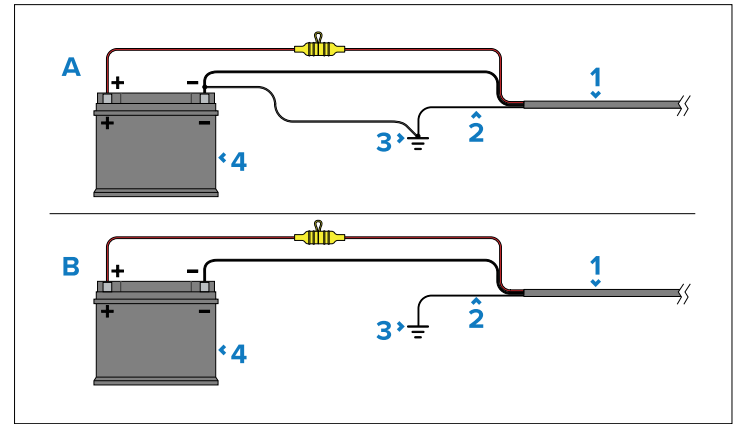

- **A** — Bonded ground system (preferred)
  - **B** — RF ground system (alternative)
1. Power cable to VCM100.
  2. VCM100 drain (screen).
  3. Bonded (preferred) or non-bonded RF ground.
  4. Power supply.

### Implementation

If several items require grounding, they may first be connected to a single local point (e.g. within a switch panel), with this point connected via a single, appropriately-rated conductor, to the boat's common ground. The preferred minimum requirement for the path to ground (bonded or non-bonded) is via a flat tinned copper braid, with a 30 A rating (1/4 inch) or greater. If this is not possible, an equivalent stranded wire conductor may be used, rated as follows:

- for runs of <1 m (3 ft), use 6 mm<sup>2</sup> (#10 AWG) or greater.
- for runs of >1 m (3 ft), use 8 mm<sup>2</sup> (#8 AWG) or greater.

In any grounding system, always keep the length of connecting braid or wires as short as possible.

### Important:

Do **NOT** connect this product to a positively-grounded power system.

## References and best practice

It is recommended that best practice is observed in all vessel electrical installations, as detailed in the following standards:

- BMEA Code of Practice for Electrical and Electronic Installations in Boats
- NMEA 0400 Installation Standard
- ISO 13297: Small craft — Electrical systems — Alternating and direct current installations
- ISO 10133: Small craft — Electrical systems — Extra-low-voltage d.c. installations
- ABYC E-11 AC & DC Electrical Systems on Boats
- ABYC A-31 Battery chargers and Inverters
- ABYC TE-4 Lightning Protection

# CHAPTER 11: SYSTEM CHECKS

## CHAPTER CONTENTS

- 11.1 Radar scanner initial power on test — page 58
- 11.2 Radar check — page 58

## 11.1 Radar scanner initial power on test

Once all cables have been connected, it's important to perform an initial power on test, to confirm correct operation.

Ensure that all cables have been correctly and securely connected to both the pedestal and a compatible multifunction display (which should initially be powered OFF):

1. Ensure the pedestal's **Power/Safety** switch is set to ON.
2. Power on the multifunction display.

The magnetron warm-up sequence should start, after which the Radar scanner should enter Standby mode.

3. If necessary, adjust the brightness and contrast on the multifunction display, before proceeding with a Radar test, using the display's *Radar* app.

### Note:

For information on performing a Radar test in the Radar app, refer to: [p.58 — Opening the Radar app](#)

## 11.2 Radar check



### Warning: Radar scanner safety

Before rotating the Radar scanner, ensure all personnel are clear.



### Warning: Radar transmission safety

The Radar scanner transmits electromagnetic energy. Ensure all personnel are clear of the scanner when the radar is transmitting.

## Opening the Radar app

The following instructions apply to multifunction displays / chartplotters running LightHouse 3 or LightHouse 4 software.


The Radar app is opened by selecting a page icon from the Homescreen that includes the Radar app.

### Pre-requisites:

1. Ensure your Radar scanner is compatible. Check the latest details available on the Raymarine website; if in doubt, contact an authorized Raymarine dealer for advice.
2. Ensure you have installed your Radar scanner in accordance with the documentation that was supplied with your Radar.

The Radar app will open in one of 3 states:

### Off / Not Connected

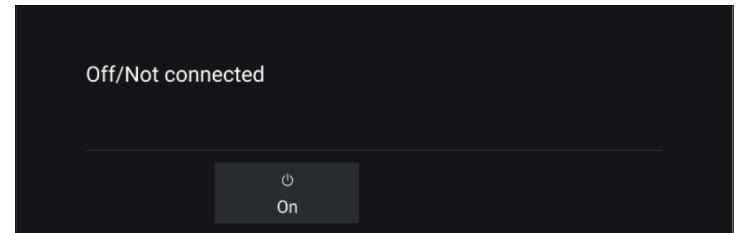


If the '**Off/Not Connected**' message is displayed then:

- your Radar scanner may be powered down, or
- your MFD cannot establish a connection with your Radar scanner


Select [*On*] to power up your Radar. If the '**Radar not found**' message is displayed then a connection could not be established, ensure that network and power connections to your Radar and MFD are correct and free from damage and then power cycle your system. If the Radar scanner can still not be found refer to your Radar's installation documentation for further troubleshooting information.

## Standby (Not transmitting)

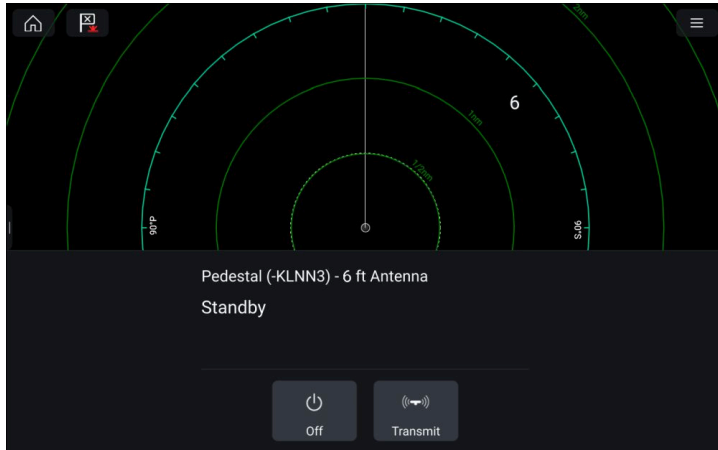

If the **'Standby'** message is displayed then select [*Transmit*] to begin transmitting.

## Transmitting

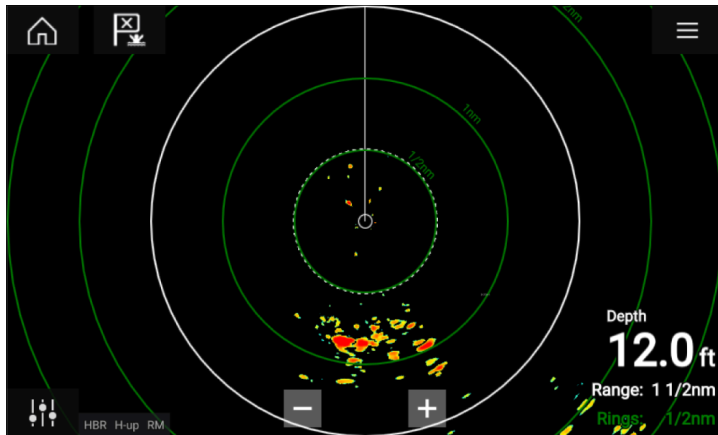


If your Radar scanner is connected, powered up and transmitting then the Radar image is displayed and echoes/targets are displayed onscreen.

## Check and adjust bearing alignment

The Radar bearing alignment ensures that Radar objects appear at the correct bearing relative to your boat's bow. You should check the bearing alignment for any new installation.

### Example misaligned Radar

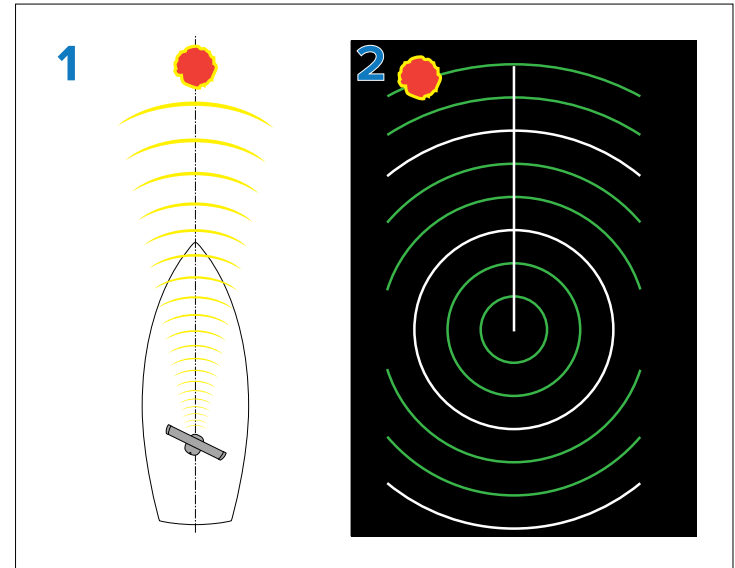

1. Target object (such as a buoy) dead ahead.
2. Target displayed on the Radar display is not aligned with the Ship's Heading Marker (SHM). Bearing alignment is required.

### Checking alignment

Align the bow with a stationary object between 0.25 and 2 NM away. Reduce the gain to make the target as small as possible on the screen.

Note the position of the object on the Radar screen. If the target is not under the ship's heading marker (SHM), then bearing alignment adjustment is required.

## Adjusting alignment

Adjust the *[Bearing alignment]* setting until the target object appears under the SHM.

The *[Bearing alignment]* setting can be accessed from the *[Installation]* tab: *[Menu > Installation > Bearing alignment]*.

### Note:

Heading (HDG) is displayed in the Radar application. Please be aware that bearing alignment refers to the **relative** bearing of **targets** to the vessel's bow using visual checks / traditional means.

# CHAPTER 12: OPERATION

## CHAPTER CONTENTS

- [12.1 Operation instructions — page 62](#)

## 12.1 Operation instructions

For detailed operation instructions for your product, refer to the documentation that accompanies your display.

Document	Description	Link
<b>81406</b>	LightHouse 4 Operation Instructions	<a href="http://www.bit.ly/LH4-docs">www.bit.ly/LH4-docs</a>
<b>81370</b>	LightHouse 3 Operation Instructions	<a href="http://www.bit.ly/LH3-docs">www.bit.ly/LH3-docs</a>
<b>81360</b>	LightHouse 2 Operation Instructions	<a href="http://www.bit.ly/LH2-docs">www.bit.ly/LH2-docs</a>

---

# CHAPTER 13: TROUBLESHOOTING

## CHAPTER CONTENTS

- 13.1 Troubleshooting — page 64
- 13.2 Power up troubleshooting — page 64
- 13.3 Radar troubleshooting — page 65
- 13.4 VCM100 LED indications — page 66

## 13.1 Troubleshooting

The troubleshooting section provides possible causes and the corrective action required for common problems that are associated with the installation and operation of your product.

Before packing and shipping, all products are subjected to comprehensive testing and quality assurance programs. If you do experience problems with your product, this section will help you to diagnose and correct problems to restore normal operation.

If after referring to this section you are still having problems with your product, please refer to the *Technical support and servicing* section of this manual for useful links and contact details.

## 13.2 Power up troubleshooting

Troubleshooting assistance with typical causes of power-related issues, and their solutions.

### Product does not power up, or keeps switching off

Possible causes	Possible solutions
<b>Blown fuse / tripped breaker:</b>	<ol style="list-style-type: none"><li>1. Check condition of relevant fuses and breakers and connections, replace if necessary. (Refer to the <i>Power Connections</i> section of your product's Installation Instructions for fuse ratings.)</li><li>2. If fuse keeps blowing, check for cable damage, broken connector pins, or incorrect wiring.</li></ol>
<b>Poor / damaged / insecure power supply cable / connections:</b>	<ol style="list-style-type: none"><li>1. Check that the power cable connector is correctly orientated and fully inserted into the product's <i>Power</i> connector, and locked in position.</li><li>2. Check the power supply cable and connectors for signs of damage or corrosion, and replace if necessary.</li><li>3. With the product switched on, try carefully flexing the power cable near to the product's <i>Power</i> connector to see if this causes the unit to restart or lose power. Replace if necessary.</li><li>4. Check the vessel's battery voltage and the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion. Replace if necessary.</li><li>5. With the product under load, using a multi-meter, check for high voltage drop across all connectors / fuses etc, and replace if necessary.</li></ol>
<b>Incorrect power connection:</b>	The vessel's power supply may be wired incorrectly. Ensure that the product's <i>Installation Instructions</i> have been followed completely.

## Product will not start up (restart loop)

Possible causes	Possible solutions
<b>Power supply and connection:</b>	See possible solutions from the table above, entitled ' <i>Product does not power up, or keeps switching off.</i> '
<b>Software corruption:</b>	<ol style="list-style-type: none"><li>1. In the unlikely event that the product's software has become corrupted, try downloading and installing the latest software from: <a href="http://www.bit.ly/rym-software">www.bit.ly/rym-software</a></li><li>2. If your product includes a display: as a last resort, attempt to perform a 'Power on Reset'. Be aware that this will delete all settings / presets and user data, and revert the unit back to factory default settings.</li></ol>

## 13.3 Radar troubleshooting

Problems with the Radar and their possible causes and solutions are described here.

### No connection can be made to the scanner:

Possible causes	Possible solution
<b>Radar powered down:</b>	If the scanner unit has shut down, awaken it by using the [ <i>Power Up Radar</i> ] option on the Shortcuts page, accessible on your multifunction display / chartplotter by momentarily pressing the power button.
<b>Radar not transmitting:</b>	Select Tx for the relevant Radar scanner from the Shortcuts page.

Possible causes	Possible solution
<b>Damaged or disconnected Power cable / RayNet cable:</b>	<ol style="list-style-type: none"><li>1. Check that the cable connectors are fully inserted and locked in position.</li><li>2. Check the power supply cable and connectors for signs of damage or corrosion; replace if necessary.</li><li>3. With the unit turned on, try flexing the cable near to the display connector to see if this causes the unit to re-boot/lose power; replace if necessary.</li><li>4. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion; replace if necessary.</li><li>5. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the unit to reset/turn off), replace if necessary.</li><li>6. Check condition of relevant breakers and fuses, replace if necessary. If breaker keeps tripping or fuses keep blowing, contact a Raymarine authorized dealer for assistance.</li></ol>
<b>Open Array power switch in OFF position:</b>	Ensure Open Array power switch is in ON position.
<b>Software mismatch between equipment may prevent communication:</b>	Ensure all Raymarine products contain the latest available software, check the Raymarine website for software compatibility: <a href="http://www.raymarine.com/software">www.raymarine.com/software</a>

## Displayed bearing is different to the true bearing:

Possible causes	Possible solution
<b>Bearing alignment adjustment required:</b>	Carry out the Bearing Alignment procedure described in the latest version of the relevant LightHouse Operations manual.

## Radar will not initialize (VCM100 stuck in “sleep mode”):

Possible causes	Possible solution
<b>Intermittent or poor power connection:</b>	Check power connection at VCM-Series. (Voltage at input = 12 / 24 V, Voltage at output = 42 V)

## 13.4 VCM100 LED indications

LED indications associated with the VCM100.

LED color / state	Possible causes
<b>Green / solid:</b>	Radar operating normally.
<b>Red / solid:</b>	Fault condition.
<b>Yellow / flashing:</b>	Radar scanner in standby.
<b>Yellow / solid:</b>	Fault condition, unit self-recovers after 20 seconds.

# CHAPTER 14: TECHNICAL SUPPORT

## CHAPTER CONTENTS

- 14.1 Raymarine technical support and servicing — page 68

## 14.1 Raymarine technical support and servicing

Raymarine provides a comprehensive product support service, as well as warranty, service, and repairs. You can access these services through the Raymarine website, telephone, and e-mail.

### Product information

If you need to request service or support, please have the following information to hand:

- Product name.
- Product identity.
- Serial number.
- Software application version.
- System diagrams.

### Servicing and warranty

Raymarine offers dedicated service departments for warranty, service, and repairs.

Visit the Raymarine website to **read the latest warranty policy**, and **register** your product's warranty online:

- [www.bit.ly/rym-warranty](http://www.bit.ly/rym-warranty)

#### United Kingdom (UK), EMEA, and Asia Pacific:

- Web: [www.bit.ly/rym-service](http://www.bit.ly/rym-service)
- Tel: +44 (0)1329 246 932

#### United States (US):

- Web: [www.bit.ly/rym-service](http://www.bit.ly/rym-service)
- Tel: +1 (603) 324 7900

### Web support

Please visit the “Support” area of the Raymarine website for:

- **Manuals and Documents** — [www.bit.ly/rym-docs](http://www.bit.ly/rym-docs)
- **Technical support forum** — [www.bit.ly/rym-support](http://www.bit.ly/rym-support)
- **Software updates** — [www.bit.ly/rym-software](http://www.bit.ly/rym-software)

### Telephone and online support

Region	Contact details
<b>All regions</b>	<b>Online support:</b> <a href="http://www.bit.ly/rym-support">www.bit.ly/rym-support</a>
<b>United Kingdom (UK) and EMEA</b>	<b>Telephone:</b> +44 (0)1329 246 777 <b>Address:</b> Marine House, Cartwright Drive, Fareham, PO15 5RJ, UK.
<b>United States (US)</b>	<b>Telephone:</b> Tel: +1 (603) 324 7900 (Toll-free: +800 539 5539) <b>Address:</b> 110 Lowell Road, Hudson, NH 03051, USA.
<b>Australia and New Zealand</b> (Raymarine subsidiary)	<b>Telephone:</b> +61 2 8977 0300 <b>Address:</b> Suite 1.01, 26 Rodborough Road, Frenchs Forest, NSW, 2086, Australia.
<b>France</b> (Raymarine subsidiary)	<b>Telephone:</b> +33 (0)1 46 49 72 30 <b>Address:</b> 35 avenue Michel Crépeau, 17000 La Rochelle - France.
<b>Germany</b> (Raymarine subsidiary)	<b>Telephone:</b> +49 40 237 808 0 <b>Address:</b> Atlantic-Haus, Zirkusweg 1, 20359 Hamburg.
<b>Italy</b> (Raymarine subsidiary)	<b>Telephone:</b> +39 02 9945 1001 <b>Address:</b> Via L. Manara 2, 20812 Limbiate (MB), Italy.
<b>Spain</b> (Authorized Raymarine distributor)	<b>Telephone:</b> +34 96 2965 102 <b>Email:</b> <a href="mailto:sat@azimut.es">sat@azimut.es</a>
<b>Netherlands / Benelux</b> (Authorized Raymarine distributor)	<b>Telephone:</b> +31 (0)26 3614 905 <b>Address:</b> Florijnweg 21G, 6883 JN VELD, Nederland.

Region	Contact details
<b>Sweden</b> (Raymarine subsidiary)	<b>Telephone:</b> +46 (0)317 633 670 <b>Address:</b> Bolshedens Industriväg 18, 427 50 Billdal, Sweden.
<b>Finland</b> (Raymarine subsidiary)	<b>Telephone:</b> +358 (0)207 619 937 <b>Address:</b> Suomalaistentie 1-3, 02270 Espoo, Finland.
<b>Norway</b> (Raymarine subsidiary)	<b>Telephone:</b> +47 692 64 600 <b>Address:</b> Årvollskogen 30, 1529 Moss, Norway.
<b>Denmark</b> (Raymarine subsidiary)	<b>Telephone:</b> +45 437 164 64 <b>Address:</b> Centervej 7, 4600 Køge, Denmark.
<b>Russia</b> (Distributor)	<b>Telephone:</b> Tel: +7 495 788 0508 <b>Email:</b> <a href="mailto:info@mikstmarine.ru">info@mikstmarine.ru</a>

# CHAPTER 15: TECHNICAL SPECIFICATION

## CHAPTER CONTENTS

- [15.1 Technical specification — page 71](#)

## 15.1 Technical specification

### Physical specification

Specification	4ft 4kW array	6ft 4kW array	4ft 12kW array	6ft 12kW array
<b>Dimensions:</b>	<ul style="list-style-type: none"> <li>• <i>Pedestal:</i> 409 mm x 314 mm x 430 mm (to top of antenna).</li> <li>• <i>Antenna length:</i> 1306 mm</li> </ul>	<ul style="list-style-type: none"> <li>• <i>Pedestal:</i> 409 mm x 314 mm x 430 mm (to top of antenna).</li> <li>• <i>Antenna length:</i> 1918 mm</li> </ul>	<ul style="list-style-type: none"> <li>• <i>Pedestal:</i> 409 mm x 314 mm x 430 mm (to top of antenna).</li> <li>• <i>Antenna length:</i> 1306 mm</li> </ul>	<ul style="list-style-type: none"> <li>• <i>Pedestal:</i> 409 mm x 314 mm x 430 mm (to top of antenna).</li> <li>• <i>Antenna length:</i> 1918 mm</li> </ul>
<b>Weight:</b>	26 kg (with antenna)	29 kg (with antenna)	26 kg (with antenna)	29 kg (with antenna)

### Power specification

Specification	4ft 4kW array	6ft 4kW array	4ft 12kW array	6ft 12kW array
<b>Supply voltage (using VCM)</b>	<ul style="list-style-type: none"> <li>• Nominal: 12 V dc or 24 V dc</li> <li>• Minimum: 10.8 V dc</li> <li>• Maximum: 31.2 V dc</li> </ul>	<ul style="list-style-type: none"> <li>• Nominal: 12 V dc or 24 V dc</li> <li>• Minimum: 10.8 V dc</li> <li>• Maximum: 31.2 V dc</li> </ul>	<ul style="list-style-type: none"> <li>• Nominal: 12 V dc or 24 V dc</li> <li>• Minimum: 10.8 V dc</li> <li>• Maximum: 31.2 V dc</li> </ul>	<ul style="list-style-type: none"> <li>• Nominal: 12 V dc or 24 V dc</li> <li>• Minimum: 10.8 V dc</li> <li>• Maximum: 31.2 V dc</li> </ul>
<b>Power consumption (typical):</b>	< 70 watts	< 70 watts	< 110 watts	< 110 watts
<b>Power consumption (standby):</b>	< 30 watts	< 30 watts	< 30 watts	< 30 watts
<b>Power consumption (sleep):</b>	< 1.2 watts	< 1.2 watts	< 1.2 watts	< 1.2 watts
<b>Warm-up time:</b>	75 seconds	75 seconds	75 seconds	75 seconds
<b>Standby to transmit:</b>	2.5 seconds	2.5 seconds	2.5 seconds	2.5 seconds

### Environmental specification

Specification	4ft 4kW array	6ft 4kW array	4ft 12kW array	6ft 12kW array
<b>Waterproof rating:</b>	IPx6	IPx6	IPx6	IPx6
<b>Operating temperature range:</b>	-25°C to +55°C (-13°F to +131°F)	-25°C to +55°C (-13°F to +131°F)	-25°C to +55°C (-13°F to +131°F)	-25°C to +55°C (-13°F to +131°F)
<b>Humidity:</b>	Up to 95% at 35°C (95°F)	Up to 95% at 35°C (95°F)	Up to 95% at 35°C (95°F)	Up to 95% at 35°C (95°F)

Specification	4ft 4kW array	6ft 4kW array	4ft 12kW array	6ft 12kW array
<b>Maximum wind speed:</b>	85 knots	85 knots	85 knots	85 knots
<b>Maximum range scale:</b>	72 nautical miles	72 nautical miles	96 nautical miles	96 nautical miles

## Range

Range (Nm)	Expanded range (Nm)	Pulse width (nominal)	PRF
0.125, 0.25	N/A	75 ns	3 kHz
0.5	N/A	100 ns	3 kHz
0.75	0.125, 0.25	150 ns	3 kHz
N/A	0.5	250 ns	3 kHz
1.5	0.75	350 ns	2 kHz
3	N/A	450 ns	1.5 kHz
N/A	1.5	600 ns	1.3 kHz
6 +	3 +	1.0 us	820 Hz

## Transmitter specification

Specification	4ft 4kW array	6ft 4kW array	4ft 12kW array	6ft 12kW array
<b>Transmitter frequency:</b>	9405 MHz $\pm$ 20 MHz	9405 MHz $\pm$ 20 MHz	9405 MHz $\pm$ 20 MHz	9405 MHz $\pm$ 20 MHz
<b>Peak power output:</b>	4kW	4kW	12kW	12kW
<b>Standby mode:</b>	<ul style="list-style-type: none"> <li>• Magnetron heater: ON</li> <li>• Magnetron control: ON</li> <li>• All other services: OFF</li> </ul>	<ul style="list-style-type: none"> <li>• Magnetron heater: ON</li> <li>• Magnetron control: ON</li> <li>• All other services: OFF</li> </ul>	<ul style="list-style-type: none"> <li>• Magnetron heater: ON</li> <li>• Magnetron control: ON</li> <li>• All other services: OFF</li> </ul>	<ul style="list-style-type: none"> <li>• Magnetron heater: ON</li> <li>• Magnetron control: ON</li> <li>• All other services: OFF</li> </ul>

## Antenna specification

Specification	4ft 4kW array	6ft 4kW array	4ft 12kW array	6ft 12kW array
<b>Beamwidth (vertical):</b>	25° (nominal)	25° (nominal)	25° (nominal)	25° (nominal)
<b>Beamwidth (horizontal):</b>	1.85° (nominal)	1.15° (nominal)	1.85° (nominal)	1.15° (nominal)

Specification	4ft 4kW array	6ft 4kW array	4ft 12kW array	6ft 12kW array
<b>Polarization:</b>	Horizontal	Horizontal	Horizontal	Horizontal
<b>Rotation speed:</b>	<ul style="list-style-type: none"> <li>• 24 RPM</li> <li>• 48 RPM (compatible displays and scanners only)</li> </ul>	<ul style="list-style-type: none"> <li>• 24 RPM</li> <li>• 48 RPM (compatible displays and scanners only)</li> </ul>	<ul style="list-style-type: none"> <li>• 24 RPM</li> <li>• 48 RPM (compatible displays and scanners only)</li> </ul>	<ul style="list-style-type: none"> <li>• 24 RPM</li> <li>• 48 RPM (compatible displays and scanners only)</li> </ul>

### Receiver specification (all models)

Specification	
<b>Nominal supply voltage:</b>	12 V / 24 V dc
<b>Operating voltage range:</b>	10.8 V to 31.2 V dc
<b>Power consumption:</b>	3 W (Maximum) @ 12 V
<b>Current:</b>	< 600 mA (nominal) @ 12 V

### Conformance specification

Specification	
<b>USA:</b>	47CFR FCC Part 2 & Part 80 Certificate of Approval
<b>Canada:</b>	RSS138 Iss. 1 Technical Acceptance Certificate
<b>European Union &amp; EFTA:</b>	Radio Equipment Directive 2014/53/EU Certificate of Opinion
<b>Australia / New Zealand:</b>	ACMA Declaration of Conformity Compliance level 3


# CHAPTER 16: SPARES AND ACCESSORIES

## CHAPTER CONTENTS

- 16.1 Spares and accessories — page 75
- 16.2 RayNet to RayNet cables and connectors — page 76
- 16.3 RayNet to RJ45, and RJ45 (SeaTalk HS) adapter cables — page 78


## 16.1 Spares and accessories

The following spares and accessories are available for your product:

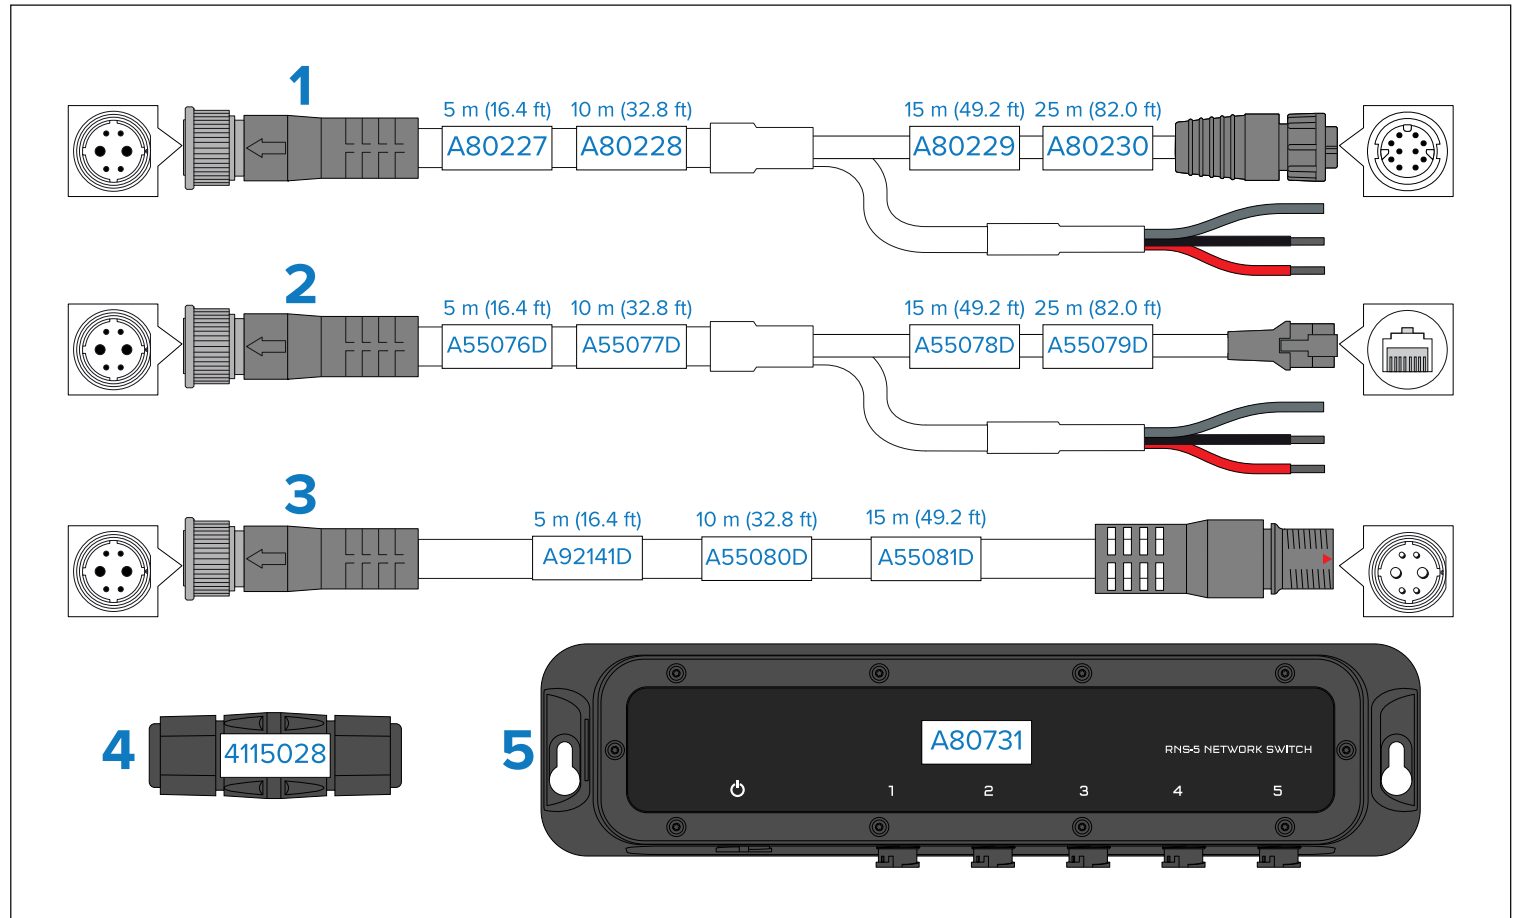

1. Radar to Power and RayNet Data cable.
2. Radar to Power and RJ45 Data cable.
3. Radar extension cable (male Radar connector to female Radar connector).
4. RJ45 to RJ45 waterproof coupler.
5. RNS-5 5-port RayNet (Ethernet) network switch.


## 16.2 RayNet to RayNet cables and connectors

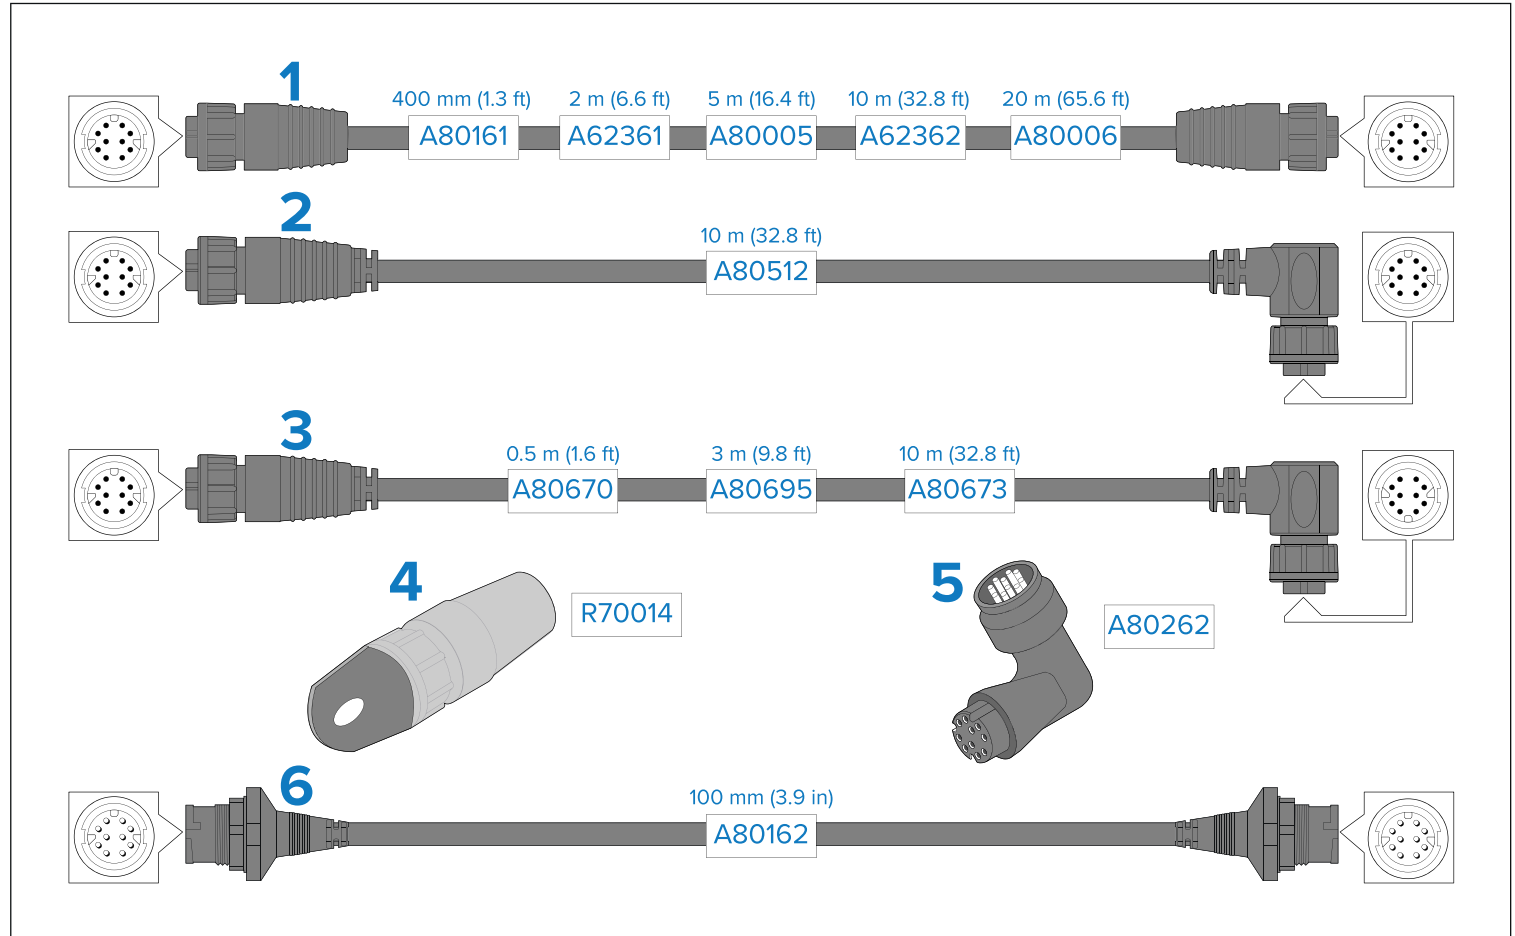

1. Standard RayNet connection cable with a RayNet (female) socket on both ends.
2. Right-angle RayNet connection cable with a straight RayNet (female) socket on one end, and a right-angle RayNet (female) socket on the other end. Suitable for connecting at 90° (right angle) to a device, for installations where space is limited.
3. Right-angle RayNet connection cable with a straight RayNet (female) socket on one end, and a right-angle RayNet (female) socket on the other end. Available as an alternative to the (A80512) accessory cable, for installations which require an alternate cable routing direction.
4. RayNet cable puller (5 pack).

5. RayNet to RayNet right-angle coupler / adapter. Suitable for connecting RayNet cables at 90° (right angle) to devices, for installations where space is limited.
6. Adapter cable with a RayNet (male) plug on both ends. Suitable for joining (female) RayNet cables together for longer cable runs.

## 16.3 RayNet to RJ45, and RJ45 (SeaTalk HS) adapter cables

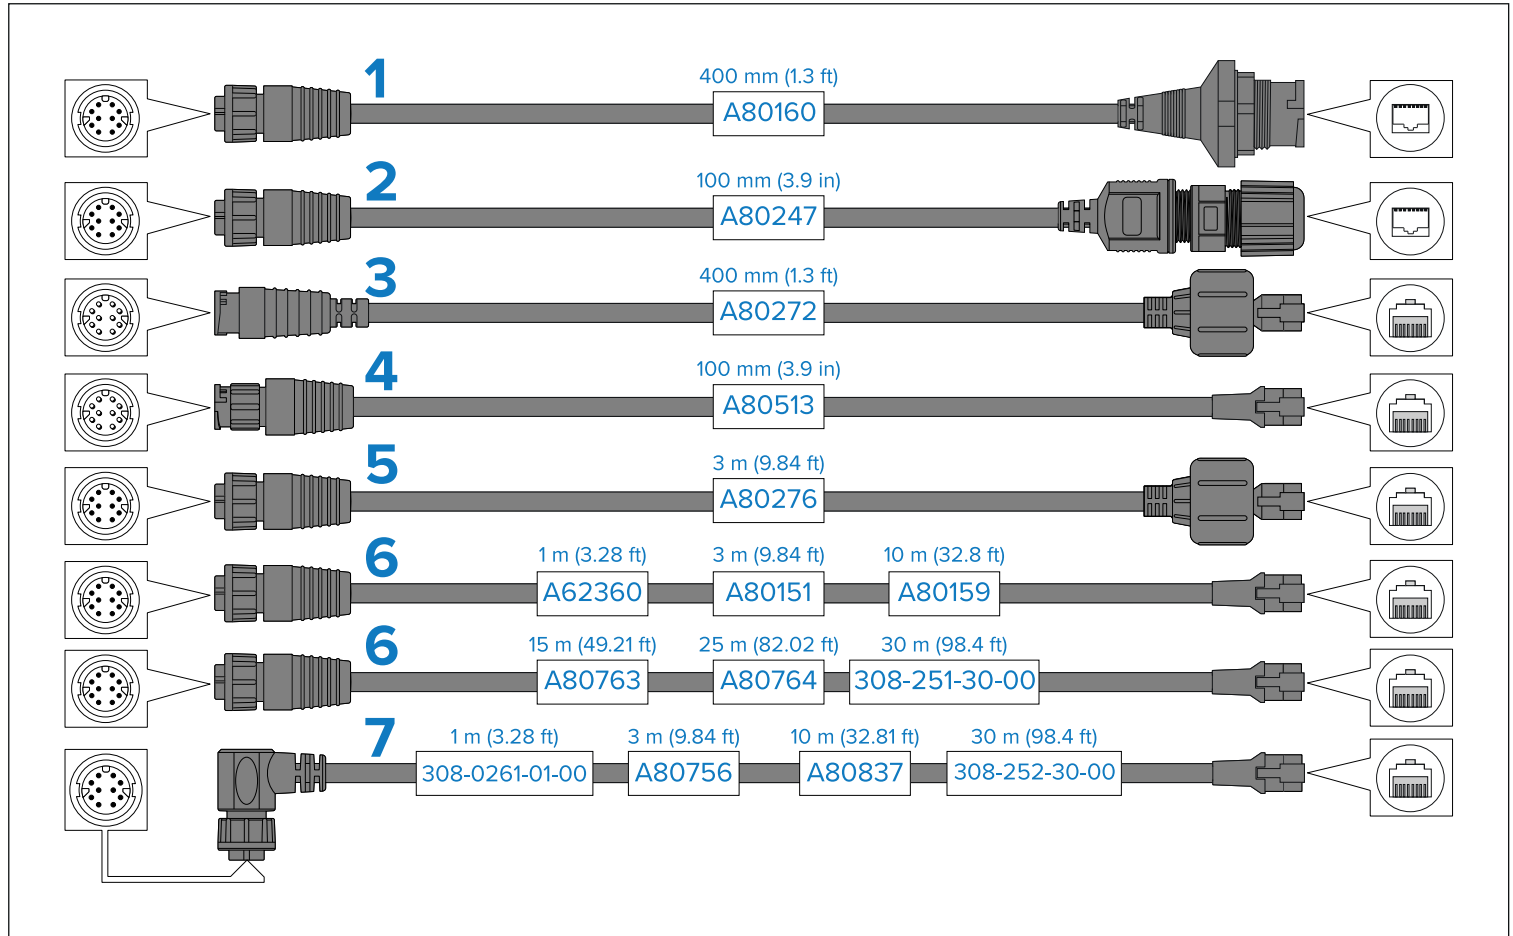

1. Adapter cable with a RayNet (female) socket on one end, and a waterproof (female) RJ45 (SeaTalk HS) socket on the other end, accepting the following cables with an RJ45 (SeaTalk HS) waterproof locking (male) plug:
  - A62245 (1.5 m).
  - A62246 (15 m).
2. Adapter cable with a RayNet (female) socket on one end, and a waterproof (female) RJ45 (SeaTalk HS) socket on the other end, along with a locking gland for a watertight fit.
3. Adapter cable with a RayNet (male) plug on one end, and an RJ45 (SeaTalk HS) waterproof (male) plug on the other end.

4. Adapter cable with a RayNet (male) plug on one end, and an RJ45 (male) plug on the other end.
5. Adapter cable with a RayNet (female) socket on one end, and an RJ45 (SeaTalk HS) waterproof (male) plug on the other end.
6. Adapter cable with a RayNet (female) socket on one end, and an RJ45 (male) plug on the other end.
7. Adapter cable with a right-angled RayNet (female) socket on one end, and an RJ45 (male) plug on the other end.



## Appendix A Interpreting the radar display

### Interpreting objects

The size of a target appearing on screen is dependent on many factors, and may not be proportional to its actual physical size. Nearby objects may appear to be the same size as distant larger objects. Given adequate radar operator experience, the approximate size of different objects can be determined by the relative size and color / brightness of the echoes.

The size of onscreen targets are impacted by:

- The physical size of the reflecting object.
- The material that the object is made from (metallic surfaces reflect signals better than non-metallic surfaces).
- The verticality of the object (objects such as cliffs reflect signals better than sloping objects such as sandbanks).
- The height of coastal regions. (High coastlines and mountainous coastal regions can be observed at longer radar ranges; therefore, the first sight of land may be a mountain several miles inland from the coastline. Although the coastline may be much nearer, it may not appear on the radar display until the vessel is closer to shore.)
- The target's reflective visibility. (Some targets, such as buoys and small vessels, are difficult to discern because they do not present a consistent reflecting surface as they pitch and roll in the waves. Consequently, these echoes tend to fade and brighten, and at times disappear momentarily.)
- Similarly-sized targets. (Buoys and small vessels resemble each other; however, vessels can often be distinguished by their motion.)

### Radar range


#### Minimum range

Radar performance on larger ships may suffer from shadowing where the minimum radar detection range is degraded by a combination of antenna height, ship structures and cargo. The minimum range is defined by the shortest distance at which, using a scale of 1.5 NM or 0.7 NM, a target having an echoing area of 10 m<sup>2</sup> is still shown separate from the point representing the antenna position. It is mainly dependent on the pulse length, antenna height and location, ownship structure and an efficient transmission line.

#### Maximum range

Interpreting the radar display

The maximum range varies considerably depending on several factors such as the height of the antenna above the waterline, the height of the target above the waterline, the size, shape and material of the target, and atmospheric conditions. Under normal atmospheric conditions, the maximum range is equal to the radar horizon and can be slightly longer. The radar horizon is longer than the optical horizon by approximately 6% because of the diffraction property of the radar beam.

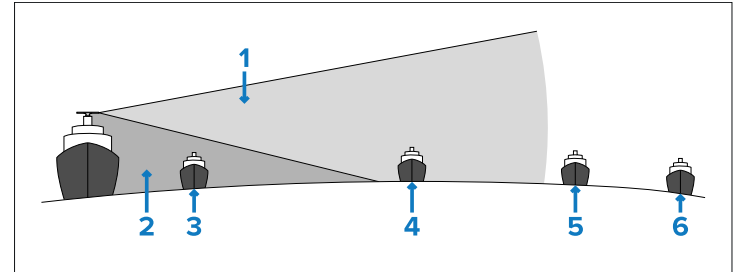

1. Radar horizon (beam).
2. Blind area.
3. Ship will not be visible on the display as it is too close and therefore outside of the radar beam.
4. Ship will be visible on the display as it is within the radar beam.
5. Ship may be visible on the display as it is only just outside of the radar beam.
6. Ship will not be visible on the display as it is too far and therefore outside of the radar beam.

### Radar image quality

A number of factors may impact the quality of a radar image.

Not all radar echoes are produced by valid targets. Spurious or missing echoes may be caused by:

- Blind sectors.
- False echoes.
- Target smearing.
- Multi-path interference.
- Sea state and wave height.


- Precipitation and snow.
- Interference from other radar scanners.

Through observation, practice, and experience, you can generally detect these conditions very quickly and use the radar controls to minimize their impact.

## Blind sectors

Obstructions such as funnels and masts near the radar antenna may obstruct the radar beam and cause radar shadows or 'blind sectors'.

If the obstruction is relatively narrow, there will be a reduction of the radar beam intensity, although it may not block the entire beam. However, for wider obstructions, there may be a total block of the radar beam in the shadow area. There may also be multiple echoes which extend behind the obstruction. Blind sector effects can normally be minimized by careful selection of the radar antenna's location prior to installation. Targets will not be detected if they are within the blind sector.

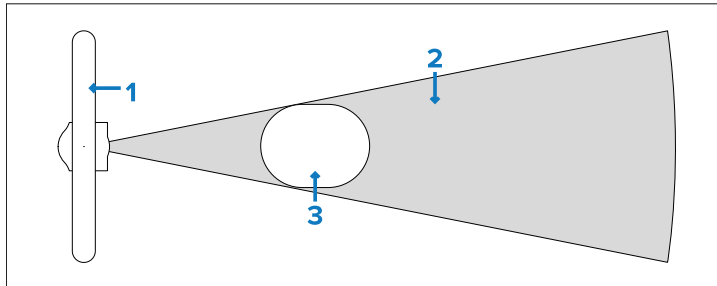

1. Antenna.
2. Blind sector.
3. Obstruction (superstructure, funnels, masts, etc.).

## False echoes

Any large obstruction may reflect the radar beam, causing false echoes. The surface of the obstruction reflects a significant proportion of the transmitted energy at an angle, creating a false echo. Reflected signals from these objects reach the antenna and are presented on the bearing at which the antenna is pointing.

The range of the false echo is the same distance (via the reflecting surface) of the object causing the false echo. It is also possible to have multiple false echoes at equal distances.

False targets (echoes) usually occur as a result of reflections originating from large structures such as other ships, a harbour building, storage tanks or wind farms etc.


Ownship structures can also generate similar reflections. These reflections are normally seen as a large arc on the radar screen. Adjusting the radar's signal processing control functions may reduce or suppress a reflection, but at the expense of lower target detection performance. Radar systems provide techniques to prevent false targets resulting from previous transmissions (second-time-around echoes). Raymarine Pathfinder Radar has superior processing techniques to reduce these reflections.

Radar operators must make themselves aware of the bearings of obstructions which may produce false echoes.

## Multiple echoes

Multiple echoes can occur when another ship or vessel is passing on a parallel course at short range. The radar signal will be reflected back and forth between the actual target and ownship, resulting in multiple echoes being displayed beyond the range of the actual target. Multiple echoes always occur on the same bearing as the actual target and at exact multiples of the actual target's range.


The false echoes become weaker as the amount of energy reflected diminishes with each return. Multiple echoes can be reduced and often removed by decreasing the *[Gain]*(sensitivity) or adjusting the *[Sea]* anti clutter control.

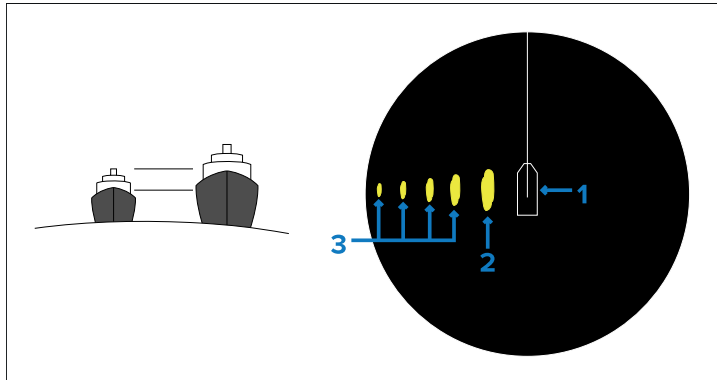

1. Ownship.
2. Actual target.
3. Multiple echoes.

## Side lobe echoes


Side lobe patterns are produced by small amounts of energy from the radar beam which are radiated outside of the narrow main beam. The effects of side lobes are most noticeable with larger targets at short ranges (normally below 3 NM). Side lobe echoes form either arcs on the radar screen, or a series of echoes on either side of the actual target, forming a broken arc. The appearance of side lobe echoes can be reduced using the *[Gain]* and / or *[Sea]* anti-clutter controls.

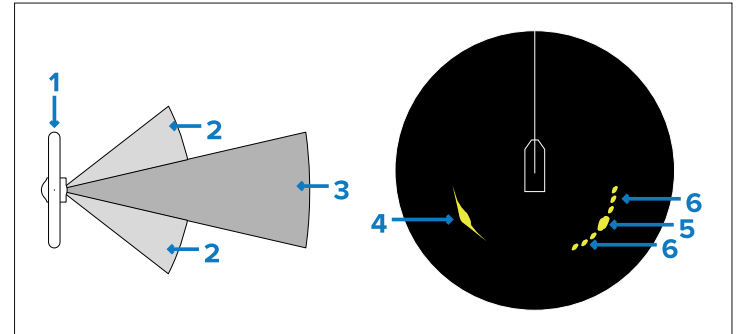

1. Radar antenna.
2. Side lobes.
3. Main lobe.
4. Arc.
5. Actual target.
6. Side echoes.

## Inconsistent echoes

In built up areas and in narrow congested waters the radar beam may be reflected along a number of paths, producing confusing spurious echoes on the radar screen. Inconsistent echoes may not always appear in the same location and may not correlate. Adjusting the *[Gain]* control can minimize inconsistent echoes.

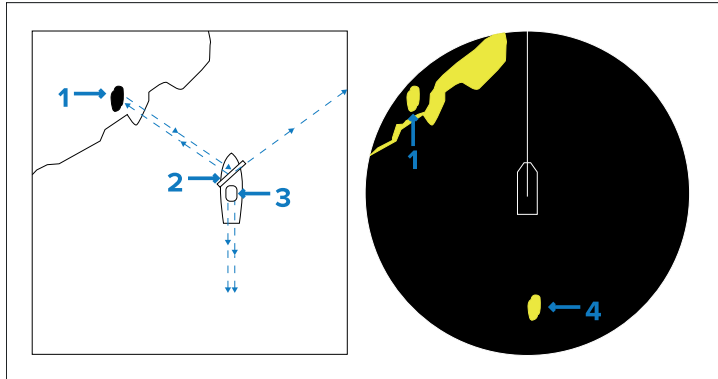


1. Actual object.
2. Radar antenna.
3. Funnel.
4. Inconsistent echo.

## Ghost echoes

Ghost echoes can occur when the radar beam is reflected off of an obstruction, like a ship passing between the antenna and the actual target. This can cause a ghost echo of the actual target to appear on the bearing to which the antenna is pointing. The ghost echo will behave in the same manner as the actual target. However, because the antenna is not directed at the actual target, the returns from the ghost target will be weaker than those of the actual target. The range of the ghost echo will be the same as the range of the actual target. The ghost echo will appear on the radar screen at the same radius as the actual target. The VRM facility can be used to confirm this. However, there is no way of determining if the target is a ghost echo or the actual target.

Other types of ghost echoes include echoes of groups of targets (which appear to be real). When in the vicinity of land masses, these may be from large inland objects and may be caused by a combination of atmospheric conditions, unusual propagation conditions, and reflection.

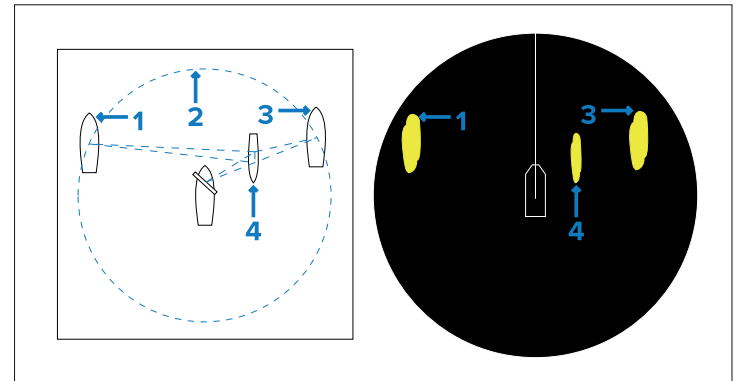

1. Actual target.
2. Common radius.
3. Ghost target.
4. Passing ship or other obstruction.

## Virtual image


A large target close to ownship may be represented at two positions on the screen. One of them is the actual echo directly reflected by the target, and the other is a false echo which is caused by the

mirror effect of a large object on or close to ownship. For example, if ownship comes close to a large metal bridge, a false echo may temporarily be seen on the radar screen.

## Target smearing

Where obstructions occur in close proximity to the antenna, the radar beam may be dispersed causing target smearing to occur.

Target smearing is indicated by a number of weaker echoes appearing around a stronger target echo on the radar screen. When the antenna points directly at the target, the returns are at their strongest, and these form the thickest part of the arc-shaped pattern on the screen.

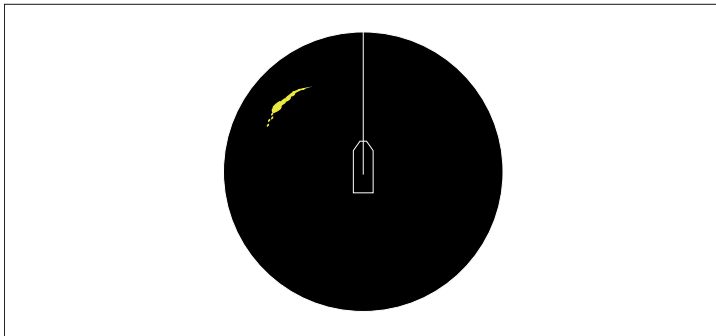


## Multi-path interference

The radar beam can reflect back directly from the target or from a sea surface reflection of the target. When this multi-path interference occurs, the two signals will either reinforce one other or cancel each other out, creating a null.

Multi-path interference usually occurs on simple targets (comprising a single reflector) such as buoys, in calm sea states where the water is acting like a mirror. Multi-path interference may produce a large number of signal nulls at short range that become less frequent as range increases.

In higher sea states, when the sea is rough and the water is less likely to reflect, or when the target is complex (comprising a number of reflectors), the effect of multi-path interference is less pronounced, so the nulls are less deep. As the height of the radar antenna (or target) increases, the frequency of the nulls also increases. The frequency of the nulls also increments with increasing radar frequency.

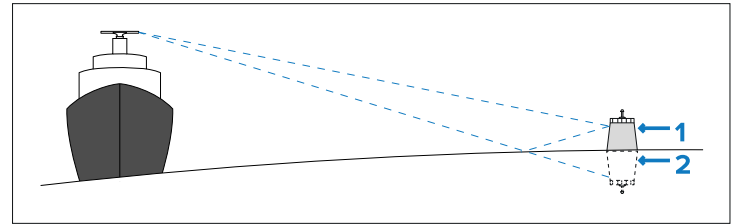

1. Actual target.
2. Reflection.

## Radar interference

Interference from other radar scanners operating in the area is shown on the screen as irregular, curved, spoke-like patterns extending from the center to the edge of the radar image.

If interference is present, use the *[Interference Rejection]* control in the *[Radar Sensor]* menu to suppress the interference.


The higher the *[Interference Rejection]* level, the more interference suppression is used.

## Atmospheric conditions

Radar signals can be adversely impacted by poor atmospheric conditions.

The radar beam normally travels in a straight line; however, certain atmospheric conditions may cause the beam to bend upwards or downwards. The effect of this condition is known as *anomalous propagation*.

## Anomalous propagation

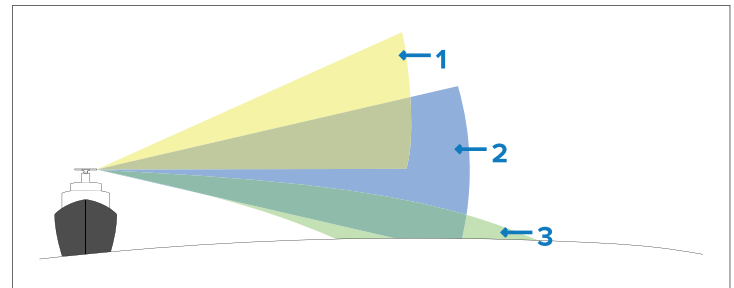

1. **Sub-refraction** — Sub-refraction occurs under unstable atmospheric conditions and causes the radar beam to bend upwards. Sub-refraction causes the radar beam to overshoot distant targets that would have been detected in standard atmospheric conditions. Sub-refraction results in a reduced operational range of the radar.
2. **Standard refraction** — Standard radar beam refraction occurs under normal atmospheric conditions.
3. **Super-refraction** — Super-refraction occurs under stable atmospheric conditions and causes the radar beam to bend downwards. Super-refraction causes the radar beam to follow the earth's surface and improves the operational range of the radar, enabling detection of targets over the horizon.

### Ducting

Ducting is a special type of super-refraction occurring when the radar beam, which is bent downwards, reflects off the earth's surface back into the atmosphere. In this scenario, the beam is trapped by a layer of dense air which causes the beam to be reflected back to the earth's surface. This action may occur a number of times, allowing targets to be detected over far greater distances than the radar's usual operation range. However, these echoes may return several signals later and are shown at false ranges. Transmission 'jitter' techniques are applied to minimize these false echoes or second-time-round returns.

Examples of atmospheric conditions:

- **Fog and mist** — Fog and mist may cause some signal attenuation, resulting in a small reduction in radar range.
- **Dust storms** — In some locations, dust storms can produce difficult conditions, appearing similar to clutter on screen.
- **Hail, Snow and Ice** — Hail and snow produce effects similar to that of rain clutter. Dense snow has a greater effect than lighter flurries which, owing to the small reflecting surface, have minimal effect. The echoes from ice depend on the form and shape of the ice. In general, the effects produced by various forms of ice are as follows:
  - *Smooth flat ice*: Most of the radar beam is reflected at the angle of incidence, providing little or no return signal. Sometimes an advantage is gained by setting up the controls to obtain sea clutter right up to the edge of the ice. Patches of water in a smooth ice field are often revealed by clutter returns when sufficient wind disturbs the surface of the water.

- *Pack ice*: Strong multiple echoes are obtained from pack ice, producing a pattern on screen similar to excessive sea clutter. The ice left in the wake of a vessel passing through an ice field may be distinguished clearly on the screen.
- *Ice walls*: Strong echo returns are obtained depending on the angle at which the walls are with respect to the sea surface, to scatter the reflected beam.
- *Icebergs*: As the angle of iceberg faces is rarely normal to the surface of the sea, much of the reflected signal from the radar beam does not reach the antenna, providing a weak signal return. Also, the surrounding dense air produces a higher than usual atmospheric attenuation.
- *Growlers*: The detection of growlers by radar is uncertain due to the small surface area above water and the mass that is submerged.

## Reflectors and beacons

### Reflectors

Reflectors are designed to give maximum returns from radar transmissions and may be fitted to buoys to aid navigation, or to sundry features such as dangerous outcrops of rocks, or any hazard that would impair the navigation of a vessel. Small boats may also have reflectors fitted to increase the range at which they can be detected.

#### Note:

Some small buoys have a reduced cross-sectional area when heeling over in high sea states.

### Beacons

Radar beacons (also known as RACONS) produce a specific, coded signal response when the radar transmission interrogates the beacon. The reflected signal then renders echoes precisely on the radar display. This effect can be reduced when using a high Correlation level (RACONS are not normally affected by Interference Rejection).

## Target Detection in clutter conditions

### Gain

The raw radar return signal consists of targets, precipitation sea clutter, and a level of noise generated by the radar system. The *[Gain]* control reduces unwanted radar returns to optimize the radar image.

The manual *[Gain]* control sets the detection threshold for the strength of targets. The gain should be set to a level that eliminates or produces minimal noise, when viewed beyond any sea clutter. The *[Gain]* control may require further adjustment when the range scale changes.

### Sea state

#### Low (calm) sea state

Multi-path signals can either enhance or reduce signal strength, depending on the target range and characteristics. The detection range for targets at optimum Gain, assuming that the targets are not obscured by the horizon, will depend on a target's characteristics and the propagation (ducting) conditions. In some circumstances, ducting will permit visibility of targets at much longer ranges than could normally be expected. A radar antenna physically located in a higher position will normally increase the range of detection, but may deteriorate performance in adverse clutter conditions.

Raymarine's Pathfinder radar transmits multiple pulse lengths, which provides enhanced detection.

#### High (rough) sea state

Rough sea: As sea roughness increases, target detection is less affected by multi-path effects, but more adversely affected by sea clutter. The nature of the signal reflected from a wave is different than the signal reflected from a target. Processing techniques assist in making the target more visible. Clutter signals increase when viewed upwind. Although sea clutter signals can look like actual targets, as most clutter is in the form of sea spikes, they will fail to correlate.

The rapid movement of high speed ships (especially on shorter range scales) may fail to correlate, impacting target detection. Very large waves may also obscure targets, and in these conditions, targets may not be visible to the radar system.

High winds will cause small targets (e.g. buoys and yachts) to heel over, reducing the reflected radar signal and therefore negatively impacting target detection.

### Sea clutter

Radar echoes from breaking waves, sea spray and backscatter appear on the radar screen as clutter. The clutter appears centered around ownship, which reduces performance of short range target detection. These echoes are not repetitive or consistent in position or size. With high winds and extreme conditions, echoes from sea clutter may cause dense background clutter in the shape of an almost solid disc. The *[Sea]* anti-clutter control is used to reduce the clutter, improving the quality of the radar image.

The clutter range is dependent on the radar antenna height and the sea state, although other factors can also influence the extent of the clutter.

The *[Sea]* anti-clutter control helps to improve target detection by reducing the visibility of clutter on the radar screen.

The *[Sea]* anti-clutter control applies maximum attenuation at zero range (ownship), and reduces the attenuation as the range increases.

The *[Sea]* anti-clutter control can be manually adjusted or set to automatic.

### Rain clutter

Precipitation appears on the radar screen as lots of small echoes which continuously change size, intensity and position — this is known as clutter. The clutter can sometimes appear as large hazy areas, depending on the intensity of the rainfall. The clutter reduces the radar's target detection performance.

The level of reduction in target detection performance is dependent on radar antenna characteristics, transmission frequency and pulse length.

A shorter transmission pulse provides better detection.

The *[Rain]* anti-clutter control helps to improve target detection by reducing the impact of precipitation on the radar screen. However, solid targets such as land masses will appear thinner.

When the *[Rain]* anti clutter control is set to *[Auto]*, target detection is optimized and a short pulse for conventional magnetron transmitters is selected to provide best performance.

The Raymarine Pathfinder radar features a high discrimination on all range scales, maintaining a higher detection performance in all rain clutter conditions.

## Appendix B Licensing issuing authorities

The following table lists the relevant issuing authority for licences in each region, along with a link to the relevant website. Many authorities allow you to apply for a license online.

Country & regulatory authority	Website
Argentina (AR): Ente Nacional de Comunicaciones	<a href="http://www.enacom.gob.ar">http://www.enacom.gob.ar</a>
Australia (AU): Australian Communications and Media Authority	<a href="http://www.acma.gov.au/">http://www.acma.gov.au/</a>
Austria (AT): Austrian Regulatory Authority for Broadcasting and Telecommunications	<a href="http://www.rtr.at">http://www.rtr.at</a>
Belgium (BE): Belgian Institute for Postal services and Telecommunications (BIPT)	<a href="http://www.bipt.be">http://www.bipt.be</a>
Brazil (BR): Agencia Nacional de Telecomunicacoes	<a href="http://www.anatel.gov.br">http://www.anatel.gov.br</a>
Bulgaria (BG): Communications Regulation Commission	<a href="http://www.crc.bg">http://www.crc.bg</a>
Canada (CA): Industry Canada	<a href="https://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/home">https://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/home</a>
China (ZH): Ministry of Information Industry	<a href="http://www.mii.gov.cn">http://www.mii.gov.cn</a>
Costa Rica (CR): Superintendencia de Telecomunicaciones	<a href="http://sutel.go.cr">http://sutel.go.cr</a>
Croatia (HR): Croatian Post and Electronic Communications Agency	<a href="http://www.hakom.hr/default.aspx?id=7">http://www.hakom.hr/default.aspx?id=7</a>

Country & regulatory authority	Website
Cyprus (CY): Office of Electronic Communications & Postal Regulation	<a href="http://www.ocecpr.org.cy/nqcontent.cfm?a_id=767&amp;tt=ocecpr&amp;lang=gr">http://www.ocecpr.org.cy/nqcontent.cfm?a_id=767&amp;tt=ocecpr&amp;lang=gr</a>
Czech Republic (CZ): The Czech Telecommunication Office	<a href="http://www.ctu.eu/main.php?pageid=178">http://www.ctu.eu/main.php?pageid=178</a>
Denmark (DK): Danish Energy Agency	<a href="https://ens.dk/en">https://ens.dk/en</a>
Estonia (EE): Estonian Competition Authority	<a href="http://www.konkurentsiamet.ee/?lang=en">http://www.konkurentsiamet.ee/?lang=en</a>
Finland (FI): Finnish Communications Regulatory Authority	<a href="http://www.ficora.fi/en">http://www.ficora.fi/en</a>
France (FR): Autorité de Régulation des Communications Électroniques et des Postes	<a href="http://www.arcep.fr">http://www.arcep.fr</a>
Germany (DE): Bundesnetzagentur	<a href="http://www.bundesnetzagentur.de">http://www.bundesnetzagentur.de</a>
Greece (EL): Hellenic Telecommunications and Post Commission	<a href="http://www.eett.gr/opencms/opencms/EETT_EN/index.html">http://www.eett.gr/opencms/opencms/EETT_EN/index.html</a>
Holland (NL): Autoriteit Consument & Markt	<a href="https://www.acm.nl/nl">https://www.acm.nl/nl</a>
Hong Kong (HK): Office of Communications Authority	<a href="http://www.ofca.gov.hk">http://www.ofca.gov.hk</a>
Hungary (HU): National Media and Infocommunication Authority	<a href="http://www.nmhh.hu">http://www.nmhh.hu</a>
Iceland (IS): Post and Telecom Administration	<a href="http://www.pfs.is/default.aspx?cat_id=101">http://www.pfs.is/default.aspx?cat_id=101</a>

Country & regulatory authority	Website
Indonesia (ID): Indonesian Telecommunications Regulatory Authority	<a href="http://www.brti.or.id">http://www.brti.or.id</a>
Ireland (IE): Commission for Communications Regulation	<a href="http://www.comreg.ie">http://www.comreg.ie</a>
Isle of Man (IM): Communications Commission	<a href="http://www.gov.im/government/boards/cc.xml">http://www.gov.im/government/boards/cc.xml</a>
Italy (IT): Autorità per le Garanzie nelle Comunicazioni	<a href="http://www.agcom.it">http://www.agcom.it</a>
Jamaica (JM): Spectrum Management Authority	<a href="http://www.sma.gov.jm">http://www.sma.gov.jm</a>
Japan (JP): Ministry of Internal Affairs and Communications	<a href="http://www.soumu.go.jp/english/index.html">http://www.soumu.go.jp/english/index.html</a>
Korea, South (KR): Korea Communications Commission	<a href="http://eng.kcc.go.kr">http://eng.kcc.go.kr</a>
Lichtenstein (LI): Office for Communications	<a href="http://www.llv.li/amtstellen/llv-ak-english-page.htm">http://www.llv.li/amtstellen/llv-ak-english-page.htm</a>
Lithuania (LT): Communications Regulatory Authority	<a href="http://www.rtt.lt/en/home.html">http://www.rtt.lt/en/home.html</a>
Luxembourg (LU): Institut luxembourgeois de régulation	<a href="http://www.ilr.public.lu">http://www.ilr.public.lu</a>
Latvia (LV): Elektronisko sakaru direkcija	<a href="https://www.vases.lv/lv/content/juras-sakaru-atlaujas">https://www.vases.lv/lv/content/juras-sakaru-atlaujas</a>
Malaysia (MY): Malaysian Communications and Multimedia Commission	<a href="http://www.mcmc.gov.my">http://www.mcmc.gov.my</a>

Country & regulatory authority	Website
Malta (MT): Malta Communications Authority	<a href="http://www.mca.org.mt">http://www.mca.org.mt</a>
Mexico (MX): Instituto Federal de Telecomunicaciones	<a href="http://www.ift.org.mx">http://www.ift.org.mx</a>
New Zealand (NZ): Commerce Commission of New Zealand	<a href="http://www.comcom.govt.nz">http://www.comcom.govt.nz</a>
Norway (NO): Norwegian Communications Authority	<a href="http://www.nkom.no">http://www.nkom.no</a>
Panama (PA): Autoridad Nacional de los Servicios Públicos	<a href="http://www.asep.gob.pa/default.asp">http://www.asep.gob.pa/default.asp</a>
Poland (PL): Prezes Urzędu Komunikacji Elektronicznej	<a href="http://www.uke.gov.pl">http://www.uke.gov.pl</a>
Portugal (PT): Autoridade Nacional de Comunicações	<a href="https://www.anacom.pt">https://www.anacom.pt</a>
Romania (RO): National Authority for Management and Regulation in Communications of Romania	<a href="http://www.ancom.org.ro/en">http://www.ancom.org.ro/en</a>
Russia (RU): Ministry of Telecom and Mass Communications of the Russian Federation	<a href="https://minsvyaz.ru/en">https://minsvyaz.ru/en</a>
Saudi Arabia (SA): Communications and Information Technology Commission (Saudi Arabia)	<a href="http://www.citc.gov.sa">http://www.citc.gov.sa</a>

Country & regulatory authority	Website
Singapore (SG): Info-communications Media Development Authority of Singapore	<a href="https://www.imda.gov.sg">https://www.imda.gov.sg</a>
Slovenia (SI): Agency for communication networks and services of the Republic of Slovenia	<a href="http://www.akos-rs.si/akos-ang">http://www.akos-rs.si/akos-ang</a>
Slovakia (SK): Telecommunications Regulatory Authority of the Slovak Republic	<a href="http://www.teleoff.gov.sk/index.php?ID=9">http://www.teleoff.gov.sk / index.php?ID=9</a>
South Africa (ZA): Independent Communications Authority of South Africa	<a href="http://www.icasa.org.za">http://www.icasa.org.za</a>
Spain (ES): Comisión Nacional de los Mercados y la Competencia	<a href="https://www.cnmc.es/en">https://www.cnmc.es/en</a>
Sweden (SE): Swedish Post and Telecom Authority	<a href="http://www.pts.se">http://www.pts.se</a>
Switzerland (CH): Office fédéral de la communication	<a href="http://www.bakom.admin.ch/themen/frequenzen/00689/01563/index.html?lang=fr">http://www.bakom.admin.ch/ themen/frequenzen/00689/ 01563/index.html?lang=fr</a>
Taiwan (TW): National Communications Commission	<a href="http://www.ncc.gov.tw/english/index.aspx">http://www.ncc.gov.tw/english/ index.aspx</a>
Thailand (TH): National Broadcasting and Telecommunications Commission	<a href="http://nbt.go.th/wps/portal/NTC/eng">http://nbt.go.th/wps/portal/ NTC/eng</a>
Turkey (TR): Information And Communication Technologies Authority	<a href="http://eng.btk.gov.tr">http://eng.btk.gov.tr</a>

Country & regulatory authority	Website
United Arab Emirates (AE): Telecommunications Regulatory Authority	<a href="http://www.tra.ae">http://www.tra.ae</a>
United Kingdom and Northern Ireland (UK (NI)): OFCOM	<a href="http://www.ofcom.org.uk">http://www.ofcom.org.uk</a>
United States (US): FCC	<a href="https://www.fcc.gov/bureau-divisions/mobility-division/ship-radio-stations#block-menu-block-4">https://www.fcc.gov/bureau- divisions/mobility-division/ship- radio-stations#block-menu- block-4</a>

## Appendix C Ethernet (IPv4) networking of Raymarine devices with third-party products

Raymarine uses a custom Ethernet (IPv4) networking configuration. Use the following information to help you understand how Raymarine's Ethernet (IPv4) implementation interacts with third-party Ethernet (IPv4) devices on your vessel, such as routers, switches, Access Points (APs) etc.

### Important:

- Third-party networking products such as routers, switches, and Access Points (APs) *may* work when connected to Raymarine networks, when configured correctly. However, correct operation is not guaranteed. It's important to refer to the instructions provided by the relevant third-party device manufacturer, to ensure that your intended use of a third-party device is consistent with the device's design intent.
- Raymarine does not warrant that Raymarine products are compatible with products manufactured by any person or entity other than Raymarine.
- When using third-party products in your Raymarine electronics network, you should be aware of, and understand, the concepts and limitations described in the following Disclaimer: [p.10 — Disclaimer](#)

### Overview

- Ethernet (IPv4) networking is a method for interconnecting multiple electronic devices, allowing many devices to function in a network and share data using only a single RJ45 or RayNet connection for each device.
- In order to function correctly, every Ethernet (IPv4) device (whether Raymarine or third-party) must have a unique IP address allocated to it, and it must not conflict with that of any other device.
- IPv4 addresses can be centrally-allocated to devices either **automatically**, using a method known as *DHCP* (Dynamic Host Configuration Protocol), or **manually** (i.e. allocated a static IP address). The most common method for allocating IPv4 addresses on vessel electronics networks is *DHCP*. In this configuration, the *server* device is known as a *DHCP server*.

Client / Server device	Example(s)
Raymarine IPv4 DHCP <b>client</b>	<ul style="list-style-type: none"><li>• Radar scanner (e.g. Quantum-Series)</li><li>• Sonar module (e.g. CP470)</li><li>• IP camera (e.g. CAM300)</li></ul>
Raymarine IPv4 DHCP <b>server</b> and self-addressing device	<ul style="list-style-type: none"><li>• Chartplotter (MFD), running LightHouse 3 or LightHouse 4 (e.g. Axiom-Series)</li><li>• Marine Router (e.g. YachtSense Link)</li></ul>
Third-party IPv4 DHCP <b>client</b>	IP camera
Third-party IPv4 DHCP <b>server</b>	<ul style="list-style-type: none"><li>• Router</li><li>• Switch</li><li>• Access Point (AP)</li></ul>

### Note:

The DHCP server maintains a pool of IP addresses and “leases” an address to any DHCP-enabled client, when the client device first powers up and announces its presence on the network. Because the IP addresses are dynamic (leased) rather than static (permanently assigned), addresses no longer in use are automatically returned to the DHCP server's pool, for subsequent reallocation.

It's also possible to have multiple DHCP servers issuing addresses on an IPv4 network, but to avoid addressing conflicts, all DHCP servers must be carefully configured to only allocate IP addresses in distinct address ranges. The *subnet mask* must also be carefully configured, to ensure that devices can correctly communicate with one another.

### Implementation

- Raymarine Ethernet (IPv4) devices expect to use a private **Raymarine IPv4 network**, which is designed to be internal to the vessel only. Raymarine has carefully chosen a specific IP address range (**198.18.0.0/21**) to ensure that it does not interfere with

any external IP address ranges, or other legacy and real-world addressing constraints (including but not limited to marina Wi-Fi networks).

**Note:**

Raymarine's IP address range is for **local traffic** within the **vessel's private Raymarine network only**, and does NOT traverse across Raymarine products to external networks, or to the Internet.

- In a Raymarine Ethernet (IPv4) network, IP addresses are self-allocated by certain Raymarine equipment in the following range: **198.18.0.32 to 198.18.3.255** (inclusive). **You must avoid placing any devices in this range using manual (static) IP addresses.**
- Whether your network includes only Raymarine Ethernet (IP) devices, or a mixture of Raymarine and third-party Ethernet (IPv4) devices, you have 3 options for configuring the Ethernet (IPv4) network and managing the IP addresses for your devices:
  1. Use a Raymarine device as the sole DHCP server to allocate IP addresses automatically to all Raymarine and third-party Ethernet (IPv4) devices on the network. **For the purposes of simplicity and reliability, this is the recommended option for most vessels.** The following Raymarine devices can act as DHCP servers:
    - a. **Raymarine chartplotter (MFD)**, running LightHouse 3 or LightHouse 4; or
    - b. **Raymarine YachtSense Link router**

**Note:**

If both a Raymarine chartplotter (MFD) **and** YachtSense Link router are present in the same network, the YachtSense Link router **MUST** be configured as the DHCP server for that network. To facilitate this, the Raymarine chartplotter's (MFD's) DHCP setting defaults to *Automatic* as standard. On power up, if the YachtSense Link router is detected on the Ethernet network, any chartplotters (MFDs) in the network will disable their own *DHCP Server*, to permit the YachtSense Link router to manage the network's IP addresses. Only Raymarine chartplotters (MFDs) running LightHouse 4 are compatible with the YachtSense Link router. Additionally, the most recent versions of the LightHouse 4 and YachtSense Link software must be used.

2. Use a third-party Ethernet (IPv4) device (such as a router or Access Point) to allocate IP addresses automatically, as a sole *DHCP server*. To do this, refer to the *Configuring a third-party router as DHCP server* section, below.

**Note:**

Any Raymarine LightHouse 3 or LightHouse 4 chartplotters (MFDs) will still self-allocate their own IP address, even if a third-party DHCP server is being used to allocate IP addresses to other Raymarine or non-Raymarine *DHCP client* devices (Camera, Radar, Sonar etc.) on the network.

3. Manually configure static IP addresses for your devices. The address range **198.18.0.32 to 198.18.3.255** (inclusive) is used by Raymarine equipment, and any other third-party equipment on the network should not be set to a static IP address in this range. It should instead be set elsewhere in the 198.18.0.0/21 range.

### **Adding third-party devices to your Raymarine Ethernet (IP) network**

- It is recommended that any third-party products connecting to a Raymarine Ethernet (IPv4) network (e.g., a third-party IP camera) are configured as DHCP clients, so that they automatically get allocated a correct IP address within the range used by the **Raymarine IPv4 network**. If this is not possible, (for example, in the scenario that your third-party IP Camera requires a static IP address), you should configure the product to have a static IP

address within the following range: **198.18.0.1 to 198.18.0.31** (inclusive).

- Any third-party router in your network should be performing IPv4 *Network Address Translation* (NAT) from the private address to another one on an upstream interface.

## Configuring a third-party router as DHCP server

In the scenario that you wish to use a third-party DHCP server to allocate the IP addresses for your vessel's IPv4 network, use the following information to help you configure the third-party DHCP server to work with Raymarine Ethernet (IPv4) client devices:

1. Configure the third-party DHCP server / router to use Raymarine's subnet details, which are as follows:
  - a. Set the DHCP server's IP address to **198.18.0.1**
  - b. Set the *netmask* to /21, i.e. **255.255.248.0**
  - c. Set the DHCP range from **198.18.4.0 to 198.18.7.254** (inclusive). If this is not possible, ensure that the address range is smaller than this (but within the range of **198.18.4.0 to 198.18.7.254** (inclusive)).
  - d. The address range **198.18.0.32 to 198.18.3.255** (inclusive) is used by Raymarine equipment, and therefore you must ensure that any other third-party equipment on the network is NOT set to a static IP address in this range.
2. It may be necessary to set the DHCP setting for **all** of the chartplotters (MFDs) on the vessel to *[Off]*. However, the default option (*[Auto]*) will likely work fine in many cases. If for any reason the third-party DHCP server starts up after the chartplotter (MFD) starts up, the user should manually set the chartplotter's (MFD's) DHCP switch to *[Off]*. This is because, when the chartplotter (MFD) starts up, its DHCP *[Auto]* feature tries to detect if another DHCP server is already present on the network.
3. In case of failure of the third-party device, the chartplotters (MFDs) can be easily configured to be the DHCP server again, by setting the chartplotter's (MFD's) DHCP setting back to *[Auto]*.

## Adding third-party Wi-Fi Access Points / Wi-Fi routers to your Raymarine Ethernet (IPv4) network

- There is a large volume of multicast IPv4 traffic on the Raymarine Ethernet (IPv4) network. Many consumer Wi-Fi Access Points /

Wi-Fi routers simply bridge all multicast traffic from the Ethernet interface to the Wi-Fi interface when there are connected Wi-Fi clients. This will result not only in poor Wi-Fi performance but also in a reduction of usable Wi-Fi spectrum to other Wi-Fi users and vessels in the vicinity. If using a third-party Wi-Fi Access Point or Wi-Fi router, Raymarine recommends that *IGMP Snooping* is enabled on the third-party device, and additional checks are performed, in order to ensure that your device is not bridging any unexpected multicast traffic to its Wi-Fi interface from the Raymarine Ethernet (IPv4) network.

- Raymarine's YachtSense Link router is pre-configured with IGMP Snooping enabled, and therefore does not bridge internal multicast traffic on the wired network to the Wi-Fi network. No additional configuration is required in this respect.



# Index

## A

Accessories.....	75
Network adapter cables.....	78
Network cables.....	76
RayNet cables.....	76
Anomalous propagation.....	85
Antenna	
Mounting.....	44
Applicable products.....	15
ARPA	
Data source requirements.....	19
Atmospheric conditions.....	85

## B

Bearing alignment.....	59
Blind sectors.....	82
Box contents.....	25–26

## C

Cable	
Bend radius.....	34
Protection.....	34–35
Routing.....	34
Security.....	34
Strain relief.....	34
Cable routing.....	36
Base cable exit.....	38
Rear-horizontal cable exit.....	37
Rear-vertical cable exit.....	37
Cabling	
Circuit isolation.....	34
Circuit isolation.....	34
Compass safe distance.....	11
Compatible multifunction displays.....	20
Connecting cables.....	35
Connections	
Overview.....	36, 47
Power.....	52

VCM100.....	53–55
Rear panel.....	38, 47

## D

Declaration of Conformity.....	11
Dust storms.....	86

## E

Electromagnetic Compatibility.....	10
EMC, <i>See</i> Electromagnetic Compatibility	
Ethernet.....	91
Extension	
Radar cable.....	50

## F

False echoes.....	82
Fog and mist.....	86

## G

Ghost echoes.....	84
Grounding	
VCM100.....	55

## H

Hail, Snow and Ice.....	86
-------------------------	----

## I

Inconsistent echoes.....	84
Installation	
Best practice.....	54, 56
Location requirements	
VCM100.....	30

VCM100	
Mounting .....	41
Interference.....	11
<i>See also</i> Compass safe distance	
Interference Rejection .....	85
Interpreting objects.....	81
IP networking.....	91

## L

Licensing	
Issuing authorities.....	88
Requirement.....	12
Location requirements	
VCM100.....	30

## M

Maintenance.....	10
MARPA data source .....	19
MMSI	
Issuing authorities.....	88
Mounting	
Antenna .....	44
Pedestal .....	42
VCM100.....	41
Mounting angle.....	32
Multi-path interference.....	85
Multifunction display	
Compatibility .....	20
Supported radar features.....	20
Multiple echoes.....	83
Multiple radar scanners.....	18
Compatible multifunction displays .....	18

## N

Network	
cables.....	78
Networking (IP)	
Overview .....	91

## O

Operation .....	16, 62
-----------------	--------

## P

Part numbers.....	15
Parts supplied.....	25–26
Pedestal	
Mounting .....	42
Power connection.....	52
Power	
Sharing a breaker .....	53
Power connection.....	52
Power connections	
VCM100.....	53–55
Power converter	
VCM100 .....	21–22, 49
Power troubleshooting.....	64
Product dimensions.....	28
Product documentation	
Applicable documentation .....	15
Related documentation .....	15
Product overview.....	18
VCM100.....	19
Product recycling (WEEE).....	12
Product support .....	68
Product variants .....	15
Protection	
Sailing vessels .....	44

## R

Radar	
Bearing alignment.....	59
Radar cable	
Extension.....	50
Radar features	
Multifunction display compatibility .....	20
Radar interference .....	85
Radar troubleshooting .....	65
Rain clutter.....	87

RayNet .....	91
cables .....	76, 78
Network switch .....	21–22, 49
Rear panel .....	36, 38, 47
Required additional components .....	19
RJ45	
cables .....	78

## S

Sailing vessels	
radar protection .....	44
SeaTalkhs	
cables .....	78
Service Center .....	68
Servicing .....	10
Side lobe echoes .....	83
Software updates .....	23
Spares .....	75
Sub-refraction .....	86
Super-refraction .....	86
Suppression ferrites .....	11, 35
<i>See also</i> EMC	
System checks	
Bearing alignment .....	59
System examples .....	21, 48

## T

Target acquisition	
Data source requirements .....	19
Target smearing .....	85
Technical specification	
Antenna specification .....	72
Conformance specification .....	73
Environmental specification .....	71
Physical specification .....	71
Power specification .....	71
Range .....	72
Receiver specification .....	73
Transmitter specification .....	72
Technical support .....	68

Tools required .....	41
Troubleshooting .....	64
Power .....	64
Radar .....	65
VCM100 .....	66

## U

Upgrading, software .....	23
---------------------------	----

## V

VCM100 .....	21–22, 49
grounding .....	55
VCM100 troubleshooting .....	66
Virtual image .....	84

## W

Warranty .....	12, 68
WEEE Directive .....	12
What's in the box .....	25–26